

# Important Safety Precautions

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.



**Violation of the instructions may cause serious injury or death.**



- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not dispose of your battery by fire or with hazardous or flammable materials.



- Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. There is a risk of this causing a fire.



- Store the battery out of reach of children.
- Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.



- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



## Important Safety Precautions



- When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.



- Do not use a hand-held phone while driving.



- Do not use the phone in areas where its use is prohibited. (For example: aircraft)

- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.

- Never store your phone in temperatures less than  $-4^{\circ}\text{F}$  or greater than  $122^{\circ}\text{F}$ .



- Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.



- Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.



- Do not use your phone in high explosive areas as the phone may generate sparks.

- Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



- Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.



- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



- Do not disassemble the phone.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



- Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



- Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.

- Do not hold or let the antenna come in contact with your body during a call.

- An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.



# Contents

<b>Important Safety Precautions</b> .....	1	<b>Mute Function</b> .....	18	<b>GET IT NOW</b> .....	32
<b>Welcome</b> .....	7	<b>Volume Quick Adjustment</b> .....	19	<b>1. Get Tunes &amp; Tones</b> .....	34
Important Information .....	7	<b>Call Waiting</b> .....	19	1.1 Get New Ringtones* .....	34
FCC RF Exposure Information .....	9	<b>Caller ID</b> .....	19	1.2 My Ringtones .....	34
<b>Phone Overview</b> .....	10	<b>Speed Dialing</b> .....	19	1.3 My Sounds .....	35
The Battery .....	14	<b>Entering and Editing Information</b> ..	20	1.4 My MP3s .....	35
Installing the Battery .....	14	Text Input .....	20	<b>2. Get PIX &amp; FLIX</b> .....	35
Removing the Battery .....	14	Text Input Examples .....	21	2.1 Get V CAST Video* .....	36
Charging the Battery .....	14	<b>Contacts in Your Phone's Memory</b> ..	23	2.2 Get New PIX* .....	37
Battery Charge Level .....	14	Contacts Entries .....	23	2.3 My PIX .....	38
<b>Getting Started with Your Phone</b> ..	14	The Basics of Storing Contacts Entries ..	23	2.4 My FLIX .....	38
Turning the Phone On and Off .....	15	Options to Customize Your Contacts .....	24	2.5 PIX Place* .....	39
Signal Strength .....	15	Editing Contacts Entries .....	26	2.6 Take PIX .....	39
Screen Icons .....	16	Deleting .....	28	2.7 Take FLIX .....	40
Making Calls .....	17	Phone Numbers With Pauses .....	29	<b>3. Get Fun &amp; Games *</b> (* Shown only on the inner LCD Screen.) .....	41
Redialing Calls .....	17	Searching Your Phone's Memory ..	30	<b>4. Get News &amp; Info *</b> (* Shown only on the inner LCD Screen.) .....	41
Receiving Calls .....	17	Making a Call From Your Phone's Memory .....	30	<b>5. Get Going *</b> (* Shown only on the inner LCD Screen.) .....	43
<b>Quick Access to Convenient Features</b> ..	18	<b>Using Phone Menus</b> .....	32	<b>6. Get Extras *</b> (* Shown only on the inner LCD Screen.) .....	43
Manner Mode .....	18	Menu Access .....	32		
Lock Mode .....	18				
Key Guard Mode .....	18				

## MESSAGING ..... 43

- 1. New Msg ..... 44
- 2. Inbox ..... 48
- 3. Sent ..... 50
- 4. Drafts ..... 50
- 5. Voicemail ..... 51
- 6. Wireless Sync Email\* ..... 51
- 7. Mobile Web Email\* ..... 51
- 8. Mobile IM\* ..... 51
- 9. Chat \* ..... 51

## CONTACTS ..... 52

- 1. New Contact ..... 52
- 2. Contact List ..... 52
- 3. Groups ..... 53
- 4. Speed Dials ..... 53
- 5. My Contact Info ..... 53

## RECENT CALLS ..... 54

- 1. Missed ..... 54
- 2. Received ..... 55
- 3. Dialed ..... 55
- 4. All ..... 55
- 5. View Timer ..... 56

## SETTINGS & TOOLS ..... 56

- 1. My Account\* ..... 56
- 2. Tools ..... 56
  - 2.1 Voice Command ..... 57
    - 2.1.1 Start Command ..... 57
    - 2.1.2 Command Mode ..... 57
    - 2.1.3 Announce Alert ..... 57
    - 2.1.4 Train Words ..... 57
    - 2.1.5 Best Match ..... 58
  - 2.2 Calendar\* ..... 58
  - 2.3 Alarm Clock\* ..... 59
  - 2.4 Shortcut Key\* ..... 59
  - 2.5 World Clock\* ..... 60
  - 2.6 Notepad ..... 60
  - 2.7 Calculator\* ..... 60
  - 2.8 Ez Tip Calc\* ..... 60
  - 2.9 Name Card Reader\* ..... 60
- 3. Sounds \* (\* Shown only on the inner LCD Screen.) ..... 61
  - 3.1 Master Volume ..... 62
  - 3.2 Call Sounds ..... 62
    - 3.2.1 Call Ringtone ..... 62
    - 3.2.2 Call Vibrate ..... 62

- 3.3 Alert Sounds ..... 62
- 3.4 Keypad Volume ..... 62
- 3.5 Earpiece Volume ..... 62
- 3.6 Service Alerts ..... 63
- 3.7 Power On/Off Sound ..... 63
- 4. Display \* (\* Shown only on the inner LCD Screen.) ..... 63
  - 4.1 Banner ..... 64
    - 4.1.1 Personal Banner ..... 64
    - 4.1.2 ERI Banner ..... 64
  - 4.2 Backlight ..... 64
  - 4.3 Wallpaper ..... 65
  - 4.4 Display Themes ..... 65
  - 4.5 Fonts ..... 65
  - 4.6 Power On/Off Anim. .... 65
- 5. System \* (\* Shown only on the inner LCD Screen.) ..... 65
  - 5.1 Standalone Mode ..... 65
  - 5.2 Network ..... 66
    - 5.2.1 System Select ..... 66
    - 5.2.2 Set NAM ..... 66
    - 5.2.3 Auto NAM ..... 66
    - 5.2.4 Serving System ..... 66



# Contents

5.3 Device Info .....66	6.6 Auto Volume .....74	Vehicles .....79
5.3.1 My Number .....66	6.7 Ringer ID .....74	Posted Facilities .....79
5.3.2 SW Version .....66	6.8 Picture ID .....74	Aircraft .....79
5.3.3 Icon Glossary .....66	<b>7. Clock Format * (* Shown only on     the inner LCD Screen.) .....74</b>	Blasting Areas .....80
5.4 Manage Memory .....67	<b>8. PC Connection * (* Shown only on     the inner LCD Screen.) .....74</b>	Potentially Explosive Atmosphere ..80
5.4.1 Save Options .....67	<b>9. Bluetooth .....74</b>	For Vehicles Equipped with an Air Bag ..80
5.4.2 Phone Memory .....67	9.1 Paired Devices .....75	<b>Safety Information .....80</b>
5.4.3 Card Memory .....67	9.2 Power .....76	<b>FDA Consumer Update .....82</b>
5.5 Location* .....69	9.3 My Visibility .....76	<b>10 Driver Safety Tips .....87</b>
5.6 Security* .....69	9.4 My Bluetooth Name .....76	<b>Consumer Information on SAR ..88</b>
5.6.1 Lock Phone .....69	9.5 My Bluetooth Info .....76	<b>FCC Hearing-Aid Compatibility (HAC)     Regulations for Wireless Devices ..90</b>
5.6.2 Emergency #s .....70	<b>TIA Safety Information .....78</b>	<b>Accessories .....92</b>
5.6.3 Change Code .....70	Exposure to Radio Frequency Signal 78	<b>LIMITED WARRANTY STATEMENT ....93</b>
5.6.4 Erase Contacts .....70	Antenna Care .....78	
5.6.5 Reset Default .....70	Phone Operation .....78	
5.7 Language .....70	Tips on Efficient Operation .....78	
<b>6. Call Settings * (* Shown only on     the inner LCD Screen.) .....71</b>	Driving .....78	
6.1 Answer Options .....71	Electronic Devices .....79	
6.2 Auto Retry .....71	Pacemakers .....79	
6.3 TTY Mode .....71	Hearing Aids .....79	
6.4 One-Touch Dial .....73	Other Medical Devices .....79	
6.5 Voice Privacy .....73	Health Care Facilities .....79	

Thank you for choosing the advanced and compact The V cellular phone, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this phone offers:

- Large, easy-to-read, 8-line backlight LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 26-key keypad. (52-key keypad when the folder is open.)
- Long battery standby and talk time.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.

### Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

### FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

### Technical Details

The V is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station). The following table lists some major CDMA standards.



# Welcome

\* TSB -74: Protocol between an IS-95A system and ANSI J-STD-008

1xRTT system receives twice as many subscribers in the wireless section as IS-95. Its battery life is twice as long as IS-95. High-speed data transmission is also possible.

EV-DO system is optimized for data service and is much faster than 1xRTT system in applicable area.

CDMA Standard	Designator	Description
Basic Air Interface	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface
Network	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41-C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Nom-signaling data comm.
Service	TIA/EIA/IS-96-B  TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801  TIA/EIA/IS-707-A	Speech CODEC  Short message service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
1x EV-DO  Related interface	TIA/EIA/IS-856  TIA/EIA/IS-878  TIA/EIA/IS-866  TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface  1xEV-DO Inter-Operability Specification for HRPD Access Network Interfaces Recommended Minimum Performance Standards for HRPD High Rate Packet Data Access Terminal Test Application Specification(TAS) for High Rate Packet Data Air Interface



## **FCC RF Exposure Information**

**WARNING! Read this information before operating the phone.**

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

### **Bodily Contact During Operation**

This device was tested for typical use with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain

0.6 inches (1.5 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

### **Vehicle-Mounted External Antenna**

(Optional, if available.)

A minimum separation distance of 8 inches (20 cm) must be maintained between the user / bystander and the vehicle-mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

### **Caution**

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin a minor burn may result. Contact your local dealer for a replacement antenna.

# Phone Overview



1. **Earpiece**
2. **Side Camera Key** Use for quick access to Camera function (Press and hold for about 3 seconds to use camera function on the outside/inside display).
3. **Side Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
4. **Left Soft Key** Use to display the function Message menu.
5. **CLR Key** Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.
6. **SEND Key** Use to place or answer calls.
7. **LCD Screen** Displays messages and indicator icons.
8. **Navigation Keys** Use for quick access to GET IT NOW, Bluetooth, GET PIX & FLIX, MP3s.
9. **Headset Jack**
10. **Right Soft Key** Use for quick access to Contacts.
11. **Voice Command Key** Use for quick access to Voice Command. Use for quick access to New Recording by pressing and holding for about 3 seconds.
12. **END/PWR Key** Use to turn the power on/off and to end a call. Also use to return to the main menu display screen.
13. **MiniSD Memory Card Slot** Accommodates optional miniSD memory cards.
14. **OK Key** Use to accept entered or highlighted information.



1. **Left Soft Key** Use to display the **Message** menu.
2. **Fn** Use to change function.
3. **Shift Key** Use to change letter case when typing.
4. **Sym** Use to insert symbols into text.
5. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
6. **Space/Voice Command Key** Use to enter space while editing. Use for quick access to Voice Command. Use for quick access to New Recording by pressing and holding for about 3 seconds.
7. **Enter Key**
8. **Clear Key / Speakerphone Key** Press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level. Use to turn the Speaker On/Off by pressing and holding for about 3 seconds when the folder is open.
9. **OK Key**
10. **Navigation Keys** Use for quick access to GET PIX & FLIX, Schedule, Mini Browser, GET IT NOW.
11. **SEND,END/PWR Key** Use to turn the power on/off and to end a call. Also use to return to the main menu display screen.
12. **Right Soft Key** Use to select **Contacts** menu.
13. **Speaker**
14. **Microphone**
15. **Close-up shot, Normal/Portrait shot**
16. **Camera Lens**
17. **Flash**



# Menus Overview

\* Shown only on the inner LCD Screen.



## GET IT NOW

1. Get Tunes & Tones
  1. Get New Ringtones\*
  2. My Ringtones
  3. My Sounds
  4. My MP3s
2. Get PIX & FLIX
  1. Get V CAST Video\*
  2. Get New PIX\*
  3. My PIX
  4. My FLIX
  5. PIX Place\*
  6. Take PIX
  7. Take FLIX
3. Get Fun & Games\*
  1. Get New App.
4. Get News & Info\*
5. Get Going\*
  1. Get New App.
6. Get Extras\*
  1. Get New App.



## MESSAGING

1. New Msg
  1. TXT Msg
  2. PIX Msg
  3. FLIX Msg
  4. Email Msg
2. Inbox
3. Sent
4. Drafts
5. Voicemail
6. Wireless Sync Email\*
7. Mobile Web Email\*
8. Mobile IM\*
9. Chat\*



## CONTACTS

1. New Contact
2. Contact List
3. Groups
4. Speed Dials
5. My Contact Info



## RECENT CALLS

1. Missed
2. Received
3. Dialed
4. All
5. View Timer



## SETTINGS & TOOLS

1. My Account\*
2. Tools
  1. Voice Command
    - 1.1. Start Command
    - 1.2. Command Mode
    - 1.3. Announce Alert
    - 1.4. Train Words
    - 1.5. Best Match
  2. Calendar\*
  3. Alarm Clock\*
    - 3.1. Alarm 1
    - 3.2. Alarm 2
    - 3.3. Alarm 3

- 4. Shortcut Key\*
- 5. World Clock\*
- 6. Notepad
- 7. Calculator\*
- 8. Ez Tip Calc\*
- 9. Name Card Reader\*
- 3. Sounds\*
  - 1. Master Volume
  - 2. Call Sounds
    - 2.1. Call Ringtone
    - 2.2. Call Vibrate
  - 3. Alert Sounds
    - 3.1. PIX
    - 3.2. TXT
    - 3.3. Voice
    - 3.4. Email
    - 3.5. Page
  - 4. Keypad Volume
  - 5. Earpiece Volume
  - 6. Service Alerts
    - 6.1. ERI Sounds
    - 6.2. Minute Beep
    - 6.3. Call Connect
    - 6.4. Back To Top
- 7. Power On/Off Sound
- 4. Display\*
  - 1. Banner
    - 1.1. Personal Banner
    - 1.2. ERI Banner
  - 2. Backlight
    - 2.1. Main Screen
    - 2.2. Front Screen
    - 2.3. Keypad
  - 3. Wallpaper
    - 3.1. Main Screen
    - 3.2. Front Screen
  - 4. Display Themes
  - 5. Fonts
  - 6. Power On/Off Anim.
- 5. System\*
  - 1. Standalone Mode
  - 2. Network
    - 2.1. System Select
    - 2.2. Set NAM
- 2.3. Auto NAM
- 2.4. Serving System
- 3. Device Info
  - 3.1. My Number
  - 3.2. SW Version
  - 3.3. Icon Glossary
- 4. Manage Memory
  - 4.1. Save Options
  - 4.2. Phone Memory
  - 4.3. Card Memory
- 5. Location\*
- 6. Security\*
  - 6.1. Lock Phone
  - 6.2. Emergency #s
  - 6.3. Change Code
  - 6.4. Erase Contacts
  - 6.5. Reset Default
- 7. Language
- 6. Call Settings\*
  - 1. Answer Options
  - 2. Auto Retry
  - 3. TTY Mode
  - 4. One-Touch Dial
  - 5. Voice Privacy
- 6. Auto Volume
- 7. Ringer ID
- 8. Picture ID
- 7. Clock Format\*
  - 1. Main Clock
  - 2. Front Clock
- 8. PC Connection\*
- 9. Bluetooth
  - 1. Paired Devices
  - 2. Power
  - 3. My Visibility
  - 4. My Bluetooth Name
  - 5. My Bluetooth Info



# Getting Started with Your Phone

## The Battery

**NOTE** It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

### Installing the Battery

To install the battery, insert the bottom of the battery into the opening on the back of the phone. Push the battery down until the latch clicks.

### Removing the Battery

Turn the power off. Pull the release latch up, hold both ends of the battery and remove it.

## Charging the Battery

To use the charger provided with your phone:

**Warning! Use only the charger provided with the phone. Using any charger other than the one included with The V may damage your phone or battery.**

1. Plug the end of the AC adapter into the phone's charger jack and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level. The maximum charge time for a fully discharged standard battery is 5 hours.

## Battery Charge Level

The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying **LOW BATTERY WARNING!** If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.




Fully Charged

Fully Discharged

## Turning the Phone On and Off

### Turning the Phone On

1. Install a charged battery or connect the phone to an external power source such as a cigarette lighter charger or hands-free car kit.
2. Press  for a few seconds until the LCD screen lights up.

**NOTE** Like any other radio device, avoid any unnecessary contact with the antenna while your phone is on.

### Turning the Phone Off

1. Press and hold  until the display turns off.

## Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon: The more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.



# Getting Started with Your Phone



## Screen Icons

When the phone is powered on, the top line of the LCD screen displays icons indicating the status of the phone.

	In use indicator. A call is in progress. * No icon indicates the phone is in standby mode.			
	Battery indicator. Indicates battery charge level.			
	No service indicator. The phone is not receiving a system signal.			
	Standalone Mode.			
	Roaming indicator. The phone is outside of the home service area.			
	EVDO & Digital.			
	New TXT/PIX message indicator or Browser message.			
	New voice mail indicator.		Bluetooth Audio Device Connected.	
	Speaker phone.			
	Voice Privacy.		Location on mode.	
	E911 only mode.			
	SSL.		TTY.	
	Key Guard mode.		1X.	
	Data Session.		EVDO.	
	Digital.			
	Bluetooth On.		Announce Alert.	
	Shown To All.			
	Vibrate mode.		Alarm Only.	
	Sounds Off.			
	Missed Calls.		Schedule.	
	Alarm On.			



## Making Calls



1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .

If the phone is locked, enter the lock code.


Call Failed - indicates the call did not go through.

4. Press  to end the call.


## Correcting Dialing Mistakes


If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to delete all digits.


## Redialing Calls

1. Press  long to redial the last number you dialed.  
The last 90 numbers are stored in the call history list and you can also select one of these to redial.

## Receiving Calls

1. When the phone rings or vibrates, press  to answer.

**NOTE** If you press Left Soft Key  **[Quiet]** while the phone is ringing, the ringing or vibration is muted for that call.


**NOTE** If you press Right Soft Key  **[Ignore]** while the phone is ringing, the call will end.

2. Press  to end the call.





## Quick Access to Convenient Features


 
### Manner Mode

Use Vibrate Mode in public places. When Vibrate Mode is set,  is displayed on the screen, the key tones are silent, and the phone is set to vibrate.

#### Vibrate Mode Quick Activation

1. From standby mode press  for 3 seconds.  
(Press  for 3 seconds when the flip is open.)

#### Vibrate Mode Quick Cancellation


1. Press  ( when the flip is open.) to switch to Normal Mode.

### Lock Mode

Use Lock Mode to prevent others from using your phone. When Lock Mode is set, your 4-digit password is required to use the phone.

**NOTE** The lock code/password is the last 4 digits of your phone number.

#### Lock Mode Quick Activation




1. From standby mode, press  for 3 seconds.

#### Lock Mode Quick Cancellation


1. Press Right Soft Key  [Unlock] then enter your 4-digit password.

### Key Guard Mode

#### Key Guard Mode Quick Activation

1. Press  **MENU** when the flip is closed.
2. Select **Settings & Tools**  and then Key Guard Timer.
3. Set the timer. Press  long to enter the Key Guard Mode regardless of setting timer.

#### Key Guard Mode Quick Cancellation

1. Press  to cancel the Key Guard Mode when it is set. A confirmation message is displayed.
2. Press Side Keys then the backlight is turned on without a message to make it easier to check time in the key guard mode.

### Mute Function

The Mute function prevents the other party from hearing your voice, but allows you to hear the other party.

#### Mute Quick Activation

1. Press Left Soft Key  [Mute] during a call.

#### Mute Quick Cancellation



1. Press Left Soft Key  again.

## Volume Quick Adjustment

Use the side keys to adjust the earpiece and master volumes. The upper key increases the volume and the lower key decreases the volume.



- Earpiece volume can be adjusted during a call.

**NOTE** Key beep volume is adjusted through the Menu.

**NOTE** When the flip is open, you can press  (lower side key) for 3 seconds to set Sounds Off Mode.  
Press  (upper side key) to switch to Normal Mode.

## Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.

1. Press  to receive a waiting call.
2. Press  again to switch between calls.

## Caller ID

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears on the screen. Check with your service provider to ensure they offer this feature.


## Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily with a few keystrokes. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. Speed Dial number 1 is for Voicemail.

### Dialing Single Digit Speed Dials (from 1 to 9)

Press and hold the Speed Dial number.

OR

Enter the speed dial number and press  .

### Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the last digit.

OR

Enter the first and second digits and press  .



# Entering and Editing Information

## Text Input

You can input and edit your Banner, Schedule, Contacts, and Messages.

### Key Functions



**Left Soft Key** : Press to access and scroll through the following text input modes:

**T9Word / Abc / ABC / 123 / Symbols**



**Shift** : Press to change case.

**T9 text** : T9Word -> T9WORD -> T9word

**Abc text** : Abc -> ABC -> abc



**Next** : In T9 mode, press to display other matching words.



**Space** : Press to complete a word and insert a space.




**Clear** : Press to delete a single space or character. Hold to delete words.



**Punctuation** : In T9 mode, press to insert punctuation in a word and complete a sentence.

### Text Input Modes

There are five modes for entering text, numbers, special characters, and punctuation. In a text entry field, pressing Right Soft Key  displays a pop-up list of text modes.

#### T9Word (T9) Mode

Use to type text using one keystroke per letter. The phone translates keystrokes into common words using the letters on each key and a compressed database.

#### Abc (Multi-tap) Mode

Use to add words to the T9 database.


#### 123 (Numbers) Mode

Use to type numbers using one keystroke per number.

#### Symbols Mode

Use to insert special characters or punctuation. There are 36 special characters including "SP" which inserts a space and "LF" which forces the text to the next line.

## Changing Letter Case

Using T9 and Abc text input modes you can set the capitalization. Press  to access the following:

### Initial Cap (T9Word / Abc)

Only the first letter is capitalized and subsequent letters are lower case.

### Caps Lock (T9WORD / ABC)




All letters are capitalized.

### Lower Case (T9word / abc)







All letters are in lower case.

## Text Input Examples









Display the text modes and select a text mode:

1. In a text entry field, press Left Soft Key  to display text modes.
2. Press  to highlight the text input mode you want to use.
3. Press  to select the highlighted text input mode.







## Using Abc (Multi-tap) Text Input

1. Press Left Soft Key  to change to Abc mode.
2. Press  to change to ABC Caps Lock.
3. Press    . **LG** is displayed.

## Using 123 (Numbers) Text Input

1. Press Left Soft Key  to change to 123 mode.
2. Press       .  
**5551212** is displayed.

## Using Symbol Text Input

1. Press Left Soft Key  to change to Symbols mode.
2. Press Right Soft Key  **[Next]** to view the next 12 symbols or Left Soft Key  **[Prev]** to view the previous 12 symbols.
3. Use  to highlight the special character you want to insert and press  to select it.
4. Press Left Soft Key  to change to another text mode.



# Entering and Editing Information

## Using T9 Mode Text Input

To type the message “Call the office.” follow these steps:

1. Press Left Soft Key to change to T9Word mode.
2. Press .
3. Press to complete the word and add a space.
4. Press .

Call the office. is displayed.

## Using the NEXT Key

Some key combinations will have multiple word possibilities in the T9 database. If the word displayed is not the one you want, press to display additional choices. For example:

1. Press .
2. Press .

Additional choices are displayed each time you press

such as:

Home, Gone, Hood, etc.

## Adding Words to the T9 Database

If a word is not in the T9 database, add it by using Abc (Multi-tap) mode text entry.


1. Press Left Soft Key to change to Abc (Multi-tap) mode.
2. Press .
- Bop** is displayed.
3. Press Left Soft Key to change to T9 Word mode to add the word **Bop** to the T9 database.
4. Press to erase the existing word.
5. Press .
- Cop** is displayed.
6. Press .
- Cor** is displayed.

## Contacts Entries

This allows you to have easy access to your most frequently dialed phone numbers. You may store up to 1000 entries with up to 5 phone numbers each. Each entry may be up to 22 characters. Each phone number may be up to 48 digits.



## The Basics of Storing Contacts Entries

 


1. From standby mode, enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key  [Save].




3. Use  to select **Save New Contact** or **Update Existing Contact** and press .


4. Use  to select a Label and press .

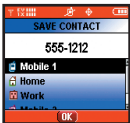

**Mobile1 / Home / Work / Mobile2 / Fax**

 - NOTE** Use **Update Existing Contact** to add another phone number to a contact already stored in memory.

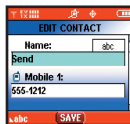


5. Enter a name for the phone number (up to 22 characters) and press .

A confirmation message is displayed briefly.



- NOTE** To skip name entry, press  to go to the next step.

- NOTE** If the information is complete, press  to return to the Main Menu screen.











## Options to Customize Your Contacts

Once the basic phone number and name information is stored in your Contacts, you can edit and/or customize the entries.









### Adding or Changing the Group

Allows you to manage your Contacts entries by organizing them into groups.

1. Press Right Soft Key  **[Contacts]** and use  to highlight an entry.
2. Press Left Soft Key  **[Edit]**.
3. Use  to highlight **Group** and press Left Soft Key  **[Set]**.
4. Use  to select the Group and press  .  
**No Group / Family / Friends / Colleagues / Business / School**
5. Press  to save.

### Changing the Call Ringer









Allows you to identify who is calling by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Press Right Soft Key  **[Contacts]** and use  to highlight an entry.
2. Press Left Soft Key  **[Edit]**.
3. Use  to highlight **Ringtone** and press Left Soft Key  **[Set]**.
4. Use  to select the Ringer Type and press  .
5. Press  to save.











## Changing the Message Ringer

Allows you to identify who is sending you a message by setting different ringers for different phone numbers in your Contacts. It is automatically set to the default ringer when the Contact is saved.

1. Press Right Soft Key  [**Contacts**] and use  to highlight an entry.
2. Press Left Soft Key  [**Edit**].
3. Use  to highlight **Msg Tone** and press Left Soft Key  [**Set**].
4. Use  to select the Ringer Type and press .
5. Press  to save.






## Adding or Changing the Picture ID

Allows the phone to display a picture to identify the caller.

1. Press Right Soft Key  [**Contacts**] and use  to highlight an entry.
2. Press Left Soft Key  [**Edit**].
3. Use  to highlight **Picture** and press Left Soft Key  [**Set**].
4. Use  to select a graphic and press .
5. Press  to save.

## Adding or Changing the Email

Allows you to enter an Email address associated with the Contact entry.

1. Press Right Soft Key  [**Contacts**] and use  to highlight an entry.
2. Press Left Soft Key  [**Edit**].
3. Use  to highlight **Email 1** or **Email 2**.
4. Enter an Email address and press  to save.



# Contacts in Your Phone's Memory

## Adding Speed Dial

Allows you to set Speed Dial designations for phone numbers in your Contacts.

1. Press Right Soft Key [**Contacts**] and use to highlight an entry.
2. Press Left Soft Key [**Edit**].
3. Use to highlight the phone number you want to set with a Speed Dial and press Right Soft Key [**Options**].
4. Press to select **Set Speed Dial** and press .
5. Enter a Speed Dial digit.  
Use the Keypad and press , or use to highlight the Speed Dial digit and press .
6. Press to save.

## Editing Contacts Entries

### Adding Another Phone Number





#### From the Main Menu Screen

1. From standby mode, enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key [**Save**].
3. Use to highlight **Update Existing Contact** and press .
4. Use to highlight the existing Contact entry and press .
5. Use to highlight a Label and press .  
**Home / Work / Mobile 2 / Fax**
6. Press to save.  
A confirmation message is displayed.

## Editing Labels for Contacts

### From the Contacts Screen

1. From standby mode, press Right Soft Key [**Contacts**].  
Your Contacts display alphabetically.



- Use  to highlight the Contact entry you want to edit, then press Left Soft Key  [Edit].
- Use  to highlight a Label, then enter the number and press  to save. A confirmation message is displayed.


### Default Numbers




The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be designated as the Default Number.

**NOTE** The Default Number cannot be deleted by itself. The entire Contact entry can be deleted or another number can be set as the Default Number allowing you to delete the original saved number and keep the Contact entry.






### Changing the Default Number

- From standby mode, press Right Soft Key  [Contacts]. Your Contacts display alphabetically.
- Use  to highlight the Contact entry you want to edit, then press Left Soft Key  [Edit].
- Use  to highlight the phone number you want to





set as the Default Number and press Right Soft Key  [Options].

- Use  to highlight Set As Default .
- Press  to Set the new number as the Default Number.

### Editing Stored Phone Numbers

- From standby mode, press Right Soft Key  [Contacts]. Your Contacts display alphabetically.
- Use  to highlight the Contact entry you want to edit, then press Left Soft Key  [Edit].
- Use  to highlight the phone number.
- Edit the phone number as necessary and press .

### Editing Stored Names







- From standby mode, press Right Soft Key  [Contacts]. Your Contacts display alphabetically.
- Use  to highlight the Contact entry you want to edit, then press Left Soft Key  [Edit].
- Edit the name as necessary and press .









# Contacts in Your Phone's Memory

## Deleting








### Deleting a Phone Number from a Contact

1. Press Right Soft Key  **[Contacts]**.
2. Use  to highlight the Contact entry, then press Left Soft Key  **[Edit]**.
3. Use  to highlight the phone number to be deleted.
4. Press and hold  to delete number.
5. Press  .  
A confirmation message is displayed.

### Deleting a Contact Entry

1. Press Right Soft Key  **[Contacts]**.
2. Use  to highlight the Contact entry to be deleted.
3. Press Right Soft Key  **[Options]**.
4. Press  **Erase**.
5. Use  to highlight **Yes**.
6. Press  .  
A confirmation message is displayed.

### Deleting a Speed Dial

1. From standby mode, press  **[MENU]**.
2. Use  to highlight **Speed Dials**, then press  .
3. Use  to highlight the Speed Dial number.
4. Press Right Soft Key  **[Remove]**.
5. Use  to highlight **Yes**.
6. Press  .  
A confirmation message is displayed.

## Phone Numbers With Pauses

When you call automated systems such as voice mail or credit billing numbers, you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters. There are two different types of pauses you can use when storing a number:





### Wait







The phone stops dialing until you the timer setting has elapsed.

### Pause









The phone stops dialing until the user selects resume.

### Storing a Number with Pauses

1. From standby mode, enter the number.
2. Press Right Soft Key  [Options].
3. Use  to select pause type and press  .  
**Wait / Pause**
4. Enter additional number(s) (e.g., pin number or credit card number) and press  .

5. Press Left Soft Key  [Save].
6. Use  to select **Save New Contact** or **Update Existing Contact** and press  .
7. Use  to select a Label and press  .
8. Enter a name (up to 22 characters) and press  .  
A confirmation message is displayed.

### Adding a Pause to an Existing Number

1. Press Right Soft Key  [Contacts].
2. Use  to highlight the Contact entry to edit, then press Left Soft Key  [Edit].
3. Use  to highlight the number.
4. Press Right Soft Key  [Options].
5. Press  **Wait** or  **Pause**.
6. Enter additional number(s) and press  .  
A confirmation message is displayed.





# Contacts in Your Phone's Memory

## Searching Your Phone's Memory


The V phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit. There are several ways to search:

- Scrolling Alphabetically
- Searching by Letter

### Scrolling Through Your Contacts


1. Press Right Soft Key  **[Contacts]**.  
Contacts list is displayed alphabetically.
2. Use  to scroll through the list.

### Searching by Letter






1. Press Right Soft Key  **[Contacts]**.  
Contacts list is displayed alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.

## Making a Call From Your Phone's Memory





Once you have stored phone numbers into your Contacts, you can place calls to those numbers quickly and easily.

- By pressing  after searching for a phone number in Contacts or Recent Calls.
- Using Speed Dialing.



### From Contacts

1. Press Right Soft Key  **[Contacts]**.
2. Use  to select the Contact entry and press .
3. Use  to select the phone number.
4. Press  to place the call.

## From Recent Calls

1. Press  [MENU].
2. Press  to select **RECENT CALLS**.
3. Use  to select the type of recent call and press .


### **Missed / Received / Dialed / All / View Timer**

4. Use  to highlight the phone number.
5. Press  to place the call.


## Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly and easily (Speed Dial 1 is for Voicemail). Designate Speed Dials in your Contacts to use this calling feature.

### **For Speed Dials From 1 to 9**

1. Press and hold the Speed Dial digit.  
OR  
Press the Speed Dial digit, and then press .
2. Your phone recalls the phone number from your Contacts, displays it briefly, and then dials it.

### **For Speed Dials From 10 to 99**

1. Press the first digit, then press and hold the key of the last digit.  
OR  
Press the first Speed Dial digit, press the second Speed Dial digit, and then press .
2. Your phone recalls the phone number from your Contacts, displays it briefly, and then dials it.



## Menu Access

Press **OK** [MENU] or Left Soft Key **[Message]** to have access to five phone menus. There are two methods of accessing menus and sub-menus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds to the sub-menu.

### For example:

1. Press **OK** [MENU].

Five menu items are displayed.

Use **[Left Arrow]** to scroll through the list of menus.

2. Use **[Down Arrow]** to highlight your preferred setting and press

**OK** to select it.

**NOTE** Press **CLR** to go back one step while accessing the menu or selecting a setting.

**NOTE** Press **CLR** to cancel without saving.

## GET IT NOW

GET IT NOW allows you to do more than just talk on your phone. GET IT NOW is a technology and service that allows you to download and use applications on your phone. With GET IT NOW, it is quick and easy to personalize your phone to your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones to games to productivity tools, you can be assured that you can find something useful, practical, or entertaining.

### Downloading Applications

You can download applications and use GET IT NOW anywhere on the Verizon Wireless network, as long as your handset has a digital signal available. Most applications do not use a network connection while in use.

### Incoming Calls



While downloading an application, incoming calls will automatically be sent to your voice mail, if available. If you do not have voice mail, downloading will not be interrupted by an incoming call, and the caller will receive a busy signal.


**NOTE** In case of EVDO, downloading will be interrupted when there is an incoming call.



 
When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

## Access and Options

1. Open the folder and press  [MENU].
2. Open the folder and press  2 times.

**Shortcut** You can access the GET IT NOW feature directly by pressing  .

3. Options from here :

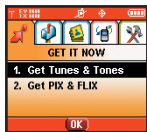

1. **Get Tunes & Tones** : Download and play various ring tones at anytime.
2. **Get PIX & FLIX** : View your digital pictures and video right on your wireless phone. Take and trade pictures with your friends instantly.

**3. Get Fun & Games\*** (\* Available only on the inner LCD Screen.): Turn your phone into a handheld arcade with exciting and challenging games like Tetris, EverQuest®, and EA SPORTS™ Tiger Woods PGA TOUR® Golf.

**4. Get News & Info\*** : Get the latest news, stock quotes, and movie listings on the internet. To start, just launch your phone's Web browser.

**5. Get Going\*** : Everything you need to know while you are on the go. Look for a great restaurant, the nearest ATM, etc.

### 6. Get Extras\*

- Press Right Soft Key  [Info]\* Memory / PIX Memory / Ringtone Memory / View Log / Help

\* Shown only on the inner LCD Screen.



## 1. Get Tunes & Tones

Personalize your phone with ringtones. A large variety of choices are available to choose from current hits, pop, hip-hop, and more.

### Access and Options

1. Open the folder and press [MENU], 2 times.
2. Open the folder and press 2 times.
3. Press **Get Tunes & Tones**.
4. Select a sub-menu.

#### 1. Get New Ringtones

#### 2. My Ringtones

#### 3. My Sounds

#### 4. My MP3s

### 1.1 Get New Ringtones\*\* (\* Shown only on the inner LCD Screen.)

You can download various music files and listen to them in 3D Sound.

1. Open the folder and press [MENU], 2 times, , .
2. Press .



 



## 1.2 My Ringtones

Allows you to select a desired ringtone, download a new ringtone or rename a downloaded ringtone or use Info menu for the downloaded ringtone.

1. Open the folder and press [MENU], 2 times, , .
2. Use to highlight **Ringtone** and press Right Soft Key [Options].
  - **Set As Ringtone** : Press the corresponding number key to set the ringtone for one of the following:  
[1] All Calls / [2] Caller ID / [3] No Caller ID / [4] Restricted
  - **Set As Contact ID** : Press the corresponding number key to set the ringtone for one of the following:  
[1] Ringtone / [2] Msg
  - **Set As Msg Tones** : Press the corresponding number key to set the ringtone for one of the following:  
[1] PIX / [2] TXT / [3] Voice / [4] Email / [5] Page

## 1.3 My Sounds




Allows you to select a desired sound or record a new sound.

1. Open the folder and press **OK [MENU]**,  2 times, , .
2. Use  to highlight sound and press Right Soft Key  **[Options]**.
  - **Send / To PIX Place / Rename / Move / Lock / Erase All / Sound Info**
  -  **Record New:** You can record and save desired sound.

**NOTE** The sounds stored in the card are not supported by the option **Lock**.

## 1.4 My MP3s

Allows you to play music that is saved to the miniSD card.

1. Open the folder and press **OK [MENU]**,  2 times, , .
2. Select the song you would like to play using the navigation key.
3. Press **OK** to play.



**NOTE** The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.


## 2. Get PIX & FLIX

### Quick Access to Get PIX & FLIX Feature

Take, view, and trade your digital pictures and video right from your wireless phone.

### Access and Options

1. Open the folder and press **OK [MENU]**.
2. Press  2 times.
3. Press  **Get PIX & FLIX**.



**ShortCut** Pressing  is a hot key to Get PIX & FLIX.

4. Select a sub-menu.
  1. **Get V CAST Video\***
  2. **Get New PIX\***
  3. **My PIX**
  4. **My FLIX**
  5. **PIX Place\***
  6. **Take PIX**
  7. **Take FLIX**

(\* Shown only on the inner LCD Screen.)








# Using Phone Menus

**NOTE** From standby mode, you can take a picture directly by pressing Camera Key () for about 3 seconds. Also, you can take a video in the Camcorder mode by pressing Camera Key () for about 3 seconds in the Camera mode.




V CAST Video brings the world to your mobile phone with full-motion video and sound. Catch up with what's happening with Video Clips from news, entertainment, sports, or weather.

## 2.1 Get V CAST Video\* (\* Shown only on the inner LCD Screen.)



1. Open the folder and press  [MENU],  2 times,  ,  .
2. Press  to view Video Clip categories including News, Entertainment, Sports and Weather.
3. Select brand and Video Clip you want to view.

### Browsing, Selecting, and Playing Video Clips





1. Open the folder and press  for **GET PIX & FLIX**.
2. Press  for **Get V CAST Video** to open Video Clips Catalog.


3. Press  to view Video Clip categories including News, Entertainment, Sports, and Weather.
4. Select content provider, then press .
5. If applicable, select sub-category, then press .

### ● To view a Streaming Video

1. Read the description of the video clip, and press  to view.
2. Select **Yes** to accept charges, press  and the Video Clip will initiate transfer.
3. The video clip will begin playback shortly after being selected.






### ● To download a Video Clip, if applicable



1. Read the description of the video clip and press Right Soft Key  [Options].
2. Press  for **Save Video**, and press .
3. Select **Yes** to accept charges, press  and the Video Clip will initiate downloading of video.
4. Once video is downloaded a message will appear on your phone, "Download Complete. [Play video now?](#)"

5. Select **Yes** and press  to view video.
6. The Video clip will be automatically saved in my My Clips and the FLIX Gallery.




**NOTE** All videos are not downloadable. Only videos that have the option to save can be downloaded. Additional charges for each video clip viewed may apply. Video Clips service is not available in all areas. Check out [www.verizonwireless.com/getitnow](http://www.verizonwireless.com/getitnow) website for details.

### Deleting Video Clips

1. Open the folder and press  for **GET PIX & FLIX**.
2. Select **My FLIX** and press .
3. Select **Video** to delete.
4. Press Right Soft Key  **Options**.
5. Press  to **Erase Video**.
6. Select **Yes** and press  to erase Video.

**NOTE** Use  for deleting WMV files (VOD contents downloaded by Brew) in contrast to using  for other files.

### Configure Alerts for New Video Clips

1. From Video Clips Catalog, select category of content desired.
2. Select Content Provider.
3. Press Right Soft Key  **Options**.
4. Select **Alerts**.
5. Select **Configure Alerts** and select .
6. Select content for alerts desired and press  to save.

### 2.2 Get New PIX\* (\* Shown only on the inner LCD Screen.)

Allows you to connect to GET IT NOW and download various PIX.

1. Press  **[MENU]**,  2 times, , .
2. Press .



# Using Phone Menus

## 2.3 My PIX

Allows you to view photos that are stored in the phone.

1. Open the folder and press **OK** [MENU], 2 times, , .
2. Select your desired picture with and press Right Soft Key [Options].
3. Select the options to customize.

**Send** Sends the PIX message  
**To PIX Place** Accesses the Online Album, PIX Place

**Get New**

**Set As** **Wallpaper / Picture ID**

**Rename** Renames the selected PIX

**Lock/Unlock** **Lock / Unlock**

**Erase** **Yes / No**

**Erase All** **Yes / No**

**Move**

**PIX Info** Name / Date / Time / Resolution / File Size / File Format

**Zoom View**

## 2.4 My FLIX

Allows you to view Videos that are stored in the phone.

1. Open the folder and press **OK** [MENU], 2 Times, , .
2. Select your desired Video with and press **OK** to play.

: Adjusts the volume.

: Mute / Unmute.

: Pause / Play.

: Changes to Full Screen : Stop

: FF : Rewind

3. Select the options to customize.

WMV files (VOD contents downloaded by Brew)

**Erase** **Yes / No**

**Erase All** **Yes / No**

**Video Info** Title / Description / Copyright / Time / Size / Bit Rate

Other files

**Send** Sends the FLIX message to an email address

**To PIX Place** Accesses the Online Album, PIX Place

Set As Wallpaper	<b>Main Wallpaper / Front Wallpaper</b>
Rename	Renames the selected FLIX
Move	
Lock/Unlock	<b>Lock / Unlock</b>
Erase	<b>Yes / No</b>
Erase All	<b>Yes / No</b>
Video Info	Name / Date / Time / Resolution / File Size

**NOTE** To play Video Messages sent to email, please download Apple's QuickTime 6.5. Go to [www.apple.com/quicktime/download](http://www.apple.com/quicktime/download) to download the free player or upgrade your existing QuickTime Player. During the download process, when asked to choose an installation type (Minimum, Recommended or Custom), select Minimum for a quicker download.

 
## 2.5 PIX Place\* (\* Shown only on the inner LCD Screen.)


Accesses the Online Album, PIX Place.

- Open the folder and press **OK** **[MENU]**, **←** 2 times, **2 abc**, **5 jkl**.

## 2.6 Take PIX

Lets you to take digital pictures.

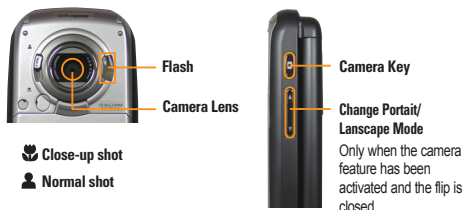

- NOTE**
- Using the camera feature can rapidly deplete a mobile phone battery. If the battery icon shows , recharge the battery.
  - To take a clear picture, set the proper brightness level, zoom, and flash before taking the picture.
  - Avoid jolting the camera.
  - Wipe the camera lens with a soft cloth.
  - Neither disassemble nor try to reassemble the product. It may cause a fire, electric shock or breakdown.
  - Refrain from using the camera flash as much as possible when the battery is low.
  - Keep in mind that a stored file can be deleted or initialized if the camera phone powers off due to low battery while taking a picture.



# Using Phone Menus

1. Open the folder and press **OK** [MENU], 2 times, , .
2. Set the brightness , zoom , flash , and press Right Soft Key [Options] to change other settings.
  - Select the option(s) to customize.

<b>Resolution</b>	1280X960 / 640X480 / 320X240 / 176X144 / 160X120
<b>Self Timer</b>	3 Seconds / 5 Seconds / 10 Seconds
<b>Flash</b>	On / Off
<b>Brightness</b>	EV -5 to +5
<b>White Balance</b>	Auto / Sunny / Cloudy / Fluorescent / Glow / Hold
<b>Shutter Sound</b>	Shutter1 / Shutter2 / No Sound
<b>Color Effects</b>	Normal / Negative / Vivid / Sepia / Black&White
<b>Photometry</b>	Average / Spot
<b>Night Mode</b>	On / Off
<b>LCD Dual Mode</b>	On / Off
<b>Name Card Reader</b>	
3. Take a picture by pressing **OK**.
4. Press Left Soft Key [Save]. The picture is stored in the Gallery.

## 2.7 Take FLIX

Lets you record a video message with sound.

1. Open the folder and press **OK** [MENU], 2 times, , .
2. Set the brightness , zoom or press Right Soft Key [Options] to change other settings.
  - Select the option(s) to customize.





<b>Resolution</b>	320X240 / 176X144
<b>Brightness</b>	EV -5 to +5
<b>White Balance</b>	Auto / Sunny / Cloudy / Fluorescent / Glow / Hold
3. Press **OK** to begin recording, then press again to stop.
4. Press Left Soft Key [Save]. The recorded video is stored in the **My FLIX**.

**NOTE** Recording time can depend on resolution, definition, and other factors.



### 3. Get Fun & Games\* (\* Shown only on the inner LCD Screen.)

Allows you to download games and applications from the GET IT NOW server. Choose the software you want from the list displayed on the screen.

1. Open the folder and press  [MENU],  2 times,  .
2. Press  **Get New App.**

### 4. Get News & Info\* (\* Shown only on the inner LCD Screen.)

Allows you to access news, sports, weather, and email from your Verizon Wireless device. Access and selections within this feature are dependent upon your service provider. For specific information on Get News & Info access through your phone, contact your service provider.

#### Quick Access to News & Info Feature

Get the latest news, stock quotes, and movie listings. With TXT Alerts, you'll always know what you need to know.

1. Open the folder and press  [MENU],  2 times,  .

#### Ending a Browser Session

End a Browser session by pressing  .

#### Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Keys.


- **Links embedded in content**

You can act on the options or the links by using the Soft Keys just below the display screen.


- **Text or numbers**

You can select the items by moving the cursor and pressing the appropriate Soft Keys.

#### Scrolling

Use  to scroll through the content if the current page does not fit on the screen. The currently selected item is indicated by a cursor on the screen.

#### Fast Scrolling

Press and hold  to quickly move the cursor up and down on the current screen.



# Using Phone Menus


## Scrolling by Page

Press the Side Keys to move up and down a page at a time.

## Home Page

To go to the Home Page, press and hold  or .

## View Browser Menu

Press Fn Key (  ) to use the browser menu.

## View Browser Inbox

If there are any browser messages, the list is displayed from newest to oldest.


Your list of Web messages are displayed.

- Go to Inbox in Messaging to view Browser messages.


## Soft Keys

To navigate to different screens or select special functions, use the Soft Keys. The function associated with the Soft Keys can change for each page and depends on each highlighted item.


## Left Soft Key


Left Soft Key  is used primarily for first options or selecting an item but its function may change, depending on the content displayed.

## Right Soft Key



Right Soft Key  is used primarily for secondary options or a menu of secondary options.

## Entering Text, Numbers, or Symbols


When prompted to enter text, the current text entry method appears above the Right Soft Key  as **Alpha**, **Symbol**, **Number**, or **Word**.

To change the input mode, press the Right Soft Key . To input Symbols, press Sym key. then press symbol key. To create an upper case character, use Shift key. The current text method appears above the Right Soft Key as **+ALPHA**, **ABC** or **abc** and allows you to shift input case sensitivity.

## Deleting Text/Number Entered





When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.

## Initiating a Phone Call from the Browser





You can make a phone call from the Browser if the site you are using supports the feature (the phone number may be highlighted and Left Soft Key  appears as **Call**). The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

## 5. Get Going\* (\* Shown only on the inner LCD Screen.)

Everything you need to know while you're on the go.


1. Open the folder and press  **[MENU]**,  2 times, .
2. Press  **Get New App.**

## 6. Get Extras\* (\* Shown only on the inner LCD Screen.)

1. Open the folder and press  **[MENU]**,  2 times, .
2. Press  **Get New App.**

# MESSAGING

 
## Access and Options

1. Press  **[MENU]**.
2. Press  **[MESSAGING]**.
3. Select a sub-menu.

## ShortCut

Pressing Left Soft Key  is a hot key to Message.

## Entering Message menu, Left Soft Key is a hot key to Message Setting.

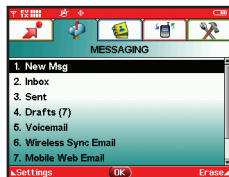

1. **New Msg** : Sends a TXT message, PIX message, FLIX message and Email message.
2. **Inbox** : Shows the list of received messages.
3. **Sent** : Shows the list of sent messages.
4. **Drafts** : Shows the list of draft messages.
5. **Voicemail** : Shows the number of messages in the voicemail box.



# Using Phone Menus

**6. Wireless Sync Email\*** : Read and send e-mails from your e-mail accounts.

**7. Mobile Web Email\***


**8. Mobile IM\*** : Instant message your friends with MSN® Messenger and Yahoo® Messenger.

**9. Chat\*** : Chat with Internet Messenger users.

\* Shown only on the inner LCD Screen.

TXT messages, PIX messages, and the voicemail box become available as soon as the phone is powered on.

● Check types of messages by pressing the message key .


● Make a call to the callback number by pressing  during a message check.

The phone can store up to 386 messages (1 voice message, 50 inbox TXT messages- included Browser messages, 100 inbox PIX messages, 100 inbox PIX notification messages, 50 sent TXT messages, 50 sent PIX messages, 15 draft TXT messages, 20 draft PIX/FLIX messages).

The information stored in the message is determined by phone mode and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

## New Message Alert

There are two ways your phone alerts you to new messages.

1. The phone displays a message on the screen.
2. The message icon () is displayed on the display screen. In the case of an urgent message, the icon will flash and **NEW TXT, PIX, FLIX MESSAGE** is displayed.







 

**NOTE** If you receive the same message twice, your phone deletes the older one and the new one is stored as a DUPLICATE.

## 1. New Msg

Allows you to send text messages, pages, and e-mail. Each message has a destination (Address) and information (Message). These are dependent upon the type of message you want to send.

### 1.1 TXT Msg

#### The Basics of Sending a Message

1. Open the folder and press Left Soft Key , press , .
2. Enter the phone number of the recipient or the e-mail address for an e-mail message. , ,  and  allow you to enter multi address.
3. Press .

**NOTE** To send a page, press  **[SEND]**.

4. Type your message (text or e-mail).

5. Press  [SEND].

A sending screen is displayed.

### Customizing the Message Using Options


1. Create a new message.

2. Press Right Soft Key  [Options].

3. Select the option(s) to customize.

- Editing Address

**Symbols** (Entry Mode\* is available when the flip is closed.)

Add Graphic, Animation, Sound, Quick Text. There are 6 optional menus. Press Right Soft Key  [Options]

**Save As Draft** Saves the message into the Draft folder.

**Priority Level** Gives priority to the message.  
**Normal / High**

**Add To Contacts** Adds the phone number or email address to your Contacts.

\* Available when the flip is closed.

**Callback #** Inserts a pre-programmed callback number with your message.  
**On / Off / Edit**

**Cancel** Cancels message editing and goes to Message menu.

4. Complete and then send or save the message.

- Editing text

**Add** Allows you to add a Graphic, Animation, Sound, Quick Text or Signature.

**Format Text**

**Save As Draft** Saves the message into the Draft folder.

**Priority Level** Gives priority to the message.  
**Normal / High**

**Callback #** Inserts a pre-programmed callback number with your message.  
**On / Off / Edit**

**Save Quick Text**










**Cancel** Cancels message editing and goes to Message menu.



# Using Phone Menus

## Using Contacts to Send a Message

You can designate an entry saved in your Contacts as Address instead of manually entering the destination.





1. Press Left Soft Key , press  **New Msg** .
2. Press Left Soft Key  **[Add]**.
3. Use  to highlight Contacts and press .
4. Use  to highlight the Contact entry containing the destination and press .
5. Press Left Soft Key  **[Done]**.

**NOTE** The Address 1 feature allows multi-sending of up to 10 total addresses.












6. Complete the message as necessary.

## 1.2 PIX Msg


### The Basics of Sending a Message

1. Press Left Soft Key , press , .
2. Enter the cellular phone number or e-mail address of the recipient.
  - Picture phone number for a PIX message.
  - Email address for an e-mail message.
3. Press .

**NOTE** To send a page, press  **[SEND]**.

4. Type your message (text or e-mail).
5. Use  to highlight the **PIX** and Left Soft Key  **[My PIX]**.  
Use  to select the **My PIX**.  
Use  to select the image you want to send, then press .
6. Use  to highlight the **Sounds**, then press Left Soft Key  **[Sounds]**.  
Use  to select the audio file you want to send then press .
7. Use  to highlight Subject and enter the subject.
8. Press  **[SEND]**.  
A confirmation message is displayed.

## Customizing the Message Using Options

1. Create a new message.
2. Press Right Soft Key  [Options].
3. Select the option(s) to customize.



 

### Entry Mode\* (When the flip is closed.)

Preview	Displays the PIX message as it would be seen by the recipient.
Add Quick Text	Inserts predefined phrases.
Save As Draft	Saves the message into the Drafts folder.
Priority Level	Gives priority to the message. <b>Normal / High</b>
Remove PIX	Removes a PIX from your message.
Remove Sound	Removes a Sound from your message.
Save Quick Text	
Add Slide	
Delete Slide	Removes a Slide from your message.
Add To Contacts	Adds the phone number or email address to your Contacts.
Cancel	Cancels message editing and goes to the Message menu.







4. Complete and then send or save the message.

## 1.3 FLIX Msg

### The Basics of Sending a Message

1. Press Left Soft Key , press , .
2. Enter the cellular phone number or e-mail address of the recipient.
  - Picture phone number for a FLIX message.
  - Email address for an e-mail message.
3. Press .


**NOTE** To send a page, press  [SEND].

4. Type your message (text or e-mail).
5. Use  to highlight the **FLIX** and press Left Soft Key  [My FLIX].  
Use  to select the **My FLIX**.  
Select the **My FLIX** and press .
6. Use  to highlight the Subject and enter the subject.
7. Press  [SEND].  
A confirmation message is displayed.



# Using Phone Menus

## Customizing the Message Using Options




1. Create a new message.
2. Press Right Soft Key  [Options].
3. Select the option(s) to customize.

### Entry Mode\* (When the flip is closed.)

Preview	Displays the FLIX message as it would be seen by the recipient.
Save As Draft	Saves the message into the Drafts folder.
Priority Level	Gives priority to the message. <b>Normal / High</b>
Remove FLIX	Removes a FLIX from your message.
Add To Contacts	Adds the phone number or email address to your Contacts.
Cancel	Cancels message editing and goes to the Message menu.

4. Complete and then send or save the message.

## 1.4 Email Msg


1. Open the folder and press Left Soft Key , press  ,  .
2. Enter the cellular phone number or e-mail address of the recipient.

- Email address for an e-mail message.

3. Press  .

## 2. Inbox

The phone alerts you in 3 ways when you receive a new message:

- By displaying a message notification on the screen.
- By sounding a beep or vibrating, if set.
- By blinking  . (only when you get a high priority message)


Received text messages, Browser messages, picture messages, and e-mail lists may be searched and the contents viewed.

Received messages are displayed from newest to oldest.

### Out of Memory Warning



If the memory is full, no more messages can be received until enough memory space becomes available. The message **NOT ENOUGH MEMORY** is displayed and new messages are not accepted.

### Viewing Your Inbox

1. Press  [MENU], ,  .
2. While viewing a message with TTS icon, you can listen to the message by using the Space Key.

















Options from here:

- Left Soft Key  **[Erase]**.
- Right Soft Key  **[Options]**.



- Reply** Replies to the text or picture with the original message attached.
- Forward** Forwards a received message to other destination address(es).
- Lock/Unlock** Locks or unlocks the selected message. Locked messages cannot be deleted by the Erase Inbox and Erase All functions.
- Add To Contacts** Stores the callback number, e-mail address, and numbers from the address included in the received message into your Contacts.
- Message Info** Checks the received message information.





## Message Icon Reference

-  New/Unread TXT Messages
-  Opened/Read TXT Messages
-  Downloaded PIX/FLIX Messages
-  New/Unread PIX/FLIX Notifications

-  Opened/Read PIX/FLIX Notifications
-  Priority
-  New/Unread Browser Messages
-  Opened/Read Browser Messages
-  Locked
-  Multiple Message delivered
-  Multiple Message failed
-  Multiple Message incomplete
-  Multiple Message sent
-  TTS\* playing

### \* Using Text to Speech (TTS)

Text to speech feature will read your text messages (SMS/EMS), notes and wireless sync e-mails out loud when you press the  key. The phone will prompt you when this feature is available by displaying the  icon on the screen.

1. For text messages, press Left Soft Key for Message, select Inbox and press .
2. Select a message and press .
3. Once you see the  icon on the screen, press the  key to have the message read out loud.




# Using Phone Menus

## 3. Sent

Your phone can save up to 100 sent messages. Access the Sent message list to view contents of sent messages and verify whether the transmission was successful or not.

1. Press **OK** [MENU], , **3** .
2. Press Left Soft Key  [Erase].

Press Right Soft Key  [Options].

**Forward** Forwards a sent message to other destination address(es).






**Resend** Allows you to retransmit the selected message.

**Lock/Unlock** Locks or unlocks the selected message. Locked messages cannot be deleted by the Erase Sent and Erase All functions.

**Add To Contacts** Stores the callback number, e-mail address, and numbers from the address included in the sent message into your Contacts.

**Message Info** Checks the sent message information.

## Message Icon Reference

-  Sent PIX/FLIX/TXT Messages
-  Message delivered
-  Sent Failed PIX/FLIX/TXT Messages
-  Incomplete delivery/Pending
-  Priority

## 4. Drafts

Displays draft messages.

1. Press **OK** [MENU], , **4** .
2. Press Left Soft Key  [Erase].

Press Right Soft Key  [Options].

**Send** Allows you to send the selected message.

**Lock/Unlock** Locks or unlocks the selected message. Locked messages cannot be deleted by the Erase Drafts and Erase All functions.

**Add To Contacts** Stores the callback number, e-mail

address, and numbers from the address included in the draft message into your Contacts.

## Message Icon Reference



Draft TXT





Draft PIX/FLIX

## 5. Voicemail

Allows you to view new voice messages recorded in the voicemail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone will alert you.

### Checking Your Voicemail Box


1. Press **OK** [MENU], , **5 jk** .
2. Options from here:
  - Press Left Soft Key  [Clear] to delete information, and then select Clear count.
  - Press **SEND** to listen to the message(s).

## 6. Wireless Sync Email\* (\* Shown only on the inner LCD Screen.)

Allows you to send an Email.

1. Press **OK** [MENU], , **6 mno** .
- Launch Brew application.

## 7. Mobile Web Email\* (\* Shown only on the inner LCD Screen.)

1. Press **OK** [MENU], , **7pqrs** .
- Launch Browser.


## 8. Mobile IM\* (\* Shown only on the inner LCD Screen.)

Allows you to add new applications, as well as send and receive an Instant Message at any time.

1. Press **OK** [MENU], , **8 tuv** .
- GET MOBILE IM

## 9. Chat\* (\* Shown only on the inner LCD Screen.)

Allows you to chat with Internet Messenger users.

1. Press **OK** [MENU], , **9wxyz** .
- Launch Browser.

 
 


## CONTACTS

The Contacts Menu allows you to store names, phone numbers, and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 500).


### Access and Options

1. Press **OK** [MENU].
2. Select a sub-menu.

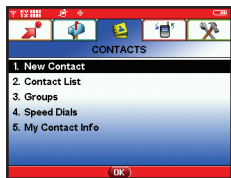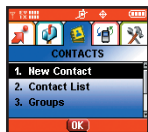

1. New Contact
2. Contact List
3. Groups
4. Speed Dials
5. My Contact Info



### ShortCut

Pressing Right Soft Key  is a hot key to Contacts List.

## 1. New Contact

Allows you to add a new number.





**NOTE** Using this sub-menu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. Press **OK** [MENU], **7** .
2. Enter the name and press .
3. Enter the number and press **OK**.

**NOTE** For more detailed information, see page 28.





## 2. Contact List




Allows you to view your Contacts list.

1. Press **OK** [MENU], **2** .
2. Press  to scroll through your Contacts alphabetically.
  - Press Right Soft Key  [Options] to select one of the following: **New Contact / Erase / Send Message / Send vCard Via Bluetooth / Call**
  - Press Left Soft Key  [Edit] to edit.
  - Press **OK** [VIEW] to view the contact information.

### 3. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a group.

1. Press  **[MENU]**, .
2. Use  to highlight a group to view and press .


 






  - Press Left Soft Key  **[New]** to add a new group to the list.
  - Use  to highlight a group and press Right Soft Key  **[Options]** to change the name of the group or delete the group.

#### Send Message / Rename / Erase / Add

- Press  **[VIEW]** to view the contact information.






### 4. Speed Dials

Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.

1. Press  **[MENU]**, .
  2. Use  to highlight the Speed Dial position, or enter the Speed Dial digit and press .
  3. Use  to highlight the Contact and press .
  4. Use  to highlight the number and press .
- A confirmation message is displayed.

### 5. My Contact Info




Allows you to view all of your personal contact information including name, phone numbers, email address, and notes.

1. Press  **[MENU]**, .
2. Use  to highlight the information you want to enter, then press  **[EDIT]**.
3. Enter your information as necessary, then press .


## RECENT CALLS

The Recent Calls Menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

**NOTE** To view a quick list of all your recent calls, press **SEND** from standby mode.

-  indicates a dialed call.
-  indicates a received call.
-  indicates a missed call.

### Access and Options






1. Press **OK** [**MENU**].
2. Press  [**RECENT CALLS**].
3. Select a sub-menu.



1. Missed
2. Received
3. Dialed
4. All
5. View Timer

### 1. Missed

Allows you to view the list of missed calls; up to 30 entries.



1. Press **OK** [**MENU**], , .
2. Use  to highlight an entry, then
  - Press **OK** to view the entry.
  - Press **SEND** to place a call to the number.
  - Press Right Soft Key  [**Options**] to select **Save / Erase / Erase All / View Timer**
  - Press Left Soft Key  [**Message**] to select **TXT Msg / PIX Msg / FLIX Msg**

## 2. Received

Allows you to view the list of incoming calls; up to 30 entries.

1. Press **OK** [MENU], , **2abc**.

2. Use  to highlight an entry, then

- Press **OK** to view the entry.
- Press **SEND** to place a call to the number.
- Press Right Soft Key  [Options] to select:  
**Save / Erase / Erase All / View Timer**
- Press Left Soft Key  [Message] to select:  
**TXT Msg / PIX Msg / FLIX Msg**



## 3. Dialed

Allows you to view the list of outgoing calls; up to 30 entries.

1. Press **OK** [MENU], , **3<sup>rd</sup>**.

2. Use  to highlight an entry, then

- Press **OK** to view the entry.
- Press **SEND** to place a call to the number.



- Press Right Soft Key  [Options] to select:  
**Save / Erase / Erase All / View Timer**
- Press Left Soft Key  [Message] to select:  
**TXT Msg / PIX Msg / FLIX Msg**

## 4. All

Allows you to view the list of all calls; up to 90 entries.

1. Press **OK** [MENU], , **4<sup>th</sup>**.

2. Use  to highlight an entry, then

- Press **OK** to view the entry.
- Press **SEND** to place a call to the number.
- Press Right Soft Key  [Options] to select:  
**Save / Erase / Erase All / View Timer**
- Press Left Soft Key  [Message] to select:  
**TXT Msg / PIX Msg / FLIX Msg**

**NOTE** To view a quick list of all your recent calls, press **SEND** from standby mode.



## 5. View Timer

Allows you to view the duration of selected calls.


1. Press **OK** [MENU], , **5** .
2. Use  to highlight a call list.

Last Call / All Calls / Received Calls / Dialed Calls / Roaming Calls /  
Transmitted KB / Received KB / Total KB / Last Reset / Lifetime Calls /  
Lifetime KB

## SETTINGS & TOOLS

 
The SETTINGS & TOOLS menu has options to customize your phone.

### Access and Options

1. Press **OK** [MENU].
2. Press  2 times [SETTINGS & TOOLS].
3. Select a sub-menu.



1. My Account\*
2. Tools
3. Sounds\*
4. Display\*
5. System\*

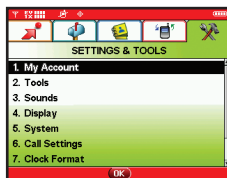

6. Call Settings\*
7. Clock Format\*
8. PC Connection\*
9. Bluetooth

\* Shown only on the inner LCD Screen.

### 1. My Account\*



Supported by only inner LCD Screen and this function is provided by the operator.

**NOTE** Keeguard Timer menu is shown only on external LCD.

### 2. Tools

Your phone tools include a Voice Command, Calendar, Alarm Clock, Shortcut Key, World Clock, Notepad, Calculator, and Ez Tip Calc, and Name Card Reader.

### Access and Options

1. Press **OK** [MENU].
2. Press  2 times [SETTINGS & TOOLS].
3. Press **2**  **Tools**.
4. Select a sub-menu.


Voice Command / Calendar / Alarm Clock / Shortcut Key / World  
Clock / Notepad / Calculator / Ez Tip Calc / Name Card Reader



## 2.1 Voice Command

### 2.1.1 Start Command

Allows you to make phone calls quickly and easily by voice. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. This menu also includes feature for those who are in driving or blind. It delivers time information by voice and allows to check out the missed calls, messages and voice mails.


1. Press **OK [MENU]**,  2 times, **2 abc**, **1 <sup>®</sup> 2<sup>®</sup>**, **1 <sup>®</sup> 2<sup>®</sup>**.
2. When prompted, say “Call Someone”.
3. When prompted, say the name of the Contact you want to call. The phone will ask you to confirm the name before dialing.
4. Also, you can dial any number not to speak of the listed contact. Press the 4,7,10,11 digit numbers continuously.

**NOTE** You can use voice command hot key when the flip is closed.

**NOTE** When you add someone in the contact list, the voice can be automatically perceived without voice tag.

**NOTE** When the language is set to Spanish, there sounds Spanish announcement.


### 2.1.2 Command Mode

1. Press **OK [MENU]**,  2 times, **2 abc**, **1 <sup>®</sup> 2<sup>®</sup>**, **2 abc**.
2. Select **Normal / Speed** then press **OK**.

### 2.1.3 Announce Alert

Allows you to know from whom the call is incoming by ringtone before answering a call.

When the Announce Alert is on, announcement of call from whom sounds. The caller ID and ringtone take turns.

1. Press **OK [MENU]**,  2 times, **2 abc**, **1 <sup>®</sup> 2<sup>®</sup>**, **3 <sup>®</sup> 2<sup>®</sup>**.
2. Select **Disable / Announce / Announce + Ring** then press **OK**.

### 2.1.4 Train Words

Command Train is an optional personalization feature that helps your phone recognize the way you pronounce commands. If you do not get consistently good results with the commands, perform this brief, one-time session.

1. Press **OK [MENU]**,  2 times, **2 abc**, **1 <sup>®</sup> 2<sup>®</sup>**, **4 ghi**.
2. Select **Voice Command / Answer / Digit Dial** then press **OK**.



# Using Phone Menus

## 2.1.5 Best Match

After you say a name or a number, your phone displays the recognition results—the name or number that best matches the one you said—and asks you to confirm. Select the number of results that you want your phone to display.

1. Press [MENU], 2 times, , , .
2. Select **1 Match / 4 Match** then press .
  - **1 Match:** Displays the name or number that best matches the one you said.
  - **4 Match:** Displays the four names or numbers that best match the one you said and asks you if the first one is correct. If you say "Yes," the phone makes the call. If you say "No," the phone suggests the second one in the list, and so on, up to the fourth result.

## 2.2 Calendar\* (\* Shown only on the inner LCD Screen.)

Allows you to keep your agenda convenient and easy to access. Simply store your appointments and your phone will alert you with a reminder of your appointments.

1. Press [MENU], 2 times, , .
2. Use to highlight the scheduled day.

- Moves cursor to the left.
- Moves cursor to the right.
- Moves to the previous week.
- Moves to the next week.

3. Press Left Soft Key [Add].
4. Enter your schedule information including:
  - Subject
  - Set Date
  - Set Time
  - Repeat
  - Alert
5. To Enter your schedule information use to highlight the information field, then press Left Soft Key [Set] to view your choice.
6. Use to highlight a setting, then press .
7. Press [Save] after setting all of the Calendar fields as necessary.

**NOTE** Scheduler will not alert you when transmitting SMS, or when connecting up. After exiting, it will sound the reminder.

### 2.3 Alarm Clock\* (\* Shown only on the inner LCD Screen.)

Allows you to set one of 3 alarms. The current time is displayed below the alarm time to be set. At the alarm time, Alarm 1 (or 2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

1. Press [MENU], 2 times, , .
2. Select the alarm you want to edit and press .  
[1] Alarm 1 / [2] Alarm 2 / [3] Alarm 3
3. Set the Alarm time.
  - Press Left Soft Key [Set].
  - Use to change the hour .
  - Use to move to minutes, then use to change the minute.
  - Use to move to am/pm, then use to toggle between the settings.
  - Press .
4. Set the Repeat occurrence.
  - Press Left Soft Key [Set].
  - Use to select **Once / Daily / Mon - Fri / Weekends**.
  - Press .

5. Set the Ringtone.

- Press Left Soft Key [Set].
- Use to select a ringtone or press to download a new ringtone.

**NOTE** When a ringtone is highlighted, press Left Soft Key [Play] to hear it before selecting it.

- Press .
6. Press [SAVE] to save the alarm settings.

### 2.4 Shortcut Key\* (\* Shown only on the inner LCD Screen.)

Allows you to set a shortcut to Messaging, Recent Calls, Contacts, Tools, Settings, Get Tunes & Tones, My PIX, Get Fun & Games, or Manage Memory using the [MENU].

1. Press , 2 times, , or press .
2. You can assign shortcuts up to 10. Select the numeric index to assign using Navigation Key.
3. Press Left Soft Key [Set] to select the shortcut .
4. Press then the menu is stored as shortcut.



# Using Phone Menus

## 2.5 World Clock\* (\* Shown only on the inner LCD Screen.)

Allows you to determine the current time in another time zone or country.

1. Press **OK** [MENU], 2 times, **2**abc, **5** jkl.

**NOTE** Press Left Soft Key [Set DST], to set the World Clock to daylight savings time.

2. The top of the screen displays the current crosshair location as well as the date and time. Select a new location.

- Use to move the crosshair across the world map and the location, date, and time change accordingly.
- Press Right Soft Key [Cities] to select a specific city. Highlight a city and press **OK**.

## 2.6 Notepad

Allows you to read, add, edit, and erase notes to yourself.

1. Press **OK** [MENU], 2 times, **2**abc, **6**mno.
2. Press Left Soft Key [Add] to write a new note.
3. Enter the text, then press **OK** [SAVE].

Text to speech mode reads the text out loud.

1. After writing the new note press **OK** to start Text to speech mode.
2. Press the Space key to hear the message.

**NOTE** Once you have saved multiple notes, use the search feature to quickly access a specific note.

## 2.7 Calculator\* (\* Shown only on the inner LCD Screen.)

Allows you to perform simple mathematical calculations. You can enter numbers up to the second decimal place.

1. Press **OK** [MENU], 2 times, **2**abc, **7**pqrs.

## 2.8 Ez Tip Calc\* (\* Shown only on the inner LCD Screen.)




Allows you to quickly and easily calculate bill amounts using the bill total, tip, and number of people as variables.


1. Press **OK** [MENU], 2 times, **2**abc, **8**tuv.

## 2.9 Name Card Reader\* (\* Shown only on the inner LCD Screen.)

You can take a picture of a name card using the camera function to directly store and edit the image with information such as name, phone number, mobile phone

number, E-mail address and fax number in Contact.


1. Press **OK** [MENU],  2 times, **2** abc, **9** wxyz.
2. Take a picture of a name card pressing **OK**.
3. Select the information pressing the number key that you want to save.
4. If you select the information that you want, press **OK** [NEXT].
5. Press **OK** [SAVE]. If you save more information, press Left Soft Key  [More] to take a picture again. If you want to edit the information, press Right Soft Key  [Edit].

**NOTE** If you press Left Soft Key  [More], to retake a picture of the same object, the older image is overwritten and the new image is stored instead.

**NOTE** Do not take a full size picture of a name card from a distance (optimum distance is 7 to 8 cm). Take pictures with sufficient lighting as camera sensitivity is reduced in dark places.

**NOTE** You can check and edit stored data in contacts.





**NOTE** To take a clear picture of a name card, set the camera shot as a Close-up shot  and set the camera focus/angle as indicated in the illustrations to the left.

### 3. Sounds\* (\* Shown only on the inner LCD Screen.)

Options to customize the phone's sounds.

#### Access and Options

1. Press **OK** [MENU].
2. Press  2 times [SETTINGS & TOOLS].
3. Press **3**  Sounds.
4. Select a sub-menu.

**Master Volume / Call Sounds / Alert Sounds / Keypad Volume / Earpiece Volume / Service Alerts / Power On/Off Sound**



# Using Phone Menus

## 3.1 Master Volume

Allows you to set volume settings.

1. Press **OK** [MENU], 2 times, , .
2. Adjust the volume with then press **OK** to save the setting.

## 3.2 Call Sounds

Allows you to set ringtones for types of incoming calls.

1. Press **OK** [MENU], 2 times, , .

### 3.2.1 Call Ringtone

1. Press **OK** [MENU], 2 times, , , .
2. Select **Caller ID / No Caller ID / Restrict Calls / All Calls**.
3. Use to select a ringtone then press **OK** to save the sound.

### 3.2.2 Call Vibrate

Allows you to set the phone to vibrate for incoming calls.

1. Press **OK** [MENU], 2 times, , , .
2. Use to select **On / Off** then press **OK** to save.

## 3.3 Alert Sounds

Allows you to select the alert type for a new message.

1. Press **OK** [MENU], 2 times, , .
2. Select **PIX / TXT / Voice / Email / Page**.  
Use to select then press **OK** to save the sound.

## 3.4 Keypad Volume

Allows you to set the keypad volume.

1. Press **OK** [MENU], 2 times, , .
2. Adjust the volume with then press **OK** to save the setting.

## 3.5 Earpiece Volume

Allows you to set the earpiece volume.

1. Press **OK** [MENU], 2 times, , .
2. Adjust the volume with then press **OK** to save the setting.

### 3.6 Service Alerts

Allows you to set any of the five Alert options to either **On** or **Off**.

1. Press  [MENU],  2 times, , .

#### ERI Sounds

Alerts you when service changes.

#### Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

#### Call Connect

Alerts you when the call is connected.







#### Back To Top

Alerts you when you scroll through the end of a menu list.

2. Set **On / Off** with  then press .

### 3.7 Power On/Off Sound


 

Allows you to set the phone to sound a tone when the phone is powered on/off.

1. Press  [MENU],  2 times, , .
2. Set **On / Off** with  then press .

### 4. Display\* (\* Shown only on the inner LCD Screen.)

Options to customize the phone's display screen.

#### Access and Options

1. Press  [MENU].
2. Press  2 times [SETTINGS & TOOLS].
3. Press  **Display**.
4. Select a sub-menu.

**Banner / Backlight / Wallpaper / Display Themes /  
Fonts / Power On/Off Anim.**



# Using Phone Menus

## 4.1 Banner

Allows you to enter a string of up to 23 characters which displays on the LCD screen.

1. Press **OK** [MENU], 2 times, **4** ghi, **1** .

### 4.1.1 Personal Banner

1. Press **OK** [MENU], 2 times, **4** ghi, **1** , **1** .
2. Choose a Banner sub-menu and press **OK** .  
**Main Screen / Front Screen**
3. Enter your banner text then press **OK** .

### 4.1.2 ERI Banner

1. Press **OK** [MENU], 2 times, **4** ghi, **1** , **2** abc .
2. Select **On / Off** with then press **OK** .  
If you use ERI service, ERI text is Shown on the sub banner.

## 4.2 Backlight

Allows you to set the duration for illuminating the backlight. Main Screen, Front Screen, and Keypad are set separately.

1. Press **OK** [MENU], 2 times, **4** ghi, **2** abc .

2. Choose a Backlight sub-menu and press **OK** .

**1** **Main Screen** / **2** abc **Front Screen** / **3** **Keypad**

### **1** **Main Screen**

- **7 Seconds**
- **15 Seconds**
- **30 Seconds**
- **Always On** means that the backlight is always on.
- **Always Off** means that the backlight is never on.

### **2** abc **Front Screen**

- **7 Seconds**
- **15 Seconds**
- **30 Seconds**
- **Always Off** means that the backlight is never on.


### **3** **Keypad**

- **7 Seconds**
- **15 Seconds**
- **30 Seconds**
- **Always On** means that the backlight is always on.
- **Always Off** means that the backlight is never on.



### 4.3 Wallpaper

Allows you to choose the kind of background to be displayed on the phone.

1. Press **OK** [MENU],  2 times, **4 ghl**, **3 g<sup>st</sup>**.
2. Choose a Wallpaper sub-menu and press **OK**.


**Main Screen / Front Screen**

3. Select from different screens then press **OK**.

You can select from **My PIX** or **My FLIX**.

### 4.4 Display Themes

Allows you to choose the color of the background screen.

1. Press **OK** [MENU],  2 times, **4 ghl**, **4 ghl**.
2. Select **Default / Business / Tropical / Blue** then press **OK**.

### 4.5 Fonts

Allows you to set the font size.

1. Press **OK** [MENU],  2 times, **4 ghl**, **5 jkl**.
2. Select **Normal / Large** then press **OK**.

### 4.6 Power On/Off Anim.


Allows you to choose the animation.

1. Press **OK** [MENU],  2 times, **4 ghl**, **6 mno**.
2. Select **Animation 1 / Animation 2** then press **OK**.

### 5. System\* (\* Shown only on the inner LCD Screen.)



The System menu allows you to designate specific system network settings.

#### Access and Options

1. Press **OK** [MENU].
2. Press  2 times [SETTINGS & TOOLS].
3. Press **5 jkl** **System**.
4. Select a sub-menu.

**Standalone Mode / Network / Device Info / Manage Memory / Location / Security / Language**

#### 5.1 Standalone Mode

1. Press **OK** [MENU],  2 times, **5 jkl**, **7 o<sup>st</sup>**.
2. Set **On / Off** with  then press **OK**.




## 5.2 Network

1. Press **OK** [MENU],  2 times, **5 jkl**, **2 abc**.

### 5.2.1 System Select

Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press **OK** [MENU],  2 times, **5 jkl**, **2 abc**, **1 <sup>off</sup>**.
2. Select **Home Only / Automatic** then press **OK**.

### 5.2.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press **OK** [MENU],  2 times, **5 jkl**, **2 abc**, **2 abc**.
2. Select **NAM1 / NAM2** then press **OK**.

### 5.2.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

1. Press **OK** [MENU],  2 times, **5 jkl**, **2 abc**, **3 <sup>off</sup>**.
2. Select **On / Off** then press **OK**.

## 5.2.4 Serving System

Identifies the channel number of a system that is served and a SID Number. This information is only for technical support.

1. Press **OK** [MENU],  2 times, **5 jkl**, **2 abc**, **4 ghi**.

## 5.3 Device Info

1. Press **OK** [MENU],  2 times, **5 jkl**, **3 <sup>off</sup>**.

### 5.3.1 My Number

Allows you to view your phone number.

1. Press **OK** [MENU],  2 times, **5 jkl**, **3 <sup>off</sup>**, **1 <sup>off</sup>**.

### 5.3.2 SW Version

Allows you to view the software, PRL, ERI, Browser, and GET IT NOW version.

1. Press **OK** [MENU],  2 times, **5 jkl**, **3 <sup>off</sup>**, **2 abc**.



### 5.3.3 Icon Glossary

Allows you to view all the icons and their meanings.


1. Press **OK** [MENU],  2 times, **5 jkl**, **3 <sup>off</sup>**, **3 <sup>off</sup>**.

## 5.4 Manage Memory



### 5.4.1 Save Options

1. Press **OK** [MENU],  2 times, **5** jkl, **4** ghi, **1** .
2. Select **PIX / FLIX / Sounds** then press **OK**.
3. Select **Phone Memory / Card Memory** then press **OK**.

### 5.4.2 Phone Memory

1. Press **OK** [MENU],  2 times, **5** jkl, **4** ghi, **2** abc.
2. Select **Memory Usage / My PIX / My FLIX / My Sounds** then press **OK**.

### 5.4.3 Card Memory

1. Press **OK** [MENU],  2 times, **5** jkl, **4** ghi, **3** .
2. Select **Memory Usage / My PIX / My FLIX / My Sounds** then press **OK**.

## Using the miniSD Card

The V can access the following file types stored on the removable miniSD card:

**My PIX:** gif, png, jpg, bmp

**My Sounds:** qcp, mid

**My FLIX:** 3gp, 3g2

### Removable memory storage functionality

The following grids depict what can be transferred to the removable miniSD card.

### RINGTONES

Memory Usage	Ringtone	
Downloaded via GET IT NOW application.	YES	Stored to the phone only.
Saved to a removable miniSD card.	NO	Stored to the phone only.
Saving a sound file to the miniSD card & assigning it as a ring tone.	NO	Only ringtones downloaded via "GET IT NOW" can be assigned.



# Using Phone Menus

## PIX

Memory Usage	PIX	
Pictures received from other users.	YES	Stored to the phone, miniSD Card, and can be copied to the Desktop.
Download via a GET IT NOW application.	YES	Stored to the phone only.
User generated pictures.	YES	Information can be stored to the phone, miniSD Card, and can be copied to the Desktop.
Pictures received from PIX Place.	YES	Stored to phone. Protected content cannot be moved to miniSD Card or Desktop.

## FLIX

Memory Usage	FLIX	
Video Clips received from other users.	YES	Stored to the phone, miniSD Card, and can be copied to the Desktop.
Video Clips downloaded via GET IT NOW.	YES	Stored to the phone only.
Video Clips downloaded via VCAST application.	YES	Stored to the phone only.
User generated video	YES	Stored to phone, miniSD card, and it can be copied to the Desktop.
Video Clips received from PIX Place.	YES	Stored to phone. Protected content cannot be moved to miniSD Card or Desktop.

## Music/MP3

<b>Store to Memory Card</b>	Yes	<b>Note:</b> MP3 files can be played from the memory card.
<b>Store to Phone Memory</b>	No	<b>Note:</b> MP3 files cannot be transferred from the memory card to the phone.

**NOTE** Prior to downloading files from your PC to the miniSD card you must power the phone on, insert the miniSD card into The V's miniSD memory card slot & press the play/stop button.

## 5.5 Location\* (\* Shown only on the inner LCD Screen.)

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press [MENU], 2 times, , .
2. Select **Location On / E911 Only** then press .

**NOTE** GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.

## 5.6 Security\* (\* Shown only on the inner LCD Screen.)

The Security menu allows you to secure the phone electronically.

1. Press [MENU], 2 times, , .

### 5.6.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can receive phone calls and still make emergency calls. You can modify the lock code using the New Lock code within the Security menu.

1. Press [MENU], 2 times, , .
2. Enter the four-digit lock code.  
The lock code/password is the last 4 digits of your phone number.
3. Press **Lock Phone**.
4. Select an option then press .

**Unlock** The phone is never locked (Lock mode can be used).

**Lock** The phone is always locked. When locked, you can receive incoming calls and only make emergency calls.

**On Power Up** The phone is locked when it is turned on.



# Using Phone Menus

## 5.6.2 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press [MENU], 2 times, , .
2. Enter the four-digit lock code.
3. Press **Emergency #s**.
4. Select emergency number using .
5. Enter an emergency phone number then press .

## 5.6.3 Change Code

Allows you to enter a new four-digit lock code.

1. Press [MENU], 2 times, , .
2. Enter the four-digit lock code.
3. Press **Change Code**.
4. For confirmation, it will ask you to enter the new lock code again.

## 5.6.4 Erase Contacts\* (\* Shown only on the inner LCD Screen.)

Allows you to erase all of your Contacts at once.

1. Press [MENU], 2 times, , .
2. Enter the four-digit lock code.
3. Press **Erase Contacts**.
4. Select **Yes** then press .

## 5.6.5 Reset Default

Allows you to reset your phone to the factory default settings.

1. Press [MENU], 2 times, , .
2. Enter the four-digit lock code.
3. Press **Reset Default**.
4. Press , select **Revert** then press .

## 5.7 Language




Allows you to set the bilingual feature according to your preference. Choose between English and Spanish.

1. Press [MENU], 2 times, , .
2. Select **English / Spanish** with then press .

## 6. Call Settings\* (\* Shown only on the inner LCD Screen.)

Allows you to designate how the phone handles both incoming and outgoing calls.




### Access and Options

1. Press  [MENU].
2. Press  2 times [SETTINGS & TOOLS].
3. Press  **Call Settings**.
4. Select a sub-menu.

**Answer Options / Auto Retry /  
TTY Mode /One-Touch Dial /  
Voice Privacy /Auto Volume / Ringer ID /Picture ID**

### 6.1 Answer Options






Allows you to determine how to handle an answered call.

1. Press  [MENU],  2 times, ,  .
2. Select **Flip Open/Send Only / Any Key / Send Only / Auto Answer** then press  .

**NOTE** Auto Answer Mode is operated when the phone is connected to headset or hands-free car kit.






### 6.2 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Press  [MENU],  2 times, ,  .
2. Select **Off / Every 10 Seconds / Every 30 Seconds / Every 60 Seconds** then press  .

### 6.3 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press  [MENU],  2 times, ,  .  
An explanation message is displayed.
2. Press  to continue.
3. Select **TTY Full / TTY + TALK / TTY + HEAR / TTY Off** then press  .



## Using Phone Menus

### TTY mode (Tele Type writer)

TTY modes are as follows :

Menu	User	Feature	Transmission/Receiving Mode	When making communications with a normal terminal
TTY Full	For hearing- /verbally- impaired		text message transmission, text message receiving	operator required
TTY+TALK	For hearing- impaired	talkable	voice transmission, text message receiving	operator required
TTY+HEAR	For verbally- impaired	audible	text message transmission, voice receiving	operator required
TTY Off	For normal users		voice transmission, voice receiving	



### 1. TTY Full :

- Users who cannot talk and hear send and receive a text message through TTY equipment.

### 2. TTY + TALK :

- Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

### 3. TTY + HEAR :

- Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

### 4. TTY Off :

- Normal users send and receive without TTY equipment.

## Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to TTY connection on the terminal.  
(TTY connection location the same as a hand free ear jack)
2. Enter the phone menu and set up the desired TTY mode.  
(For a TTY mode, see the following)
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.

4. Connect the TTY equipment to the power source and turn it on.

5. Make a phone connection to the desired number.

6. When connection is made, use the TTY equipment to type in and send a text message or send voice.

7. The voice or text message from the receiver end displays on the TTY equipment display.

## 6.4 One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press  [MENU],  2 times, ,  .
2. Select **On / Off** then press  .

## 6.5 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Press  [MENU],  2 times, ,  .
2. Select **Enhanced / Standard** then press  .



# Using Phone Menus

## 6.6 Auto Volume

Provides a better audio experience by enabling the Auto Volume feature to control the dynamic range and volume of the sending and receiving voice across different levels of speaker and environments.

1. Press **OK** [MENU], 2 times, **6** mno, **6** mno .
2. Select **On** / **Off** then press **OK** .

## 6.7 Ringer ID

Alerts you with the designated ringer ID, when the phone rings.

1. Press **OK** [MENU], 2 times, **6** mno, **7** pqrs .
2. Select **On** / **Off** then press **OK** .

## 6.8 Picture ID

Shows you the designated picture ID when the phone rings.

1. Press **OK** [MENU], 2 times, **6** mno, **8** tuv .
2. Select **On** / **Off** then press **OK** .

## 7. Clock Format\* (\* Shown only on the inner LCD Screen.)

Allows you to choose the kind of clock to be displayed on the LCD screen.

1. Press **OK** [MENU], 2 times, **7** pqrs .
2. Press **1** 0 **Main Clock** or **2** abc **Front Clock**.
3. Select **Normal** / **Analog** / **Digital** / **Dual** then press **OK** .

**NOTE** When the clock format is set to **Front Clock**, only **Normal** and **Analog** options are available.

## 8. PC Connection\* (\* Shown only on the inner LCD Screen.)

Allows you to select the data port.

1. Press **OK** [MENU], 2 times, **8** tuv .
2. Select **USB** / **RS-232C(COM Port)** / **Bluetooth** / **Closed** then press **OK** .

## 9. Bluetooth

The V features built-in Bluetooth technology, allowing you to share information easier than ever before. Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets, hands-free car kits, and Bluetooth enabled handhelds and PCs. The Bluetooth communication range is usually up to approximately 10 meters (30 feet).

**NOTE** If you want to use the bluetooth function connecting the PC, or PDA should be paired with the phone. If it's not, you cannot use the bluetooth PC connection, even if the Bluetooth port is selected.

**NOTE** Read the user guide of each device (i.e. PC, PDA, or Hands-free car kit) because the usage might be different.

## Access and Options

1. Press  [MENU].
2. Press  2 times [SETTINGS & TOOLS].
3. Press  **Bluetooth**.
4. Select a sub-menu.

**Paired Devices / Power / My Visibility / My Bluetooth Name / My Bluetooth Info**

### 9.1 Paired Devices

Pairing is the registration process that permits the handset to locate and establish a 1-to-1 connection with the target device. Devices that are not paired cannot be connected. To "Pair" the V, enable the pairing mode of the target device (consult the user guide of the target device for directions). Make sure that Bluetooth™ is enabled in the handset and begin "Searching" When

the handset locates the Bluetooth-enabled target device as a result of "Searching" you must register the pass key (PIN code) of the device in the handset. When the registration and "Pairing" are complete, your phone and device can be connected immediately.

### For pairing new Bluetooth device


1. Press  [MENU],  2 times, ,  .  
Set the desired device to pairing.

**NOTE** To pair Bluetooth device with handset, the device is set to be available for pairing (bondable). Regarding "Bondable" setting, refer to the manual of the product.

2. Press Right Soft Key  [New].

**NOTE** Users can store up to 20 Bluetooth devices to the Paired Devices List.

**NOTE** The V will display all devices found within 30 seconds. If Search is pressed within the 30 second duration, the phone will stop searching and display only those devices found up to that time.

3. Among Bluetooth™ devices found, select the desired device to register and press  [PAIR].



# Using Phone Menus

**NOTE** Devices on the list are sorted in alphabetical order.

**NOTE** If the device has an alias already defined, it will be displayed on the list.

4. Enter Passkey then press **OK**.

**NOTE** For more information regarding the Passkey, refer to the device manual.

## For using Bluetooth headset / car kit

1. Pair the desired Bluetooth headset (see For pairing new Bluetooth device).

2. In the Paired Devices menu, highlight the desired device.

**NOTE** When a device is highlighted in the Paired Device menu, the Left Soft Key changes to either Connected or Disconnected, as applicable to the device highlighted.

3. When the Left Soft Key is pressed, the selected device is connected (or disconnected, as applicable).

**NOTE** Some Bluetooth hands-free car kits have a different device class. To connect (or disconnect) these devices, press Right Soft Key [Options], then select Connect As Handsfree.

## 9.2 Power

Allows you to turn Bluetooth on.

1. Press **OK** [MENU],  2 times, **9**WXYZ, **2**abc.
2. Select **On / Off** then press **OK**.

**NOTE** By default, your device's Bluetooth functionality is turned off.

## 9.3 My Visibility


Allows you to configure your visibility to other Bluetooth devices.


1. Press **OK** [MENU],  2 times, **9**WXYZ, **3**def.
2. Select **Hidden / Shown To All** then press **OK**.

**NOTE** Turning 'My Visibility' on makes your device "discoverable" by other in-range Bluetooth devices.

## 9.4 My Bluetooth Name

Allows you to change a Bluetooth name for your device.

1. Press **OK** [MENU],  2 times, **9**WXYZ, **4**ghi.
2. Press **CLR** to clear the existing name.
3. Use the numeric keypad to enter a new custom name.

4. Press  to save and exit.

## 9.5 My Bluetooth Info

Allows you to view the your Bluetooth Name, Power, and Address.

1. Press  [MENU],  2 times, , .

## Transferring sound to Bluetooth device

### Transferring sound to Phone

In case Bluetooth audio device is connected, **Use Bluetooth / Use Phone** is displayed in call state in options menu.

- **Use Bluetooth** Sound comes from phone now. When selecting this menu, sound comes from bluetooth headset.
- **Use Phone** Sound comes from Bluetooth device now. When selecting this menu, sound comes from phone.



## TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

### Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

### Tips on Efficient Operation

For your phone to operate most efficiently:

Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

### Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law so require.

## Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

## Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives). Optional for each phone manufacturer.

## Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

## Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

## Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.



## Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

## For Vehicles Equipped with an Air Bag

An air bag inflates with great force. **DO NOT** place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.



**Violation of the instructions may cause minor or serious damage to the product.**

### Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adaptor for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, this may result in serious damage to your phone.

### Battery Information and Care

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery does not need to be fully discharged before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.



- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, MiniBrowser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.
- Use of non-LG OEM accessories voids the warranty.

### **Explosion, Shock, and Fire Hazards**

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

- Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

### **General Notice**

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.



## Safety

- **WARNING:** The power cord on this product will expose you to lead, a chemical known to the State of California to cause [cancer, and] birth defects or other reproductive harm.  
**Wash hands after handling.**
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (ringtones, text messages, voice messages, pictures, and videos could also be deleted.)  
The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so as not to disturb others.
- Do not turn your phone on or off when putting it in your ear.

## FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency energy (RF) in the microwave range while being used. They also emit very

low levels of RF when in the Main Menu Screen. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones.

Base stations are thus not the subject of the safety questions discussed in this document.

### 3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### 4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day.



These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones.

Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency energy (RF).

The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption

Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques," sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above



to reduce your RF exposure from wireless phone use.

### 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

### 11. What about wireless phone interference with medical equipment?

Radio Frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard

will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

### 12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection  
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project  
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)  
(<http://www.nrpb.org.uk/>)

## 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a “to-do” list while driving a car, you are not watching where you are going. It is common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.



8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website [www.wow-com.com](http://www.wow-com.com)

## *Consumer Information on SAR*

### **(Specific Absorption Rate)**

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves. Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to Radio Frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna,



the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR value for this model phone when tested for use at the ear is 0.855 W/kg and when worn on the body, as described in this user guide, is 0.866 W/kg (body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJThe V. Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>.

- \* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.



### ***FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices***

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you're talking over the cell phone, it's recommended you'd turn the BT mode off for HAC.

### **For information about hearing aids and digital wireless phones**

#### **FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

#### **Gallaudet University, RERC**

<http://tap.gallaudet.edu/DigWireless.KS/DigWireless.htm>

#### **Self Help for Hard of Hearing People Inc. [SHHH]**

[www.hearingloss.org/hat/TipsWirelessPhone.htm](http://www.hearingloss.org/hat/TipsWirelessPhone.htm)

#### **The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)



## Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability.



### Adapter

The adapter allows you to charge the battery while away from your home or office. It supports standard U.S. AC120 Volt 60 Hz outlets. It takes 5 hours to charge a completely discharged standard battery.



### Battery

Two types of battery are available; The standard battery and the extended battery.



### Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle. It takes 5 hours to charge a completely discharged standard battery.



### Hands-Free Car Kit (Portable)

The hands-free car kit enables you to attach the phone to the power jack in your car, providing you with hands-free operation. It can charge a completely discharged battery in 5 hours.



### Stereo Headset

The headset connects to your phone allowing hands-free operation. It includes earpiece and microphone.

**NOTE** It operates in vibration/no sound mode on Manner Mode/Silence All Mode even when connected to a headset.



### USB Cable

Connects your phone to your PC.



### Mobile Charger

This stylish, compact Mobile Charger allows you to have anytime, anywhere communication.

1700 mAh Li-Ion Rechargeable Built-in Battery  
LED Indicator.

Use with LG Mobile Charger or VPC.

## **1. WHAT THIS WARRANTY COVERS:**

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.

(6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## **2. WHAT THIS WARRANTY DOES NOT COVER:**

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.



## LIMITED WARRANTY STATEMENT

- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### **3. STATE LAW RIGHTS:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LGE MOBILECOMM USA INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### **4. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets  
P.O. Box 240007, Huntsville, AL 35824

**DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.** Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

10 Driver Safety Tips 87

## A

Accessories 92  
Alarm Clock\* 59  
Alert Sounds 62  
All 55  
Answer Options 71  
Auto Retry 71  
Auto Volume 74

## B

Backlight 64  
Banner 63  
Bluetooth 74

## C

Calculator\* 60  
Calendar\* 58  
Call Settings\* 71  
Call Sounds 62  
Call Waiting 19  
Caller ID 19  
Chat\* 51  
Clock Format\* 74  
Consumer Information on SAR 88

Contact List 52  
CONTACTS 52  
Contacts in Your Phone's Memory 23, 24  
Contents 4

## D

Deleting 28  
Device Info 66  
Dialed 55  
Display\* 63  
Display Themes 65  
Drafts 50

## E

Earpiece Volume 62  
Editing Contacts Entries 26  
Editing Labels for Contacts 26  
Entering and Editing Information 20  
Ez Tip Calc\* 60

## F

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 90

FDA Consumer Update 82  
FLIX Msg 47  
Fonts 65

## G

Get Extras\* 43  
Get Fun & Games\* 41  
Get Going\* 43  
GET IT NOW 32  
Get New PIX\* 37  
Get New Ringtones\* 34  
Get News & Info\* 41  
Get PIX & FLIX 35  
Get Tunes & Tones 34  
Get V CAST Video\* 36  
Getting Started with Your Phone 14  
Groups 53

## I

Important Safety Precautions 1  
Inbox 48  
Index 95

## K

Key Guard Mode 18  
Keypad Volume 62

## L

Language 70  
LIMITED WARRANTY STATEMENT 93  
Location\* 69  
Lock Mode 18

## M

Making a Call From Your Phone's Memory 30  
Manage Memory 67  
Manner Mode 18  
Master Volume 62  
Menu Access 32  
Menus Overview 12  
MESSAGING 43  
Missed 54  
Mobile IM\* 51  
Mobile Web Email\* 51  
Mute Function 18  
My Account\* 56  
My Bluetooth Info 77  
My Bluetooth Name 76



# Index

My Contact Info 53  
My FLIX 38  
My PIX 38  
My Ringtones 34  
My Sounds 35  
My Visibility 76

## N

Name Card Reader\* 60  
Network 66  
New Contact 52  
New Msg 44  
Notepad 60

## O

One-Touch Dial 73  
Options to Customize Your  
Contacts 24

## P

Paired Devices 75  
PC Connection\* 74  
Phone Numbers With  
Pauses 29  
Phone Overview 10  
Picture ID 74  
PIX Msg 46

PIX Place\* 39  
Power 76  
Power On/Off Anim. 65  
Power On/Off Sound 63

## Q

Quick Access to Convenient  
Features 18

## R

Received 55  
RECENT CALLS 54  
Ringer ID 74

## S

Safety 78  
Safety Information 80  
Screen Icons 16  
Searching Your Phone's  
Memory 30  
Security\* 69  
Sent 50  
Service Alerts 63  
SETTINGS & TOOLS 56  
Shortcut Key\* 59  
Sounds\* 61  
Speed Dialing 19

Speed Dials 53  
Standalone Mode 65  
System\* 65

## T

Take FLIX 40  
Take PIX 39  
Text Input 20  
Text Input Examples 21  
The Basics of Storing  
Contacts Entries 23  
TIA Safety Information 78  
Tools 56  
Transferring sound to  
Bluetooth device 75  
TTY Mode 71  
TXT Msg 44

## U

Using Phone Menus 32

## V

View Timer 56  
Voice Command 57  
Voice Privacy 73  
Voicemail 51  
Volume Quick Adjustment 19

## W

Wallpaper 65  
Welcome 7  
Wireless Sync Email\* 51  
World Clock\* 60