 
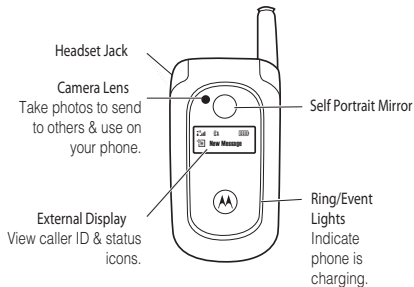 


Welcome

We are pleased that you have chosen the Motorola V325i wireless phone.

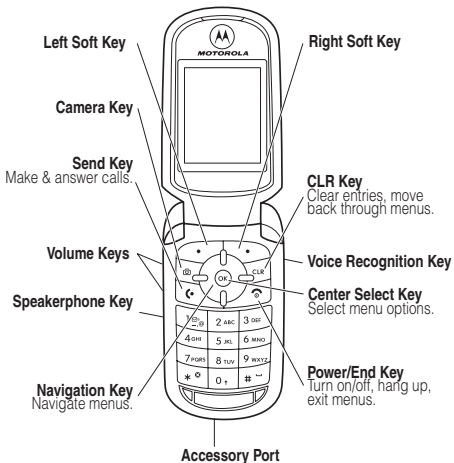

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States for
hearing impaired)
1-800-461-4575 (Canada)

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2006

Manual number: 6809505A72-O

Contents

Use and Care	5	Sending a Picture Message.	16	Locking and Unlocking Your Keypad	34
Getting Started	6	Receiving a Picture Message.	18	Locking and Unlocking Your Phone	34
About This Guide	6	TTY Operation	18	If You Forget a Code, PIN, or Password	35
Battery Tips	6	Voice Records.	20	Setting Up Your Phone	36
Installing the Battery	7	Learning to Use Your Phone.	21	Setting Call Sounds and Alert Styles	36
Removing the Battery	8	Using the Display	21	Setting Answer Options.	37
Charging the Battery	9	Using the 5-Way Navigation Key	24	Setting a Wallpaper Image	37
Turning On Your Phone	10	Using Menus	25	Setting a Screen Saver Image	38
Adjusting Volume	10	Entering Text	27	Adjusting Brightness	38
Making a Call	10	Using the Handsfree Speaker	33	Adjusting the Backlight.	38
Answering a Call.	11	Using the External Display	33		
Changing the Call Alert.	11	Changing a Code or Password	34		
Viewing Your Phone Number	12				
Highlight Features	13				
Bluetooth® connections	13				
Taking and Sending a Photo.	15				

Hiding or Showing Location Information . . .	38	Calling with Speed Dial	45	Service & Repairs	65
AGPS Limitations and Tips	39	Calling with 1-Touch Dial	45	Specific Absorption Rate Data	66
Conserving Battery Power	40	Using Voicemail	46	Safety and General Information	70
Calling Features	41	Phone Features	47	Industry Canada Notice to Users	75
Changing the Active Line	41	Main Menu	47	FCC Notice To Users . . .	76
Redialing a Number . . .	41	Settings & Tools Menu	48	Motorola Limited Warranty for the United States and Canada	77
Using Automatic Redial	41	Calling Features	49	Hearing Aid Compatibility with Mobile Phones . . .	81
Turning Off a Call Alert	42	Messages	49	Information from the World Health Organization	82
Calling an Emergency Number	42	Contacts	51	Smart Practices While Driving	84
Using AGPS During an Emergency Call	43	Personalizing Features	54	Index	86
Viewing Recent Calls . .	44	Call Monitoring	59		
Returning an Unanswered Call	45	Data and Fax Calls	60		
Attaching a Number . . .	45	Network Features	61		
		Personal Organizer Features	62		
		Security	63		
		News and Entertainment	63		

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



microwaves

Don't try to dry your phone in a microwave oven.



the ground


Don't drop your phone.


Getting Started

CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

About This Guide

This guide shows how to locate a menu feature as follows:

Find it: Press **MENU** (⊙) ▶  **RECENT CALLS**
▼ **Dialed**

This example shows that from the home screen, you must press **MENU** (⊙), scroll *across* to **RECENT CALLS** on the main menu, then scroll *down* to and select **Dialed**. Press  to

scroll across and down, and the center key (⊙) to select a menu option.

symbols



This means a feature is network/subscriber dependent and may not be available in all areas. Contact your service provider for more information.



This means a feature requires an optional accessory.

Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging



times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

 
Before using your phone, read the battery safety information in the “Safety and General Information” section included in the gray-edged pages at the back of this guide.

Installing the Battery


You must install and charge the battery to use your phone.

Your phone is designed to use only Motorola Original batteries and accessories.


- 1 Using both thumbs, firmly press the release button on the battery cover.

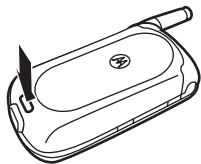

 
- 2 Slide the cover back, then lift it away from the phone.

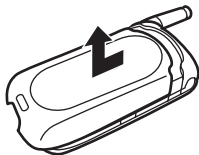

 - 3 Insert the battery with the tabs toward the front and facing down.

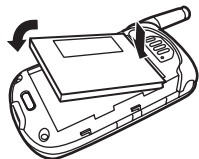


 - 4 Lower the battery cover onto the phone, then slide it forward until it clicks into place.

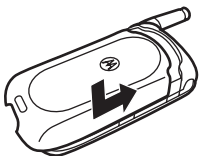


Removing the Battery

 
- 1 Press the release button on the battery cover.

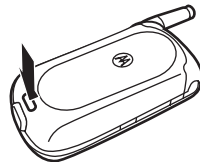

 
- 2 Slide the cover back, then lift it away from the phone.

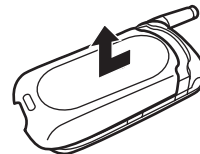

 
- 3 Using your fingernails, grasp the sides of the battery where shown, and pull upward.

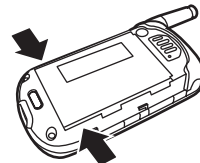

 - 4 Lower the battery cover onto the phone, then slide it forward until it clicks into place.

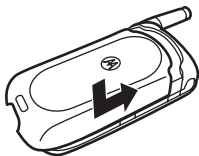

- 3 When your phone indicates **Charge Complete**, remove the charger.

Note: When you charge the phone with the flip open, the phone's screen may be dark. Briefly press the  key to turn the main display back on.

Tip: You can safely leave the charger connected to the phone after charging is complete. This will **not** damage the battery.

Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least one segment of the battery level indicator must be visible to ensure full phone functionality while charging.

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

 
- 1 Plug the charger into your phone, with the wider end at the bottom.
- 2 Plug the other end of the charger into the appropriate electrical outlet.



Turning On Your Phone

- 1 Open your phone.
- 2 Press and hold the power key for three seconds.


The phone may require several seconds to power on.

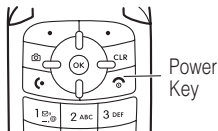

- 3 If necessary, enter your four-digit unlock code (the last four digits of your phone number) and press **OK** (🗨️) to unlock the phone.

 Adjusting Volume

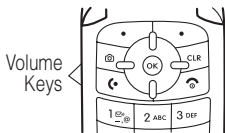

Press the up or down volume keys to:





- increase or decrease earpiece volume during a call
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)
- turn off an incoming call alert

 
Making a Call

- 1 Dial the number.

Tip: If you make a mistake, press the clear key  to delete the last digit. Press and hold  to clear all digits.

- 2 Press  to make the call.

- 3 Press  to end the call.






Tip: You can also close the flip to end the call.

Note: You must dial the phone number from the home screen. See page 21.

Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

 - 1 Press  to answer.
- 2 Press  to end the call.




Tip: You can set the phone to answer calls when you open the flip. To activate, press **MENU** (OK) ▶  **SETTINGS & TOOLS** ▼ **Call Settings** ▼ **In-Call Setup** ▼ **Answer Options** ▼ **Open To Answer**.

Note: If the phone is locked, you must unlock it to answer the call.

Changing the Call Alert


Phone Flip Open

 In the home screen, press the down volume key to switch to lower call alert volumes, then vibrate, then alarm, and, finally, all off. Press the up volume key to cycle back from all off to alarm, then vibrate, and then to the lowest alert volume setting.

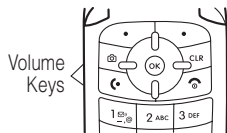

Phone Flip Closed

 Press the up or down volume key, then press the speakerphone key to scroll through the alert styles: **Master Volume**, **Alarm Only**, **Vibrate Only**,

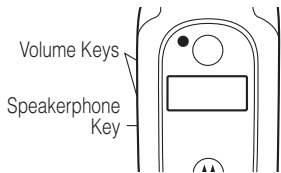

and **All Off**. The alert styles are shown on the external display.

After scrolling to the desired alert style, press the up or down volume key to save the setting and return to the home screen.


Viewing Your Phone Number

To view your phone number from the home screen:

- Press , then .

or

- Press **MENU** () ▶  **SETTINGS & TOOLS**
 ▼ **System** ▼ **Device Info** ▼ **My Tel. Number**.

While you are on a call, press **Options** ()
▼ **My Tel. Number**.

Highlight Features

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlights.

Bluetooth® connections

Your phone supports Bluetooth connections. You can connect your phone to a Bluetooth headset or car kit.

Your phone currently supports the following Bluetooth profiles:

- Headset
- Handsfree
- Dial Up Networking

For more information about Bluetooth wireless connections supported by this

device, go to FAQs
www.motorola.com/Bluetoothsupport.

Note: All multimedia will play from the speakerphone when your phone is connected to another Bluetooth device.

turn Bluetooth power on/off

Set Bluetooth power to be on whenever your phone is on.

Find it:  >  **SETTINGS & TOOLS** > **Bluetooth** > **Setup**

- 1 Scroll to **Power** and press **Change**.
- 2 Scroll to **On** and press **Select**.

Note: To extend battery life, use the above procedure and set Bluetooth power to **Off** when not in use. If you turn Bluetooth power

Off, your phone will not connect to accessories until you turn Bluetooth power **On** and reconnect to the accessories.

pair with headset, handsfree device, or computer




Before you try to connect to another Bluetooth device, make sure your phone's Bluetooth power is **On** and the device is in *pairing mode* (see the user guide for the device you are attempting to pair with). You cannot perform pairing while your phone is connected to another device.


To pair your phone to a headset accessory, handsfree car kit, or PC that supports Bluetooth wireless connections:

Find it:  >  **SETTINGS & TOOLS** > **Bluetooth**
> **Handsfree** > **[Look For Devices]**

Your phone displays a list of device(s) located within range of the phone. If your phone is already connected to a device, your phone lists that device and identifies it with a ✓ (in-use indicator). Once a connection is established with a device, no other device can connect to your phone until the currently connected device is disconnected.


- 1 Highlight a device in the list of devices your phone found.
- 2 Press the center key  to connect the device.
- 3 If the device requests permission to bond with your phone, select **YES** and enter the device PIN code to create a secure connection with the device.

Note: The default PIN code is 0000.

When the connection is made, the  (Bluetooth) indicator or a **Bluetooth** message displays in the home screen.

For specific information about an accessory, refer to the instructions that came with it.


Taking and Sending a Photo



- 1 From the home screen, press the camera key  to activate your phone's camera.

The active viewfinder image appears on your phone's display.


Press  left and right to zoom in and out.

  Note: The viewfinder becomes a full screen after a few seconds if no keys are pressed.

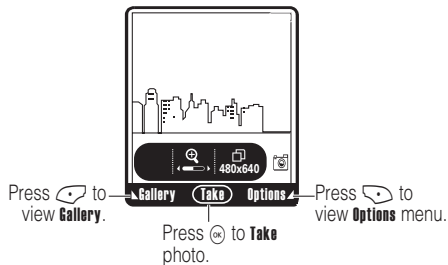

- 2 Point the camera lens at the photo subject, then press **Take** () to take a photo.
- 3 Press **Save** () to save the photo in the **Gallery**.

or

Press **Send** () to send the photo in a message.

or

Press **Reject** (👁) to delete the photo and return to the active viewfinder.

Pictures Menu Options

When the camera is active, press **Options** (👁) to open the **Options** menu, which can include the following options:

Option
Resolution Set resolution to High (480x640) , Medium (240x320) , or Low (120x160) .
Self Timer Set a timer for the camera to take a photo.
Brightness Adjust image brightness.
White Balance Adjust for different lighting.

Option
File Quality Select High , Normal , or Economy .
Shutter Sound Activate a tone that plays when you take a photo.
Color Effects Select Normal , Sepia , Black & White , or Negative .
Mode Go to Fun Frames to select an amusing frame for your photo.

Sending a Picture Message



A *picture message* contains embedded media objects (possibly including photos, pictures, animations, sounds, voice records). You can



send a picture message to other Verizon Wireless picture messaging-capable phones and to other email addresses.

Find it: Press **MENU** (OK) ▶  **MESSAGING** ▼ **PIX**



Note: You can send the message after entering a recipient phone number and the message text. You do not need to complete other fields.

- 1 Press keypad keys, then **OK** (OK), to enter a phone number.


or

Press **Add** () ▼ **Contacts**, then **OK** (OK) and **Done** (), to add one or more entries from **Contacts**.

or

Press **Add** () ▼ **Recent Calls**, then **OK** (OK) and **Done** (), to add one or more entries from recent calls lists.

- 2 Scroll to **Text**.

- 3 Press keypad keys to enter message text.
- 4 Scroll to **Pix** and press **Gallery** ().
- 5 Scroll to and highlight a picture to insert, and press **OK** (OK).


- 6 Scroll to **Sound** and press **Sounds** ().

- 7 Scroll to highlight a sound to insert, and press **OK** (OK).

- 8 Scroll to **Subject**.

- 9 Press keypad keys to enter the message subject.

or

Press **Options** (), then scroll to **Add Quick Text** and press **OK** (OK), to select a **Quick Text** item as the message subject.

- 10 Press **SEND** (OK) to send the message.

or

Press **Options** (Ⓞ) to send the message later, save the message in the drafts folder, set priority, or specify how long the message is valid for delivery.

Receiving a Picture Message

When you receive a picture message, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.

Find it: Press **MENU** (Ⓞ) ▶  **MESSAGING**
▼ **Inbox**

- 1 Scroll to the desired message.
- 2 Press **OPEN** (Ⓞ) to open the message. Your phone displays the picture, then the message.

Picture messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file plays.
- Attached files are appended to the message. To open the attachment, highlight the file indicator/filename and press **VIEW** (Ⓞ) (image file type), **PLAY** (Ⓞ) (sound file), or **OPEN** (Ⓞ) (vObject such as a **Contacts** or datebook entry, or unknown file type).

TTY Operation


You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in one of three TTY modes.

Note: Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.

Note: Set the phone to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize the error rate.

Note: For optimal performance, your phone should be at least 12 inches (30 centimeters) from the TTY device. Placing the phone too close to the TTY device may cause high error rates.

Setting TTY Mode

 When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Find it: Press **MENU** (OK) ▶  **SETTINGS & TOOLS**
▼ **Initial Setup** ▼ **TTY Setup**

TTY Mode can include the following options:

Option
Voice Return to normal voice mode.
TTY Transmit and receive TTY characters.
VCO Receive TTY characters but transmit by speaking into microphone.
HCO Transmit TTY characters but receive by listening to earpiece.

When your phone is in a TTY mode, the international TTY mode, the international TTY symbol, and the mode setting display during an active TTY call.

Returning to Voice Mode

To return to normal voice mode, select **Voice** from the **TTY Setup** menu.

Voice Records

You can record a voice record and play it back later. This feature allows you to create reminders for yourself.

To record a voice record:

- 1 Press **MENU** (OK) ▶  GET IT NOW.
- 2 Scroll to **Get Tunes & Tones** and press **OK** (OK).
- 3 Scroll to **Record New** and press **OK** (OK).
- 4 Press **OK** (OK) to begin recording, then press **OK** (OK) when finished.


Tip: You can use the voice recognition key instead! Press and hold the voice recognition key (on the right side of the phone), then

press **OK** (OK) to begin recording and **OK** (OK) again when finished.

To play a voice record:

- 1 Press **MENU** (OK) ▶  GET IT NOW.
- 2 Scroll to **Get Tunes & Tones** and press **OK** (OK).
- 3 Scroll to the file name of the desired voice record and press **PLAY** (OK).

To delete a voice record:

 
- 1 Press **MENU** (OK) ▶  GET IT NOW.
- 2 Scroll to **Get Tunes & Tones** and press **OK** (OK).
- 3 Scroll to the file name of the desired voice record and press **Erasing** (🗑️).

Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

The *home screen* displays when you are **not** on a call or using the menu. You must be in the home screen to dial a phone number.

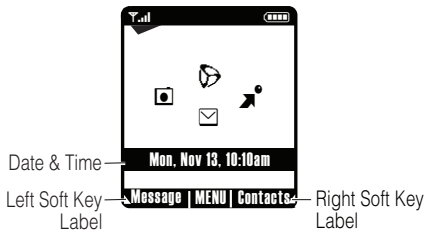


Note: Your home screen may look different than the display shown here.

 The **MENU** label in the bottom center of the display shows that you can press the **OK** key to enter the main menu.



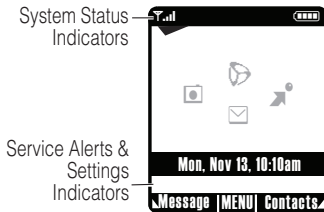


Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (⏏) or right soft key (⏏) to perform the function indicated by the left or right soft key label.



 

Your phone displays indicators in two areas:










Indicators are described below.

System Status Indicators



Alert/Indicator
 Signal Strength Indicator Vertical bars show the strength of network connection.
 Roaming Indicator Indicates phone is in digital coverage area.
 Digital Indicator
 Analog Indicator Indicates phone is in analog coverage area.
 1X Indicator Indicates phone is in a 1x-RTT coverage area.






Alert/Indicator
 SSL Indicator Indicates application verification is via SSL during a download session.
 Voice Privacy Indicator Indicates Voice Privacy is set to On and is enabled during active call.
 Data Call, Tethered, or Embedded WAP/BREW Application Indicator Shows during data call, tethered mode, or WAP/BREW application.
 Dormant Indicates phone is dormant and PPP session is active.



Alert/Indicator
 No Service Indicator Phone is in area with no service.
 TTY Indicator Phone is in TTY mode.
 Voice Call Indicator Shows during an active voice call.
 E911 Indicator Indicates E911 is set to On .
 Location On Indicator Indicates Location is set to On .

Alert/Indicator
 Keypad Lock Indicator Indicates keypad lock is set to On .
 Battery Level Indicator Shows battery charge level. The more bars, the greater the charge.



System Alerts and Settings Indicators

Alert/Indicator
 All Sounds Off Indicates Master Volume is set to Off .
 Alarm Only Indicates Master Volume is set to Alarm Only .


Alert/Indicator	
 Sound On, Vibrate On	Indicates Master Volume is set to Sound On and Vibrate On .
 Speakerphone	Indicates speakerphone is on.
 Missed Calls	Shows number of missed calls.
 Message Indicator	Displays when you receive a new message.
 Calendar Appointment	Shows number of calendar appointments.

Alert/Indicator	
 Voicemail	Shows number of voicemail messages received.
 Alarm On	Shows when an alarm has been set.

  
Using the 5-Way Navigation Key



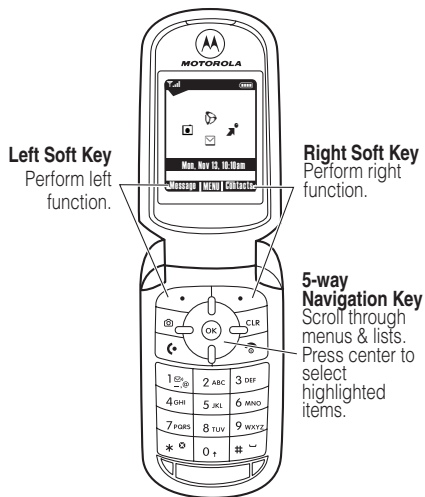


Use the 5-way navigation key () to scroll up, down, left, or right through the menu system. Press the center key () to select a highlighted menu item.

Using Menus



From the home screen, press **MENU** (OK) to enter the main menu.


Press  to scroll down to a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.


Menu Features	
 GET IT NOW*	 MESSAGING
 CONTACTS	 RECENT CALLS
 SETTINGS & TOOLS	

* Optional network/subscription dependent feature

Menu Shortcuts

Your phone displays four menu icons in the middle of the home screen.

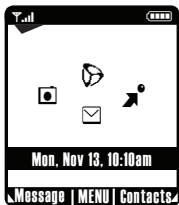 

Press  left, right, up, or down to open the menu represented by the icon you select. You can change the menu icons that appear in the home screen, or set your phone not to display icons in the home screen (see “Show or Hide Menu Icons” on page 58).



Tip: From the main menu, you can quickly select a menu feature by pressing the number key associated with that feature. For example,

from the **SETTINGS & TOOLS** menu, press **[4]** to select **Display**.

Selecting a Feature Option

 
When you select certain features, your phone displays a list of items or options that you can select. For example, when you view the dialed calls list, you can select an entry and perform additional tasks on that entry:




- Press  to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option
- When an option has a list of possible values, press  left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.

Entering Text

Some features require you to enter information. The following is a sample of a screen for **Contacts** entry information.

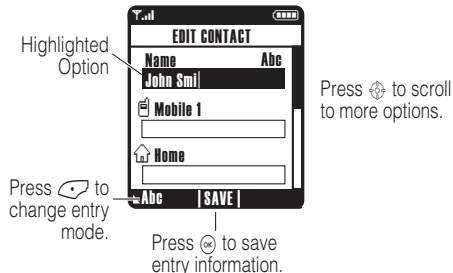

 The message center is another screen that requires text or numeric entries. It lets you compose and send text messages.

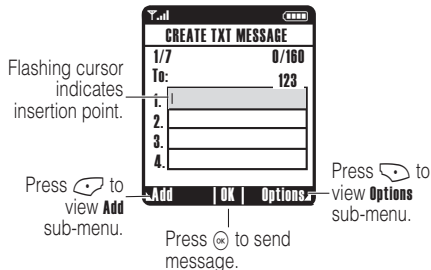

Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.


From the **CREATE TEXT MESSAGE** screen press **Options** (⌨), then select **Entry Mode** to select an

entry mode. From the **EDIT CONTACT** screen, press **Abc** (⌨) to select an entry mode.

You can select one of the following entry modes:

- iTAP English** Let the phone predict each word (in English) as you press keys.
- iTAP Spanish** Let the phone predict each word (in Spanish) as you press keys.
- Abc** Enter letters and numbers by pressing a key one or more times, first character in uppercase.
- ABC** Enter letters and numbers by pressing a key one or more times, all characters in uppercase.
- 123** Enter numbers only.
- Symbols** Enter symbols.

Capitalization and Numbers

Press  in any text entry screen to cycle through entry methods:

abc = no capital letters

123 = all numbers

ABC = all capital letters

Abc = capitalize next letter next letter after inserting '.', '?', or '!' then a space

iTAP = predictive text entry


Using Tap Mode

This is the standard mode for entering text on your phone. Specify Tap mode by selecting **Abc** or **ABC** as your text entry mode.

Regular Tap mode cycles through the letters and numbers of the key you press, as shown in the "Character Chart" on page 30.

 
1 Press a keypad key one or more times to select a letter, number, or symbol.

2 Enter the remaining characters.

Tip: Press  right to accept a word completion, or  to insert a space.

3 Press **OK** () to store the text.

When you enter text with Tap mode, the soft key functions change.

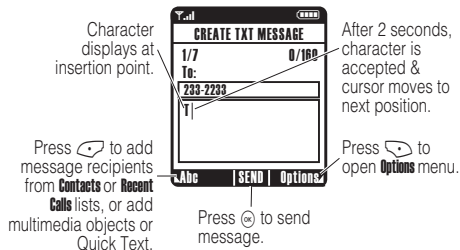

When you enter three or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog**, you might see:





Press up to accept **program**, or press to reject it & enter a space after **prog**.

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.


Character Chart

Use this chart as a guide for entering characters with Tap mode.

Keys/Characters	
1 2 3	2 3 4
. @ ? ! - , & : _ / ; 1 0	a b c 2
3 4 5	4 5 6
d e f 3	g h i 4
5 6 7	6 7 8
j k l 5	m n o 6
7 8 9	8 9 0
p q r s 7	t u v 8
9 0 * #	0 * #
w x y z 9	<i>change text case, for capital letters</i>




Keys/Characters	
	
<i>change text entry method (hold for default)</i>	<i>enter space</i>

Note: This chart shows lowercase letters, which are produced in **Abc** mode. Select **ABC** mode to produce the capitalized versions of the letters shown.

Note: This chart may not reflect the exact character set available on your phone. In a URL editor,  first shows common characters for that editor.





Tap Mode Text Entry Rules

- Press a keypad key repeatedly to cycle through its characters.

- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press  down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.


Using iTAP® Mode

iTAP software provides a predictive text entry method that lets you enter a word using one key press per letter. This can be faster than Tap mode, because your phone combines the key presses into common words.


For example, if you press    , you see the letters **Program**. If you want a different

word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

Entering Words


- 1 Press keypad keys (one press per letter) to show possible letter combinations at the bottom of the display.
- 2 Scroll left or right to highlight the combination you want.
- 3 Press **SELECT** () to lock a highlighted combination. You can press keypad keys to add more letters to the end of the combination.

or


Press  up to enter the highlighted combination when it spells a word. A space is automatically inserted after the word.



If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

Using Numeric Mode

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.



Using Symbol Mode

Scroll to the desired symbol on the **SYMBOLS** screen, then press **OK** () to select it.

Press **Next** () on the **SYMBOLS** screen to page down to the next set of symbols, and press **Prev** () to page up to the previous set.

Deleting Letters and Words

 
Place the cursor to the right of the text you want to delete, and then:

- Press  to delete one letter at a time.
- Hold  to delete the entire message.


Using the Handsfree Speaker

Note: You must open your phone's flip to activate the speakerphone.

Press and hold the smart/speakerphone key to turn the handsfree speaker on or off. A soft audio alert confirms activation/deactivation.

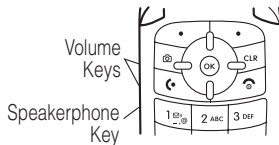

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

When you turn on the handsfree speaker, your phone displays **Spkrphone On** and shows the speakerphone indicator  in the service alerts and settings area. The handsfree speaker remains on until you press the smart/speakerphone key again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Using the External Display

When the flip is closed, you can use the external display to view time, phone status, and message notifications.

Changing a Code or Password

Your phone's four-digit unlock code is originally set to the last four digits of your phone number, and the six-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has **not** reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain four digits, and the security code must contain six digits.

To change a code or password:

Find it: Press **MENU** (OK) ▶  **SETTINGS & TOOLS**
▼ **System** ▼ **Security** ▼ **New Passwords**

Select the type of code you wish to change, enter the old code when prompted, then enter the new code.

Locking and Unlocking Your Keypad

You can lock your phone's keypad to prevent accidental key presses.

Press   to lock/unlock the keypad.

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or

vibrates for incoming calls or messages, **but you must unlock it to answer.**

You can make emergency calls on your phone even when it is locked (see page 42).

Locking Your Phone

Find it: Press **MENU** (OK) ▶  **SETTINGS & TOOLS**
▼ **System** ▼ **Security** ▼ **Phone Lock** ▼ **Lock Now** or
Automatic Lock

Both **Phone Lock** options require you to enter the unlock code before completing your selection.

Unlocking Your Phone

At the **Enter Unlock Code** prompt, enter your unlock code and press **OK** (OK) to unlock your phone.

If You Forget a Code, PIN, or Password

Note: Your phone's four-digit unlock code is originally set to the last four digits of your phone number, and the six-digit security code is originally set to 000000.

If you forget your unlock code, try entering the last four digits of your phone number. If that does not work, contact your service provider.




Setting Up Your Phone



Setting Call Sounds and Alert Styles

Your phone rings and/or vibrates to notify you of an incoming call or to signal certain other events.

Setting Call Sounds

Find it: Press **MENU** (⊙) ▶  **SETTINGS & TOOLS**
▼ **Sounds Settings**

- 1 If necessary, set **Style:** to **Master Volume:**
Scroll to **Style:** and press **Change** () , then scroll to **Master Volume** and press **Select** () .
- 2 Scroll to **Master Volume Detail** and press **Change** () .

- 3 Scroll to **Calls** and press **Change** () to select it.
- 4 Scroll to the desired detail setting and press **Select** () .

Note: Your phone plays a sample of each highlighted setting as you scroll through the settings.

Setting Alerts

Your phone includes alerts for **Calls**, **Inbox**, **Voicemail**, **Alarms**, **Data Calls**, **Fax Calls**, and **Reminders**.

You can specify a detailed setting for each type of alert:

Find it: Press **MENU** (⊙) ▶  **SETTINGS & TOOLS**
▼ **Sounds Settings**

- 1 If necessary, set **Style:** to **Master Volume:**
Scroll to **Style:** and press **Change** (👉), then scroll to **Master Volume** and press **Select** (👉).
- 2 Scroll to **Master Volume Detail** and press **Change** (👉).
- 3 Scroll to the desired alert type and press **Change** (👉).
- 4 Scroll to the desired detail setting and press **Select** (👉).

Note: Your phone plays a sample of each highlighted setting as you scroll through the settings.

Setting Answer Options

You can use these alternative methods to answer an incoming call.


Multi-key	answer by pressing any key
Open To Answer	answer by opening the flip

To activate or deactivate an answer option:

Find it: Press **MENU** (Ⓞ) ▶  **SETTINGS & TOOLS**
▼ **Call Settings** ▼ **In-Call Setup** ▼ **Answer Options**

Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen.

Find it: Press **MENU** (Ⓞ) ▶  **SETTINGS & TOOLS**
▼ **Display** ▼ **Wallpaper**

Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.

The screen saver image displays when the flip is open and no activity is detected for a specified time period. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find it: Press MENU (OK) ▶  SETTINGS & TOOLS
▼ Display ▼ Screen Saver

Adjusting Brightness

Find it: Press MENU (OK) ▶  SETTINGS & TOOLS
▼ Initial Setup ▼ Brightness

Adjusting the Backlight


Set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.


Find it: Press MENU (OK) ▶  SETTINGS & TOOLS
▼ Initial Setup ▼ Backlight



Hiding or Showing Location Information




Your phone can use the *automatic location information* (ALI) feature to tell the network where you are physically located.

When ALI is set to **Location On**, your phone displays the  (ALI on) indicator. Services may use your known location to provide useful information (for example, driving directions, or the location of the nearest bank). Your phone prompts you when the network or a service asks for your location. You can refuse at this point.

When ALI is set to **911 Only**, your phone displays the  (ALI off) indicator, and the phone does not send location information unless you call the emergency phone number (such as 911).

Find it: Press **MENU** () ▶  **SETTINGS & TOOLS**
▼ **System** ▼ **Location**

- 1 When prompted, enter the location code.
The default location code is 0000.
- 2 Scroll to **Location On** or **E911 Only**.
- 3 Press **Select** () to select the setting.

AGPS Limitations and Tips

Your phone uses *assisted-Global Positioning System* (AGPS) satellite signals to estimate your location. If your phone cannot find strong satellite signals, your AGPS might be slower, less accurate, or it might not work at all. AGPS provides only an approximate location, often within 150 feet (45 meters) but sometimes much farther from your actual location.

To improve AGPS accuracy:

 
- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.

- Move away from radios, entertainment equipment, and other electronic devices that might interfere with or block AGPS satellite signals.
- Extend your phone antenna.
- Hold your phone away from your body, and point the phone antenna toward the sky. Do not cover the antenna area with your fingers.

AGPS uses satellites controlled by the U.S. government and subject to changes implemented in accordance with the Department of Defense AGPS user policy and the Federal Radio Navigation Plan. These changes might affect AGPS performance.

Conserving Battery Power

Your phone includes an ambient light sensor and battery save setting to extend battery life.

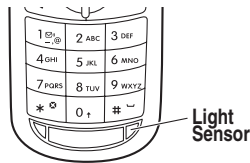

When this feature is activated, it

automatically turns off the keypad backlight when it detects that enough ambient light is available. Inhibiting or covering the sensor can cause intermittent backlighting.

Find it: Press **MENU** (OK) ▶  **SETTINGS & TOOLS**
 ▼ **Initial Setup** ▼ **Battery Save**

Calling Features



For basic instructions on how to make and answer calls, see page 10.

Changing the Active Line

Change the active phone line to make and receive calls from your other phone number.

Find it: Press **MENU** () ▶  **SETTINGS & TOOLS**
▼ **System** ▼ **Device Info** ▼ **Active Line**

Redialing a Number

- 1 Press  to view the dialed calls list.
- 2 Scroll to the entry you want to call.
- 3 Press  to redial the number.

Using Automatic Redial

When you receive a busy signal, your phone displays **Call Failed, Number Busy**.


With automatic redial, your phone automatically redials the number for four minutes. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. To turn automatic redial on or off:

Find it: Press **MENU** () ▶  **SETTINGS & TOOLS**
▼ **Initial Setup** ▼ **Auto Redial**

When automatic redial is turned off, you can manually activate the feature to redial a phone

number. When you hear a fast busy signal and see **Call Failed**, press **IGNORE** to cancel the incoming call.

Press  or **RETRY** to activate automatic redial.

Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.



Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Press the volume key up or down to turn off the alert.

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Enter the emergency number.
- 2 Press  to call the emergency number.

Using AGPS During an Emergency Call

When you make an emergency call, your phone can use *assisted-Global Positioning System* (AGPS) satellite signals to tell the emergency response center your approximate location.

The AGPS feature has limitations, so always tell the emergency response center your best knowledge of your location. Remain on the phone for as long as the emergency response center instructs you.

AGPS **might not work** for emergency calls:

- Your phone's AGPS feature must be turned on (see page 39).
- Your local emergency response center might not process AGPS location information. For details, contact your local authorities.


For best results:



- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings, and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment, and other electronic devices that might interfere with or block AGPS satellite signals.



If your phone cannot find strong AGPS satellite signals, the location of the nearest cell tower in contact with your phone is automatically provided to the emergency response center.

Viewing Recent Calls


Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press  from the home screen to view the **All Calls** list.

Find it: Press **MENU** () ▶  **RECENT CALLS**

- 1 Scroll to **Missed, Received, Dialed,** or **All**.
- 2 Press **OK** () to select the list.
- 3 Scroll to an entry.
- 4 Press  to call the entry's number.


or

Press **Message** () to send a message to the entry's number.

or

Press **OPEN** () to view entry details.

or




Press **Options** () to open the **Options** menu to perform various operations on the entry.

The **Options** menu can include the following options:


Option
Save Create a Contacts entry with the number in the No. field.
Erase Delete the selected entry.
Erase All Delete all entries.
View Timers Go to the View Timers screen.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator
 - **X Missed Calls**, where **X** is the number of missed calls
- 1 Press **VIEW** () to see the received calls list.
 - 2 Scroll to the call you want to return.
 - 3 Press  to make the call.

Attaching a Number



While dialing (with digits visible in the display), press **Options** () , then scroll to and select **Attach Number**, attach a number from **Contacts** or the recent calls list.

Calling with Speed Dial

Each entry you store in **Contacts** is assigned a unique *speed dial* number.

Tip: To see an entry's speed dial number, press **MENU** ()  **CONTACTS**  **Contact List**, scroll to the entry, and press **View** () .

To speed dial a **Contacts** entry:

- 1 Enter the speed dial number for the entry you want to call.
- 2 Press  to submit the number.
- 3 Press  to call the entry.

Calling with 1-Touch Dial

To call **Contacts** entries 1 through 9, press and hold the single-digit speed dial number for one second.

Using Voicemail




Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Find it: Press MENU (OK) ▶  MESSAGING
▼ VoiceMail

Press  (send key) to call your voicemail phone number.

If no voicemail number is stored, your phone prompts you to store a number.

Phone Features

This section helps you locate features on your phone that were not described earlier in this guide.

Main Menu

This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.



GET IT NOW*

- Get Tunes & Tones
- Get Pix
- Get Fun & Games
- Get News & Info
- Get Going



MESSAGING

- New Txt Msg
- New Pix Msg
- Inbox
- Sent
- Drafts
- Voicemail



CONTACTS

- New Contact
- Contact List
- Groups
- Speed Dials



RECENT CALLS

- Missed
- Received
- Dialed
- All
- View Timers



SETTINGS & TOOLS

(see next page)

Settings & Tools Menu

Tools

- Calendar
- Alarm Clock
- World Clock
- Notepad
- Calculator

Sounds Settings

- Style
 - Master Detail
- Ring Lights
- Event Lights

Bluetooth

- Find Me
- Handsfree
- Device History
- Setup

Display

- Wallpaper
- Screen Saver
- Display Themes
- Greeting
- Home Screen

System

- System Select
- Device Info
- Location
- Security
- Icon Glossary

Call Settings

- In-Call Setup
- Headset

Initial Setup

- SpeakerPhone
- Auto Redial
- Backlight
- TTY Setup
- Language
- Battery Save
- Brightness
- DTMF
- Hyphenation
- Voice Dial Setup
- Master Reset
- Master Clear

Calling Features

Features

Voice Dial

Press and release the voice key, then (within two seconds) say:

- “Digit dial.” When prompted, say the digits of the number you want to call.
- or**
- “Name dial.” When prompted, say the name of a **Contacts** entry exactly as it is listed.


For example, to call the mobile number for an entry named Bill Smith, say “Name dial Bill Smith mobile.” (If the entry includes only one number for Bill Smith, say only “Name dial Bill Smith.”)

Note: You can also use **Digit Dial** for numbers of **Contacts** entries.

Features

Activate DTMF Tones

MENU (OK) ▶  SETTINGS & TOOLS ▼ Initial Setup
▼ DTMF

Scroll to **Short**, **Long**, or **Off**, and press **Select** (.

Send DTMF Tones

Send DTMF tones during a call:

Press number keys.

Messages


Features

Send Text Message



Send a text message:

MENU (OK) ▶  MESSAGING ▼ New Txt Msg

Press **Options** () to perform various operations on the message.


Features


Send Multimedia Message

MENU (OK) ▶  MESSAGING

▼ **New Pix Msg**

Enter the message address and press (OK), then:

To insert a picture, scroll to **Pix** and press **Gallery** (.

To insert a sound, scroll to **Sound** and press **Sounds** (.

Store Message Objects

Go to a picture message slide, then:

Options () ▼ **Save Picture** or **Save Sound**


Features

View Sent Messages

View sent messages:

MENU (OK) ▶  MESSAGING ▼ **Sent**

▼ *sent message*, then press **Open** (OK)


Press **Options** () to perform various operations on the message.

Read Received Messages

Read received messages:

MENU (OK) ▶  MESSAGING ▼ **Inbox**

▼ *received message*, then press **Open** (OK)

Press **Options** () to perform various operations on the message.

Features

Drafts




View messages saved in drafts folder:

MENU (OK) ▶  **MESSAGING** ▼ **Drafts**
▼ *draft message*

To edit the message, press **EDIT** (OK).



To delete the message, press **Erase** ().

Press **Options** () to perform various operations on the message.

Erase Messages



Delete all messages or only messages from the **Outbox** or drafts folder:

MENU (OK) ▶  **MESSAGING**, then press **Options** (), scroll to **Erase Inbox**, **Erase Drafts**, **Erase Sent**, or **Erase All**, and press **OK** (OK)

Contacts

Features

Create Entry

Create a new **Contacts** entry:

MENU (OK) ▶  **CONTACTS** ▼ **New Contact**


View Contact

MENU (OK) ▶  **CONTACTS** ▼ **Contact List** ▼ *entry*


Press **View** (OK).


Features

Add Entries to Group

Tip: You can add a **Contacts** entry to a group while editing that entry by scrolling to **Group** and pressing **Set** (.

MENU (OK) ▶  **CONTACTS** ▼ **Groups**

Scroll to the desired *group_name* and press **Options** () , then scroll to **Add** and press **OK** (OK). On the **ADD CONTACTS** screen, scroll to each contact you want to add and press **OK** (OK).

When you are finished adding contacts to a group, press **Done** (.

When you send a message to a group list, the message goes to all **Contacts** entries in that group.

Features

Add Group

Add a new group as an entry on the **GROUPS** screen:

MENU (OK) ▶  **CONTACTS** ▼ **Groups** ▼ **New**

You can add entries to or delete entries from a group list. Use a preset group name or create your own name.

When you send a message to a group list, the message goes to all **Contacts** entries in that group.

Dial Number

Call a number stored in **Contacts**:

MENU (OK) ▶  **CONTACTS** ▼ **Contact List** ▼ *entry*

or

MENU (OK) ▶  **CONTACTS** ▼ **Groups**
▼ *group_name*

Press  to call.

Features

Edit Entry

Edit a **Contacts** entry:



MENU (OK) ▶  **CONTACTS** ▼ **Contact List** ▼ *entry*

Press **Edit** ()

Set Speed Dial Number

Assign a speed dial number to a **Contacts** entry:

MENU (OK) ▶  **CONTACTS** ▼ **Contact List** ▼ *entry*



Press **Edit** () and scroll to the number to be assigned a speed dial number. Press **Options** (), then scroll to **Set Speed Dial** and press **OK** (OK).

Features

Set Default Number for Entry

Set the default number for a **Contacts** entry with multiple numbers:



MENU (OK) ▶  **CONTACTS** ▼ **Contact List** ▼ *entry*

Press **Edit** () and scroll to the number to be set as the default number. Press **Options** (), then scroll to **Set As Default** and press **OK** (OK).

Assign Ringtone to Entry

Assign a distinctive ringtone to a **Contacts** entry:

MENU (OK) ▶  **CONTACTS** ▼ **Contact List** ▼ *entry*

Press **Edit** (), then scroll to **Ringtone**. Press **Set** () to go to the **TUNES & TONES** menu.



Scroll to the desired ringtone and press **OK** (OK).

Features

Create New Ringtone

Create a recording that you can assign as a ringtone for an entry:



MENU (OK) ▶  CONTACTS ▼ Contact List ▼ *entry*

Press **Edit** () , then scroll to **Ringtone** and press **Set** () to go to the **TUNES & TONES** menu.

Scroll to **Record New** and press **OK** (OK), then follow the prompts to create a recording that is stored with your other ringtones.

Download Ringtone

MENU (OK) ▶  CONTACTS ▼ Contact List ▼ *entry*

Press **Edit** () , then scroll to **Ringtone** and press **Set** () to go to the **TUNES & TONES** menu.


Scroll to **Get New** and press **OK** (OK), then proceed to download and save a ringtone.

Features

Erase Entry

Erase a **Contacts** entry:

MENU (OK) ▶  CONTACTS ▼ Contact List ▼ *entry*

Press **Options** () , then scroll to **Erase** and press **OK** (OK).

Personalizing Features

Using Voice Commands

You can place calls and access some menu options by speaking commands to your phone:

- 1 Press and release the voice button on the right side of the phone.

Note: If **Speakerphone** is not already turned on and you want to activate it, press the smart/speakerphone key on the left side of your phone. You can then speak the

commands aloud, and hear phone prompts played out loud.

Your phone plays “Say a command” and displays **Say a command** followed by a list of valid commands.

- 2 Say one of the following commands:

Name Dial, Digit Dial, Camera, Voicemail, Redial, Received Calls

Your phone opens the corresponding menu or performs the corresponding action. (See page 49 for instructions on voice dialing using **Name Dial** and **Digit Dial**.)


Tip: When saying a number, speak at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

Voice Service Setup

For most people, voice dialing (**Name Dial** or **Digit Dial**) works well without any initial setup. However, if the phone is frequently unable to

recognize numbers correctly when you use voice dialing, you may be able to improve your results by adapting it to your voice.

Note: If the phone is used by several people, reset voice dialing to the original setting before proceeding by pressing **MENU** (OK)

- ▶  **SETTINGS & TOOLS** ▼ **Initial Setup**
- ▶ **Voice Dial Setup** ▶ **Reset Digits**. This ensures that you are not saving your settings over someone else’s.

To adapt voice dialing to your voice

Find it: Press **MENU** (OK) ▶  **SETTINGS & TOOLS** ▼ **Initial Setup** ▶ **Voice Dial Setup**

- 1 Scroll to **Adapt Digits** and press **Select** (☞).
- 2 Press **Start** (☞).
- 3 After you hear your phone prompt you to say the first digit sequence, wait for the beep, then repeat the digits in a normal tone of voice.

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

- 4 If the recording sounds acceptable (no mistakes or background noises), say “Yes” or press **Yes** (☞).

or

If the recording is not acceptable, say “No” or press **No** (☞). When prompted to say the digits again, wait for the beep and say the digits again. The phone will prompt you to repeat this process with up to 12 additional sets of digits.

- 5 If the phone prompts, “More Adaptation?,” press **Yes** (☞) to continue or **No** (☞) to end the process.

When the adaptation process is complete, the phone will say “Adaptation Complete.”)

More Personalizing Features

Features

Call & Key Volumes

MENU (OK) ▶  SETTINGS & TOOLS

▼ Sounds Settings

Tip: If necessary, set **Style:** to **Master Volume:** Scroll to **Style:** and press **Change** (☞), then scroll to **Master Volume** and press **Select** (☞).





With **Style:** set to **Master Volume**, scroll to **Master Volume Detail** and press **Change** (☞), then scroll to **Ring Volume** or **Key Volume** and press **Change** (☞).






Message Alerts

Set whether or not you are alerted to messages received during a call:

MENU (OK) ▶  SETTINGS & TOOLS

▼ Call Settings ▼ In-Call Setup ▼ MSG Alert

Features
<p>Greeting </p> <p>Change the greeting that appears when you turn on your phone:</p> <p>MENU (OK) ▶  SETTINGS & TOOLS ▼ Display ▼ Greeting</p>
<p>Clock View</p> <p>Display an analog clock or digital time readout in the home screen:</p> <p>MENU (OK) ▶  SETTINGS & TOOLS ▼ Display ▼ Home Screen ▼ Clock</p>
<p>Display Themes</p> <p>Set the colors and styles of screens that your phone displays:</p> <p>MENU (OK) ▶  SETTINGS & TOOLS ▼ Display ▼ Display Themes</p>

Features
<p>Ring Lights </p> <p>Activate light displays to signal incoming calls:</p> <p>MENU (OK) ▶  SETTINGS & TOOLS ▼ Sounds Settings ▼ Ring Lights</p>
<p>Event Lights </p> <p>Activate light displays to indicate phone is charging:</p> <p>MENU (OK) ▶  SETTINGS & TOOLS ▼ Sounds Setting ▼ Event Lights</p>
<p>Menu Language</p> <p>MENU (OK) ▶  SETTINGS & TOOLS ▼ Initial Setup ▼ Language</p>

Features

Show or Hide Menu Icons

Show or hide menu feature icons in the home screen:

MENU (OK) ▶  SETTINGS & TOOLS ▼ Display
▼ Home Screen ▼ Home Keys ▼ Icons

Change Menu

Change the menu feature icons in the home screen:

MENU (OK) ▶  SETTINGS & TOOLS ▼ Display
▼ Home Screen ▼ Home Keys

Features

Create Banner

Create a heading to display on your phone's home screen:

MENU (OK) ▶  SETTINGS & TOOLS ▼ Display
▼ Home Screen ▼ Banner

Master Reset

Reset all options except unlock code, security code, and lifetime timer:

MENU (OK) ▶  SETTINGS & TOOLS ▼ Initial Setup
▼ Master Reset

To reset all options, you need to enter the **Security Code** (000000).

Features

Master Clear


Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries:

Warning: This option erases all user-entered information stored in your phone memory, including phonebook entries and downloaded files. Once you erase the information, it cannot be recovered. It resets all options to their factory settings except for the unlock code, security code, and lifetime timer.

MENU (OK) ▶  SETTINGS & TOOLS ▼ Initial Setup
▼ Master Clear

To reset all options, you need to enter the **Security Code** (000000).

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.





Features


View Call Times




MENU (OK) ▶  RECENT CALLS
▼ View Timers

Scroll to **Last Call, All Calls, Received Calls, Dialed Calls,** or **Lifetime Calls**, and press **OK** (OK).

Features	
View Roaming Times 	
MENU (OK) ▶ RECENT CALLS ▼ View Timers ▼ Roaming	
Set In-Call Timer 	
MENU (OK) ▶ SETTINGS & TOOLS ▼ Call Settings ▼ In-Call Setup ▼ In-Call Timer	
View Data Volumes 	
MENU (OK) ▶ RECENT CALLS ▼ View Timers	
Scroll to Transmit Kilobytes , Received Kilobytes , Total Kilobytes , or Lifetime Data Counter , and press OK (OK).	
Reset Timer 	
MENU (OK) ▶ RECENT CALLS ▼ View Timers	
Scroll to the desired timer and press Reset ().	

Features	
View Last Reset 	
MENU (OK) ▶ RECENT CALLS ▼ View Timers ▼ Last Reset	

Data and Fax Calls

Features	
Data Settings	
Specify call type for next call:	
MENU (OK) ▶ SETTINGS & TOOLS ▼ Incoming Call	
Scroll to Next Call and press Change (). Then scroll to Normal , Data In Only , or Fax In Only and press Select ().	
Send Data or Fax 	
Connect your phone to the device, then place the call through the device application.	

Features

Receive Data or Fax



Connect your phone to the device, then answer the call through the device application.

Network Features

Features

Network Settings



View network information and adjust network settings:

MENU (OK) ▶ **SETTINGS & TOOLS** ▼ **System**
▼ **System Select**

Scroll to **Current Network** and press **View** (☰), or scroll to **Analog Only** or **Set Mode** and press **Change** (☰).

Features

Set Service Tones



Set phone to beep each time the network registration status changes:

MENU (OK) ▶ **SETTINGS & TOOLS** ▼ **System**
▼ **System Select**

Scroll to **Service Tone** and press **Change** (☰).

Set Call Drop Alerts



Set phone to emit an alert tone whenever the network drops a call. (Because digital networks are so quiet, the call drop alert may be your only indication that a call has been dropped.)

MENU (OK) ▶ **SETTINGS & TOOLS** ▼ **System**
▼ **System Select**

Scroll to **Call DropTone** and press **Change** (☰).


Personal Organizer Features

Features

Add Calendar Appointment

Add an event to the calendar:

MENU (OK) ▶  SETTINGS & TOOLS ▼ Tools
▼ Calendar

Scroll to the desired date and press
Add () , then enter new event
information.

View Calendar Appointment

MENU (OK) ▶  SETTINGS & TOOLS ▼ Tools
▼ Calendar

Scroll to the date of the scheduled
appointment, press **VIEW** (OK), then press
VIEW (OK) again to view appointment details.

Features

Set Alarm

Set an alarm:

MENU (OK) ▶  SETTINGS & TOOLS ▼ Tools
▼ Alarm Clock

Turn Off Alarm

Turn off alarm:

Press **Off** () or .

View World Clock

View current time in cities around the
world:







MENU (OK) ▶  SETTINGS & TOOLS ▼ Tools
▼ World Clock

Calculator





Calculate numbers:

MENU (OK) ▶  SETTINGS & TOOLS ▼ Tools
▼ Calculator

Security

Features
Control Access to Location Function Set up a location lock code to control access to Location function (see “Hiding or Showing Location Information” on page 38): MENU (OK) ▶  SETTINGS & TOOLS ▼ System ▼ Security ▼ New Passwords Scroll to Location Code and press Change (). If prompted to enter the old location code, enter the code and press Ok ().
Change Unlock & Security Codes MENU (OK) ▶  SETTINGS & TOOLS ▼ System ▼ Security ▼ New Passwords Scroll to Unlock Code or Security Code and press Change (). If prompted, enter the old code and press Ok ().


News and Entertainment

Features
Launch Game or Application  Launch a Get It Now game or application: MENU (OK) ▶  GET IT NOW ▼ application
Download Game or Application  Download a Get It Now game or application: MENU (OK) ▶  GET IT NOW Select category, select application, select pricing option. Normal airtime and/or carrier usage charges apply.

Features

Manage Pictures




From the idle display, press  left to select **GET PIX**.

Web Sessions





Select or create a Web session:

From the idle display, press  up to select **OPENWAVE**.

Check Available Memory



Press  left to open  **GET IT NOW**, then select **Info**.

Service & Repairs

If you have questions or need assistance, we're here to help. Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-866-395-3710 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and

certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.55 W/kg, and when worn on the body, as described in this user guide, is 1.57 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular

Telecommunications & Internet Association (CTIA)
Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.



MOTOROLA

Important Safety and Legal Information

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in

* The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your pacemaker when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks

on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.








Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

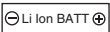

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the

lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

Industry Canada Notice to Users

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

FCC Notice To Users

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int./peh-emf>

Product Registration

Online Product Registration:

[direct.motorola.com/hellomoto/
Motosupport/source/registration.asp](http://direct.motorola.com/hellomoto/Motosupport/source/registration.asp)

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation

or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Wireless: The New Recyclable

Your wireless mobile device can be recycled. Recycling your mobile device reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their mobile devices and have taken steps to promote the collection and environmentally sound recycling of end-of-life devices.

As a mobile device user, you have an important role in ensuring that this device is recycled properly. When it comes time to give this mobile device up or trade it in for a new one, please remember that the mobile device, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices, please visit us at:

[recycling.motorola.young-america.com/
index.html](http://recycling.motorola.young-america.com/index.html)

Smart Practices While Driving

Drive Safe, Call SmartSM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Go to www.motorola.com/callsmart for more information.

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your



eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

Index

Numerics

- 1-touch dial, using 45
- 1X indicator 22

A

- accessories 6
- alarm clock 62
- alarm on indicator 24
- alarm only indicator 23
- alert
 - downloading 50
 - setting 36
 - turning off 10, 11, 42
- ALI indicators 39
- all sound off indicator 23
- analog indicator 22
- animation
 - downloading 50
 - screen saver 38
 - viewing 64

- wallpaper 37
- answering a call 11, 37
- automatic location
 - information
 - sending 38
- automatic redial 41

B

- battery
 - charging 9
 - extending battery life 6, 38, 40
 - installing 7
- battery level indicator 23
- Bluetooth 13

C

- calculator 62
- calendar 62
 - view appointment 62

- calendar appointment
 - indicator 24
- call
 - alert, setting 36
 - alert, turning off 10, 11, 42
 - answer options 37
 - answering 11
 - deleting 44
 - dialed calls list 44
 - dialing 10
 - emergency number 42
 - ending 10, 11
 - handsfree speaker 33
 - making 10
 - received calls list 44
 - receiving 11
 - recent calls 44
 - storing 44

call (continued)
 unanswered call 45
Call Failed, Number Busy
 message 41
camera
 taking a photo 15
character chart 30
codes
 changing 34
 default 10, 34, 35
 forgetting 35
Contacts
 1-touch dial 45
 attaching numbers 45
 dialing a number 52
 editing an entry 53
 ringtone 53
 speed dial number 45
 storing an entry 51
D
data call 60, 61
 volume meters 60

data call indicator 22
deleting a call 44
dialed calls list 44
dialing a number 10
digital indicator 22
display
 greeting 57
dormant indicator 22
drafts folder 51
DTMF tones
 activating 49
 sending 49
E
E911 indicator 23
earpiece volume 10
embedded WAP/BREW
 indicator 22
emergency number 42
end key 10, 11
ending a call 10, 11
Enter Unlock Code message
 35

export regulations 83
external display 33
F
fax call 60, 61
5-way navigation key 24
flip
 external display 33
G
greeting 57
H
handsfree speaker 33
hearing aids 81
home screen 21
I
indicators
 1X 22
 alarm on 24
 alarm only 23
 ALI 39
 all sounds off 23

- indicators (continued)
 - analog 22
 - battery level 23
 - calendar appointment 24
 - data call 22
 - digital 22
 - dormant 22
 - E911 23
 - embedded WAP/BREW 22
 - keypad lock 23
 - location on 23
 - message 24
 - message waiting 18
 - missed call 45
 - missed calls 24
 - no service 23
 - roaming 22
 - signal strength 22
 - sound on & vibrate on 24
 - speakerphone 24
 - SSL 22
 - tethered 22

- TTY 23
- voice call 23
- voice privacy 22
- voicemail 24

K

- key
 - end 10, 11
 - 5-way navigation 24
 - left soft key 21
 - menu 6
 - power 10
 - right soft key 21
 - send 10, 11, 44
 - volume control 10
- keypad lock indicator 23

L

- left soft key
 - functions 21
- location on indicator 23
- location, sending to network 38

- lock
 - phone 34

M

- making a call 10
- menu
 - entering text 27
 - lists 26
 - navigating 25
 - using features 26
- menu key 6
- message
 - drafts 51
 - erase 51
 - outbox 50
 - reading 50
 - status 50
 - text 49
- message indicator 24
- message waiting indicator 18
- missed call indicator 45
- missed calls indicator 24

Missed Calls message 45
my telephone number 12

N

network settings 61
no service indicator 23
number
 viewing your number 12

O

optional accessory 6
optional feature 6
outbox 50

P

passwords. *See* codes
phone
 alert, setting 36
 alert, turning off 10, 11,
 42
 answer options 37
 automatic location
 information 38
 codes 34

location 38
locking 34
network settings 61
security code 34
unlock code 34
unlocking 10, 34, 35
phone number
 attaching numbers 45
 redialing 41
 storing in Contacts 51
 viewing your number 12
photo
 downloading 50
 sending 15
 taking 15
picture
 downloading 50
 screen saver 38
 viewing 64
 wallpaper 37
picture message
 receiving 18
 sending 16

power key 10

R

received calls list 44
recent calls 44
recycling 83
redial
 automatic redial 41
 busy number 41
right soft key
 functions 21
ring alert
 setting 11, 36
 turning off 10, 11, 42
ringer volume, setting 10
ringtone
 downloading 50
roaming indicator 22

S

safety information 70
safety tips 84
screen saver 38

- security code
 - changing 34
 - default 34
- send key 10, 11, 44
- signal strength indicator 22
- silent alert, setting 36
- silent ring alert, setting 11
- soft keys
 - functions 21
- sound
 - downloading 50
- sound on & vibrate on
 - indicator 24
- Speaker On message 33
- speakerphone indicator 24
- speed dial 45
- SSL indicator 22
- standby time, increasing 38
- storing a call 44

T

- telephone number
 - viewing your number 12

- tethered indicator 22
- text
 - character chart 30
 - entering 27
 - entry mode, selecting 28
- text entry mode
 - selecting 28
- travel charger 9
- TTY indicator 23

U

- unlock
 - phone 34
- unlock code
 - bypassing 35
 - changing 34
 - default 10, 34, 35
 - entering 10
 - forgetting 35

V

- vibrate alert
 - setting 36
 - turning off 10, 11, 42

- vObject, defined 18
- voice call indicator 23
- voice privacy indicator 22
- voicemail 46
- voicemail indicator 24
- volume
 - earpiece 10
 - ringer 10
- volume keys 10

W

- wallpaper 37
- warranty 77
- WHO information 82

- U.S. patent
Re. 34,976