

User guide.

verizon

sonim
BUILT FOR LIFE™

Copyright © 2017 Sonim Technologies, Inc.

SONIM and the Sonim logo are trademarks of Sonim Technologies, Inc. Other company and product names may be trademarks or registered trademarks of the respective owners with whom they are associated.

Disposal of Old Electrical and Electronic Equipment



This symbol indicates that within the countries in the European Union, this product, and any enhancements marked with this symbol, can not be disposed as unsorted waste but must be taken to separate collection system at their end-of-life.

Disposal of Battery



Please check local regulations for disposal of batteries. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Guideline for Headphone and Earphone



To prevent possible hearing damage, please do not listen at high volume levels for long periods.

General Information ————— 7

Phone Models Covered
Sonim Support Information

Safety Guidelines ————— 8

SAR Information
Avoid High Temperatures
Battery Disposal
Personal Medical Devices
Child Safety
Emergency Calls

Battery Usage Guidelines ————— 13

Battery Usage
Charging the Battery
Verifying and Optimizing Battery Usage
Tips to Extend the Battery Life

Getting Started ————— 15

What Is In the Box?
Phone Specifications

Your Sonim XP5 ————— 16

Switching On
Setting Up Your Phone
Managing Home Screen
Notification Bar Icons
Phone Operations Without SIM Card
Setting Up and Using Lock Screen
Changing the Wallpaper
Taking a Screenshot
Text Entry Options
To Enter a Word
Keypad Functions

Managing Phone Settings ————— 24

Time and Date Settings
Language and Input Settings
Display Settings

Power Saving Settings
Connecting a PC Using USB Connection
Viewing Device Details
Optimizing Memory Usage

Managing Wireless and Network Settings ——— 27

Connecting to Wi-Fi Network
Connecting to Bluetooth Devices
Optimizing Data Usage
Activating Airplane Mode
Setting Up Tethering & Portable Hotspot
Setting Up Wi-Fi Hotspot
Activating Bluetooth Tethering
Managing Mobile Network

Managing Personal and System Settings ——— 31

Managing Security Settings
Locking Your Screen
Encrypting Phone Data
Locking Your SIM Card
Managing Credential Certificates

Managing Phone Security Settings ————— 32

Location Access
Backup and Restore Data
Protecting Your Phone from Harmful Applications

Managing Contacts ————— 33

Add a New Contact
Viewing Contact Details
Sending a Message from Contacts
Dialing a Number from Contacts
Editing the Contact Details
Importing SIM Card Contacts to Phone
Exporting Phone Contacts to SIM Card
Exporting Phone Contacts to Storage
Managing Contact Settings
Managing Phonebook Settings
Searching Contacts

Deleting a Contact	
Managing Calls —————	36
Making a Call	
Dialing a Number via Contact	
Adding a Contact from Phone Screen	
Viewing Call History	
Deleting Call History	
Managing Call Settings	
Changing Ringtones and Sound	
Default Notification Ringtone	
Keypress Tone	
Other Sounds	
Pulse Notification	
HAC Mode	
Dual Mic	
FENS	
Editing Quick Responses	
Activating Vibrate Mode	
Conference Calling	
Sending Messages —————	40
Sending SMS/MMS Messages	
Managing Message Settings	
Deleting Messages	
Emergency Alerts	
Using the Phone Keypad —————	43
Enter and Edit Text	
Phone Dictionaries	
Launching and Activating PTT+ Application ———	44
Launching PTT+ Application	
PTT Overview	
Managing PTT Presence —————	47
PTT Presence Status	
Creating PTT Contacts —————	49
Adding PTT Contacts	
Adding Contacts from Native Phonebook	
Adding PTT Contacts Manually	
Adding PTT Contacts by Administrator	
Creating PTT Groups —————	52
Adding PTT Groups	
Adding Favorite Contact and Group —————	53
Adding Favorite Contact	
Adding Favorite Group	
Making PTT Calls to Individuals and Groups — — —	55
Initiating PTT Private Call	
Initiating PTT Group Call	
Initiating PTT Quick Group Call	
Managing Alerts —————	60
Instant Personal Alert	
Receiving Personal Alert	
Missed Call Alert	
Managing PTT Contacts and Groups —————	62
Editing PTT Contact	
Deleting PTT Contact	
Editing PTT Group	
Deleting PTT Group	
PTT Feature Overview —————	66
Supervisor Privilege	
IPA and Missed Call Pending Notification	
Manual Dial for PTT Call	
PTT Settings Overview —————	68
PTT Settings	
PTT Call & Alert From Native Phonebook & History —————	77
PTT call from Native Phonebook	
PTT Private Call from Native Call History	
Manual Logout and Login —————	78

Manual Logout	
Re-logging to PTT+ Application	
App Updates	80
Settings	
Sonim Setup Wizard	83
Sonim Setup Wizard	
Introduction	
Provisioning the Device Using QR Code	
Accessing Sonim Web Provisioning	
Installing and Using Applications	85
Camera	
Calendar™	
Alarm	
Clock	
Calculator	
Sound Recorder	
Music Player	
FM Radio	
File Explorer	
End User License Agreement	88
License	
Comprehensive 3-Year Warranty	
Warranty Registration Application	
Our Warranty	
What We Will Do	
Phone Care	
Conditions	
Accessories	
Customer Services	92
Billing and Customer Service	
Federal Communication Commission Interference (FCC) Statement	93
FCC Statement	
FOR PORTABLE DEVICE USAGE (<20cm from body/	

SAR)	
Règlement IC	95
FOR PORTABLE DEVICE USAGE (<20cm from body/	
SAR needed)	
Index	96



COMPREHENSIVE 3-YEAR WARRANTY

6

Please register your phone at www.sonimtech.com/register, to receive product information and updates.

Sonim devices are covered by a 3-year comprehensive warranty. The removable battery is covered by a 1-Year limited warranty. For more information related to the warranty, please refer to the warranty section “Comprehensive 3-Year Warranty” on page 88.

Congratulations on the purchase of your Sonim XP5 LTE feature phone. It has an intuitive, feature-rich user interface with a One-Touch Push-to-Talk design for instant calls to your most frequent contacts. Your XP5 also boasts two front facing speakers, reaching up to 104dB, which enable clear communication in the loudest environments.

Phone Models Covered

This user guide covers the Sonim XP5 phone with the model number XP5700. The model name can be read on the phone label under the battery.

Sonim Support Information

For additional product and support information, visit www.sonimtech.com.

Options Commonly Used Across Menu Items

The following are common actions used across various menu items:

OK	Confirms an action. Use the Center navigation key to perform this function.
BACK	Use this key to display the previous screen.
MENU	Moves the current working application to the recent applications list/background and displays menu screen.

RECENT

Displays the thumbnails of the applications that you have worked on recently. To remove any application from this list, Select **Remove from list** from option.

Please read and understand the following safety guidelines before you use the phone. These guidelines provide details to enable you to operate your phone safely and conform to any legal requirements regarding the use of cellular phones.



Do not use the phone at a refueling point. Observe restrictions when using radio equipment at fuel depots, chemical plants or where blasting operations are in progress.



Electrical interference may obstruct the use of your phone. Observe restrictions in hospitals and near medical equipment.



Switch off your cellular phone when in an aircraft. Wireless phones can cause interference or danger to an aircraft. In an aircraft, the phone can be used in flight mode.



Do not expose the battery to high temperatures (in excess of 55°C).



Adhere to road safety laws. Do not hold/use a phone while you are driving; find a safe place to stop first. Use hands-free microphone while you are driving.



Avoid using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.



Use only Sonim XP5 approved charging equipment to charge your phone and avoid damage to your phone.



The symbol of the crossed-out wheeled bin indicates that this product, and any enhancements marked with this symbol, cannot be disposed as unsorted waste but must be taken to separate collection systems at their end-of-life.



Ensure that only qualified persons install or repair your phone.



The Sonim XP5 is water-proof and can be submerged to 2 meters for 1 hour.

- The rubber cover of the charging connector and audio connector must be properly connected to avoid deposits of water drops on these connectors when the phone is immersed in water.
- Water droplets may condense under the display cover if the phone is immersed in water with significant drop in temperature. This does not indicate water leakage. The droplets disappear at room temperature.

The Sonim XP5 is dust-resistant, rugged and shock-resistant. However, it is not dust-proof or unbreakable if subjected to overwhelming impact. For best results and long product life, one should protect the Sonim XP5 from salt water, dust and strong impacts.

SAR Information

The Sonim XP5 has been certified in compliance with the Government's requirements for exposure to Radio Waves.

When communicating over the wireless network, the mobile phone emits via the radio frequency waves and low levels of radio energy. The Specific Absorption Rate, or SAR, is the amount of RF energy absorbed by the body while using the phone and is expressed in watts/kilogram (W/kg).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, for example, ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.). These guidelines establish permitted levels of radio wave exposure for the general population.

Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

SAR Data Information for residents in the United States and Canada

The limit recommended by ICNIRP is 1.6 W/kg averaged over one (1) gram of tissue.

The highest SAR value for the Sonim XP5700 phones when tested by Sonim for use:

- By the ear is 1.32 W/1kg.
- Worn on the body is 1.06 W/1kg provided that the phone is used with a non-metallic accessory with the handset at least 1 cm from the body, or with the original Sonim accessory intended for this phone

and worn on the body.

HAC Rating

The FCC has created a rating system for cellular phones regarding their HAC-related performance. This rating helps consumers with hearing disabilities to find phones that work well with their hearing aid devices. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19:2011.

ANSI C63.19 contains two rating standards: an "M" rating from 1 to 4 for hearing aids operating in microphone mode, and a "T" rating from 1 to 4 for hearing aids operating in telecoil mode.

M-Rating stands for Microphone rating and indicates the amount of reduction of RF interference between the telephone and the hearing aid in acoustic coupling mode (also called microphone mode).

Phones rated M3 or M4 meet FCC requirements and generate less interference to hearing devices set in microphone mode. T-Rating stands for Telecoil rating and represents inductive coupling with hearing aids that are operating in telecoil mode. A telecoil is a small piece of tightly wrapped wire, built into some hearing aids. While the microphone of a hearing aid picks up all sounds, the telecoil only picks up an electromagnetic signal from the telephone. Thus, users of telecoil-equipped hearing aids are able to communicate over the telephone without the amplification of unwanted background noise.

Phones rated T3 or T4 meet FCC requirements and generate less interference to hearing devices set in telecoil mode.

A combination of M-rating and T-rating defines the final HAC rating and is a deciding factor in selecting

cellular phones for people with hearing problems. A HAC compliant phone could be rated:

- M3/T3
- M3/T4
- M4/T3
- M4/T4

These ratings assist hearing device users to find phones that are compatible with their hearing devices. Ratings are shown on the phone's box or label. The ratings are not guaranteed for suitability. The results vary depending on the individual's hearing loss and the immunity characteristics of the used hearing device, i.e. its resistance to interference. The best way to evaluate the suitability of the phone is to try it with the intended hearing aid device.

Sonim XP5 has been tested for hearing aid device compatibility and complies with the Federal Communications Commission (FCC) requirements. Sonim XP5 is rated M3/T4.

Avoid High Temperatures

Leaving the device in hot or cold places, such as in a closed car in summer or winter conditions, reduces the capacity and lifetime of the battery. For the best results, try to keep the device between -20°C and +55°C (-4°F and 131°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Battery Disposal

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations and recycle when possible. Do not dispose as household waste. Do not dismantle, open or shred cells or batteries. In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. In the event of leak or a hazard seek medical help immediately.

Personal Medical Devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, for example in your breast pocket. When using the mobile phone, place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information. For other medical devices, consult your physician and the manufacturer of the device. Comply with instructions to switch off the device or deactivate the RF transmitter when required, especially when posted in hospitals and airplanes. Equipment used in these places may be sensitive to radio waves emitted from the device and adversely affect their operation. Also, observe restrictions at gas stations or other areas with flammable atmospheres or when close to electro-explosive devices.

Child Safety

Do not allow children to play with your mobile phone or its accessories. Keep it out of their reach. They could hurt themselves or others, or could accidentally damage the mobile phone or accessories. Your mobile phone and its accessories may contain small parts, which could be detached and create a choking hazard.

Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies). Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Battery Usage

Sonim XP5 phone comes with a removable battery. For any battery related queries contact Sonim customer support.

Charging the Battery

We recommend that you charge your mobile phone for 4 hours before using for the first time.



There is a risk of explosion while charging if the battery has been replaced by an incorrect type.

3

Charging Animation/Icon

If the battery is being charged when the phone is switched off, a battery charging animation with charged percentage is displayed.

If the battery is being charged while the phone is switched on, the battery charge icon on the home screen shows animation indicating that the battery is being charged. After the phone is fully charged, the battery full pop-up is displayed and you can disconnect the charger from the phone.



Verifying and Optimizing Battery Usage

You can check the battery usage status and also close some applications to save battery power. In the menu screen, select **Settings** (⚙️) > **Battery** (🔋).

The current battery charge status (charging or not charging) and the charge level details are displayed on the top of the screen.

The discharge graph on the top of the screen shows the battery level over time since you last charged the device, and how long you have been running on battery power.

The list at the bottom of the screen shows the breakdown of battery usage for individual apps and services. The details screen for some apps includes buttons that allow you to adjust settings affecting power usage, or stop the app completely.

1

Insert Charger

Insert the charger plug into a power outlet.

2

Connect to Phone

The charging port is located in the lower side of the phone, below the back cover. Insert the charger connector to the charging port.

Tips to Extend the Battery Life

Follow these tips to extend your phone's battery life.

- If you are not using Wi-Fi, Bluetooth or GPS, use the **Settings** to turn them off. The GPS setting is located in **Settings > Location**.
- Set screen brightness to **Low** and set a shorter Sleep timeout (15 seconds). The display settings are located in **Settings > Device > Display**.
- If you are travelling and do not have access to mobile or Wi-Fi network, switch to Airplane mode: select **Airplane Mode** from **Quick settings**.

What Is In the Box?

The list of items in the Sonim XP5 phone box are:

- Sonim XP5 phone with removable battery
- Quick Start Guide
- USB Data Cable
- Wall Charger
- Screw driver for battery cover

Phone Specifications

Feature	Description
Memory	Total Memory: 4 GB Total User Storage: 1.8 GB
Wireless	Wi-Fi - 802.11 a/b/g/n/r/e with hotspot function (Max. 5 connections) Bluetooth 4 + LE
Connectivity	Charger port name: 5 pins water-proof magnetic USB 2.0 3.5 mm headphone jack
Battery	3180mAh (4 pins) embedded Standby: up to 450 hours (18 days) Talk time: up to 27 hours Music playback: up to 50 hours Video playback: up to 15 hours Web browsing: up to 11 hours

Feature	Description
Media format supported:	
Voice Recorder	Voice AMR coding; one hour recording is expected
Music player	Codec support: MP3, WMA 9, AAC, AAC+, eAAC+, WMA, WAV, OGG, AMR_NB/WB
Video player	AVI, MP4, and 3GPP

Sonim XP5 Phone



Switching On

Press and hold **ON/OFF Red** key for 2 seconds.

When the phone is switched on, it tries to register with the network. After successful registration, the name of the service provider is displayed.



Ensure that a valid SIM card is inserted in your phone.

 
Setting Up Your Phone

For instructions on using your phone's buttons, charger, battery, and other hardware features, check the printed **Quick Start Guide** provided along with your phone.

When you power ON the phone for the first time, a Welcome screen is displayed.

Managing Home Screen

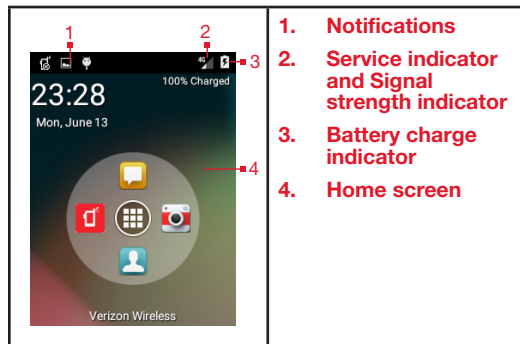


After you complete the phone setup, the home screen is displayed. The home screen is the beginning point to access all the device's features.




1. **Notifications**
2. **Service indicator and Signal strength indicator**
3. **Battery charge indicator**
4. **Home screen**

The navigation keys are located below the display screen.

Key	Description
	Back - Opens the previous screens in the working sequence till the home screen is displayed. Once the home screen is displayed, it remains there even when you press the back key.
	Menu - moves the current working application to the recent applications list/ background and displays menu screen.

Key	Description
	Options - displays the options for the currently active screen.
	Clear - Clears the entered text and deletes the selected file and contacts.
	Torch - Enables the flashlight.

 








The **Menu Option** () is always positioned in the center of the favorites tray. Select it to view all the applications.











The **Notifications** on the top of the display screen provides details about various notifications such as missed calls, new messages and missed alarms.








The **System Icons** on the right display the current device status such as wireless and network connection strength, and battery level.

Notification Bar Icons

The icons displayed at the top of the screen provides information about the status of the device. The details such as battery charge status, and data service are displayed when the phone is in standby mode. Other indicators such as Bluetooth connectivity status, airplane mode, alarm and call forward (only if Always forward is enabled) and Wi-Fi connectivity are displayed, if the feature is activated.

Icon	Description
	Notification icon
	Battery level indicator
	Battery charging in progress
	No signal
	Signal strength
	No SIM card
	Wi-Fi connected
	Bluetooth activated
	Call in progress

Icon	Description
	Missed call
	New SMS or MMS
	Alarm activated
	Silent mode activated
	Vibration mode activated
	Roaming
	Airplane mode activated
	Error/information notification - attention required
	Screenshot captured
	Music is played

Icon	Description
	Device storage space is running out
	PTT Available status icon
	PTT Offline status icon
	PTT Do Not Disturb status icon
	1X
	Connected as a media device
	USB Debugging connected

Phone Operations Without SIM Card



You can perform the following operations without inserting a SIM card in your phone.

- Make emergency calls.
- View and modify all settings except data usage and mobile network related settings.

- Activate and share files through Bluetooth.
- Access the Internet using Wi-Fi connectivity.
- Access your phonebook, my files, multimedia files, all tools and applications.
- View and modify your profile settings.

Setting Up and Using Lock Screen

You must lock your phone to protect it from unauthorized access.

1. From **Home** screen, select **Options key > System settings** or select **Menu > Settings** ().
2. Scroll down and select **Security** (), located under **Personal** settings.
3. Select **Screen lock** and select one of the following options to configure phone:
 - None
 - Press and hold * key.
 - **PIN:** When enabled, enter your own PIN value. When the phone is locked, unlock it using the PIN.

When the phone is locked, you can answer an incoming call, without unlocking the phone.

Changing the Wallpaper

You can set an image or a photo stored in your phone as your home screen wallpaper. To change the wallpaper, select from one of the following Wallpaper collections.


1. From **Home** screen, select **Options key > Wallpaper**. Select **Choose wallpaper from the**

popup.

- **Wallpapers:** includes images that are pre-loaded with the phone.
- **Gallery:** includes photos and screenshots taken using the phone's camera.

Taking a Screenshot

You can take the screenshot of the current screen and it is stored in your phone's gallery. To take a screenshot:

1. Ensure that the image to be captured is displayed on the current screen.
2. Press the **Power** and **Volume** down button simultaneously. The screenshot is captured and stored in the gallery. A screen **Capture** icon () is also displayed on the notification bar.

Text Entry Options

When you enter the text message, you can change the text entry options by pressing the # key. The current text entry options are displayed in the top bar.

The various text entry options are:

- **abc:** Enter all the text in lower case.
- **Abc:** Enter the first letter of the sentence in upper case.
- **ABC:** Enter all the text in upper case.
- **123:** Enter the numbers.
- **T9En:** Enter the text based on the T9 dictionary. Only the first letter of the paragraph is in upper case (capitalized).

- **T9EN:** Enter the text based on the T9 dictionary. All the letters are in upper case (capitalized).
- **T9en:** Enter the text based on the T9 dictionary. All the letters are in lower case.

the letters are in lower case.

To Enter a Word

1. Start by pressing the numeric keys from **2** through **9** only once for the required letter.

Ex 1: To enter the word Good, press 4-6-6-3. The word displays on the screen as you type.

Ex 2: To enter the word Hello, press 4-3-5-5-6. The word displays on the screen as you type.

2. If the word does not display correctly, press right navigation key to scroll through alternative word choices. Press either the center **navigation key** or **0** key to accept the word.

To Insert a Number:







1. Press the key labeled with the number you want and use the navigation key to scroll to that number as above.
2. To insert a symbol, press and hold the numeric key **1** and use the **navigation key** to scroll and select a symbol.









The different methods to enter the text:

- **T9EN:** Enter the text based on the T9 dictionary. All the letters is in upper case (capitalized).
- **T9En:** Enter the text based on the T9 dictionary. Only the first letter of the paragraph is in upper case (capitalized).
- **T9en:** Enter the text based on the T9 dictionary. All

Keypad Functions

The following table displays the various keys and the corresponding functions they perform:

Keypad key	Operations
 CALL END/REJECT ON/OFF	<ul style="list-style-type: none">• Press to end a call.• Press to wake up display.• Press to reject an incoming call.• Press and hold to power ON/OFF the device.
 CALL/ACCEPT/SEND	<ul style="list-style-type: none">• Press to answer an incoming call.• After entering a phone number, press to make a call.• Press while in Standby mode to access last received or dialed call list.
 BACK	<ul style="list-style-type: none">• Present above the Torch key. Press this key to go back to the previous screen.• You can press till you reach the Home screen.
 MENU	<ul style="list-style-type: none">• Press to see the Main menu.• Press and hold to see the recent applications.
 CLEAR	<ul style="list-style-type: none">• Press to clear the entered text.• Press to delete a selected file.• Press to delete a selected contact.
 TORCH	<ul style="list-style-type: none">• Press and hold to ON/OFF the flashlight.

 OPTION	<ul style="list-style-type: none"> • Press to see the list of operations that can be done on current application.
 OK KEY (CENTER)	<ul style="list-style-type: none"> • Press to perform a specific operation on a selected application.
 NAVIGATION KEYS	<ul style="list-style-type: none"> • Press to navigate in up, down, left and right directions.
ALPHA-NUMERIC KEYS	<ul style="list-style-type: none"> • Press the required keys (0-9) to enter the desired phone number and press  to make a call. • Enter text while in the text editor.
	<ul style="list-style-type: none"> • Press and hold in standby mode to access your Voicemail.
	<ul style="list-style-type: none"> • Press and hold to display '+' used for dialing an international number, while in standby mode. • On editor screen, press 0 to get a blank space in T9 or normal mode.
	<ul style="list-style-type: none"> • Press or press and hold to change the language, while entering the text. • Press and hold to lock/unlock the keypad.
	<ul style="list-style-type: none"> • While entering text, press to switch between various input modes. • Press and hold to list various input modes while entering the text.

Time and Date Settings

You can set and display the date and time on the phone. You can also select the display format.

1. From **Home** screen, select **Menu > Settings** (⌘).
2. Scroll down and select **Date & Time** (🕒), located under **System**.
3. Select one of the following options to configure phone:
 - To synchronize the date and time with the network provided time, enable **Automatic date and time**.
 - To synchronize the time zone with the network provided time enable, **Automatic time zone**.
 - To set the date manually, select **Set date**. Scroll and select the date, month and year. Select **OK** (from **Cancel** and **OK**).
 - To set the date manually, select **Set time**. Scroll and select the hour and minute. Select **OK** (from **Cancel** and **OK**).
 - To set the time zone, select **Select time zone**. Scroll and select your time zone.
 - To set the clock to 24-hour format enable **Use 24-hour format**. By default, the phone is set to 12-hour format.
 - To set your preferred date, select **Choose date format**. The date formats supported are Regional (the standard format supported by that country or region, **MM DD YYYY, DD MM YYYY, YYYY MM DD** with / as the date separator).

Language and Input Settings

You can set the phone's language to either US Spanish or English.

1. From **Home** screen, select **Menu > Settings** (⌘).
2. Scroll down and select **Language & input** (🗣️), located under **Personal** settings.
3. Select **Language** > select **English** or **Espanol** as your preferred language.

All the menu items, user feedback messages and text entry language are displayed in the set language.

Personal Dictionary Settings

The default keypad input language is set to **English (US)/ Spanish (US) - T9 format**. This cannot be modified.

Speech Settings

- Select **Text-to-speech output** to access speech rate.
 - Select **Speech rate** to set the speech input rate to a comfortable speed.
- Select **Listen to an example** to verify the set speech rate.
- Select **Default language status**, to view the default language for speech input.

Display Settings

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Scroll down and select **Display** (🔧), located under **Device** settings.
3. Set one of the following options to configure your phone's display:
 - **Brightness level:** Set the brightness of the phone display. This also optimizes the battery power consumed.
 - **Wallpaper:** Set the wallpaper for your home screen. You can select from one of the following wallpaper collections:
 - **Gallery:** includes photos and screenshots taken using the phone's camera.
 - **Wallpapers:** includes images that are pre-loaded with the phone.
 - **Sleep:** Set the sleep time so that the screen brightness is turned down after specified time of phone inactivity. This setting also optimizes the battery power.
 - **Daydream:** With **Daydream**, you can set up screensavers that display photos, colourful backgrounds and more when your device is charging or docked. After you turn **Daydream ON**, choose what your device will display from the list below. You can always test your Daydream by choosing **Start Now** at the bottom of the screen.
 - **Font size:** Set the font size of the text displayed in the screen.

Power Saving Settings

Viewing Battery Life

To view the battery life when all the apps are running:

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Scroll down and select **Battery** (🔋), located under **Device** settings.
The battery life and list of running applications is displayed.

Force Stopping an Application

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Scroll down and select **Apps** (📱), located under **Device** settings.
3. Select the application to be force stopped.
4. Select **Force stop** to stop an application.



If you force stop an app, it may misbehave.

Connecting a PC Using USB Connection

You can connect your phone to a PC as a Media device (MTP) using a USB cable. When the phone is connected to the computer via a USB cable, the following two options are displayed:

- **Media device (MTP):** Select this to use the phone as Media device (MTP) to transfer data such as music, pictures, and videos between your Sonim phone and your computer.
- **Camera (PTP):** Select this to transfer photos and

files that do not support MTP. This transfer method is commonly used for MAC.

USB Tethering

To perform USB Tethering:

Select **Settings > More > Tethering and Portable Hotspot > Enable USB Tethering**.

The user should activate mobile data or get connected to Wi-Fi network.

- Delete unwanted files that are downloaded or created.
- Transfer files that would be required later to your computer.



When the phone is connected to the computer via USB cable, you can select only to charge the phone by pressing the Back button. You need not select the Media device (MTP) or Camera (PTP) option.



When the phone is connected to the computer via USB cable in Media device (MTP) mode phone memory is displayed in the computer.

Viewing Device Details

The device details such as system update status, model number, Kernel and baseband versions can be viewed.

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Scroll down and select **About Phone** (ℹ️), located under **System** settings.

Optimizing Memory Usage

You can optimize your phone's memory by performing the following tasks:

- Uninstall apps that are not required.

Connecting to Wi-Fi Network

Wi-Fi is a wireless network technology that can provide Internet access at distances up to 100 Feet, depending on the Wi-Fi router and surroundings, when you connect your mobile device to the wireless router.

You can access the Internet when you connect your XP5 to a Wi-Fi network. To connect your phone to a Wi-Fi network.

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Set the **Wi-Fi** to **ON** position, located under **Wi-Fi** settings.
3. Select **Wi-Fi**. A list of Wi-Fi routers present within your phone's accessible range are displayed.
4. Select your preferred network. Enter the WEP/ WPS/ WPA key (if it is a secured network) and select **Connect**. To verify the password before connecting, enable **Show password**.



It is always recommended to make your Wi-Fi router secure and also to connect your phone to a secure network.

Adding a New Network

To add a new Wi-Fi network

1. In **Wi-Fi settings** screen, select **Options key > Add network**.
2. Enter the following details:
 - **Network SSID:** The wireless network ID.
 - **Security:** Set the security type to None, WEP, WPA/WPA2 PSK, or 802.1x EAP.

3. Enable **Advanced Settings** to set the **Proxy details** and **IP settings**.

Editing a Network

1. Press and hold your preferred network.
2. Select **Modify Network**. The network setting details such as **IP address**, **Password**, **Proxy**, **IP Settings** are displayed.
3. Select **Save** to save the settings or **Cancel** to exit to the previous screen.

Forgetting a Network

1. Press and hold your preferred network.
2. Select **Forget Network**. The selected network is removed from the list.

Enabling WPS For your Router

To setup a secure Wi-Fi network, press **WPS Push button** in the **Wi-Fi network Settings** and press the **WPS button** in your router, when prompted.

Connecting to Bluetooth Devices

Bluetooth is short-range wireless communication technology used to communicate between the devices over a distance of about 8 meters (26.25 ft).

You can perform the following tasks using Bluetooth paired devices.

- Transfer media files and contacts between connected mobile devices using Bluetooth.
- Access the Internet through a Bluetooth device that is connected to a Wi-Fi router.
- Use Bluetooth connected headphones for playing

media file.

Pairing a Bluetooth Device

To activate Bluetooth and pair your XP5 phone with other Bluetooth devices:

1. From **Home** screen, select **Menu > Settings** (⌘).
2. Enable **Bluetooth** located under **Wireless & Networks** settings.

A list of accessible Bluetooth devices are displayed.

Ensure that Bluetooth is activated on the other device too.

3. Select your preferred device.
4. Confirm the pass key in the other device and select **Pair** in your phone.

The device is displayed in the Paired device list.

Editing Bluetooth Device Settings

1. Press **Center** key on preferred paired Bluetooth device.
2. A pop-up window is displayed with the name field editable. The cursor is placed and you can change the name.
3. Select **Forget** to remove the device from your paired list.
4. Enable **Media Audio** to connect the Bluetooth device for listening to media files.
5. Enable **Internet access** to use the paired Bluetooth device to access the Internet.

Optimizing Data Usage

Data usage refers to the amount of data utilized by your phone during data transfers through the Internet. The data usage charges are dependent of the wireless plan provided by your service provider.

To monitor your data usage, adjust your data usage settings.

1. From **Home** screen, select **Menu > Settings** (⌘).
2. Select **Data Usage** (📶) and enable **Set Cellular Data limit** to preset your data usage limit and to set an alert before reaching the preset limit.
3. Press **Center** key on red bar to set the Data usage limit. Mobile data access is disconnected automatically as soon as you reach this limit. You cannot access the Internet and related phone features do not work. You receive a notification once you reach the set data usage limit.
4. Press **Center** key on yellow bar to set data usage warning so that you receive an alert before reaching your set data usage limit.

Activating Airplane Mode

When your phone is set in airplane mode, network connectivity or mobile data connectivity is disabled. But you can access your camera, media files and other features that do not require mobile connectivity. To activate airplane mode:

1. From **Home** screen, select **Menu > Settings** (⌘).
2. Select **More** located under **Wireless & Networks** settings.
3. Enable **Airplane mode**.

Setting Up Tethering & Portable Hotspot

Using tethering and portable hotspot you can share your device's network connection with a computer or other devices, via USB, Wi-Fi, or Bluetooth. To activate USB Tethering:

1. From **Home** screen, select **Menu > Settings** (X).
2. Select **More** located under **Wireless & Networks** settings.
3. Select **Tethering & Portable hotspot**.
4. Enable **USB tethering**.

Setting Up Wi-Fi Hotspot

When you setup your phone as a Wi-Fi hotspot you can connect other devices to this phone through Wi-Fi and access the Internet.

1. From **Home** screen, select **Menu > Settings** (X).
2. Select **More** located under **Wireless & Networks** settings.
3. Select **Portable Wi-Fi hotspot**.
4. Select **Set up Wi-Fi hotspot**.
5. Enter **Network SSID**, **Security details** and **password** and select **Save**.

Activating Wi-Fi Hotspot

1. From **Home** screen, select **Menu > Settings** (X).
2. Select **More** located under **Wireless & Networks** settings.
3. Select **Tethering & Portable hotspot**.

4. Enable **Portable Wi-Fi hotspot**.

Activating Bluetooth Tethering

When you activate Bluetooth tethering, you can share your phone's Internet connection with other Bluetooth paired devices.

1. From **Home** screen, select **Menu > Settings** (X).
2. Select **More** located under **Wireless & Networks** settings.
3. Select **Tethering & Portable hotspot**.
4. Enable **Bluetooth tethering**.


Managing Mobile Network

You can view and modify your mobile service provider settings. To view and modify your mobile network settings:

1. From **Home** screen, select **Menu > Settings** (X).
2. Select **More** located under **Wireless & Networks** settings.
3. Select **Mobile networks**.
4. Enable **Standard Data** to access the Internet using your mobile network.
5. Enable **International Data** to have network connectivity when you are in a roaming network.
6. Select **Access Point Names** to view and edit the network access points. Select **New APN** to add a new access point.

You can activate emergency alerts to get emergency and important broadcast messages from your service

provider.

1. From **Home** screen, select **Menu > Settings** ().
2. Select **More** located under **Wireless & Networks** settings.
3. Select **Emergency** alerts. Enable the emergency alert message types such as extreme threats, severe threats and amber alerts that you would wish to receive.
4. Enable **Turn on notification** to receive notifications when alerts are sent to your phone.
5. Set the **Alert reminder**.

Managing Security Settings

You can activate and protect your phone from unauthorized access by configuring the security settings.

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Select **Security** (🔒) located under **Personal** settings. Enable and modify required security settings.

Locking Your Screen

1. Select **Screen lock** and select one of the following options to configure phone:
 - None
 - Press and hold * key.
 - PIN: When enabled, enter your own PIN value. When the phone is locked, unlock it using the PIN.

When the phone is locked, you can answer an incoming call without unlocking the phone.

2. Enable **Owner Info** to display your specific owner info in the lock screen. You can modify this detail whenever required.

* Press **End Call** button to wake up the display.

Encrypting Phone Data

You can encrypt your phone settings, download applications, contacts, messages data and media files.

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Select **Security** located under **Personal** settings.

3. Select **Encrypt phone** to encrypt your phone data. This will require a numeric PIN or password to decrypt the data whenever you power ON the phone.

Encryption takes at least an hour depending on the amount of data to be encrypted. Hence, ensure that your phone is fully charged before you encrypt it. If data encryption is interrupted, you might lose your phone data.

Locking Your SIM Card

You can activate and set a SIM lock to lock your SIM, whenever you power ON the phone.

1. Select **Settings > Security > Setup SIM/RUIM card lock**.

2. Enable **Lock SIM card**.

To disable this option, you must enter your SIM lock PIN.

3. Select **Change SIM PIN**. Enter the old pin and select **OK**.
4. Enter the new PIN and re-enter the same value when asked. Select **OK**.



Managing Credential Certificates

You can view, install, verify and manage the certificates installed in your phone.

- Select **Trusted Credentials** to view and verify the system and user certificates.
- Select **Install from Storage** to view and install new user certificates.

Location Access



You can enable and configure the **Location** settings.

1. From **Home** screen, select **Menu > Settings** (.
2. Select **Location** () located under **Personal** settings. Enable and modify required security settings.
3. Enable **Location**.
4. Set the **Location mode** to one of the following options:
 - **High accuracy:** uses AGPS, Wi-Fi, mobile networks, and other sensors to get the highest-accuracy location for your device. It uses location services to help estimate your location faster and more accurately.
 - **Battery saving:** allows your device to estimate your location using low battery-intensive location sources, such as Wi-Fi and mobile networks. It uses location services to help estimate your location faster and more accurately.
 - **Device only:** allows your device to estimate your location using GPS only. It uses the satellite information to provide location information. This mode may use more battery power and take longer to determine your location.

Backup and Restore Data

You can backup your phone data to memory card using backup and restore application. If you need to replace your device or erase its data, you can restore your data from where it was previously backed up.

To backup your data,

1. From **Home** screen, select **Menu key > Application** (.
2. Select **Backup & restore** (.

To prevent installation of application from unknown sources, disable the option **Unknown sources** from **System Settings > Security**.

Protecting Your Phone from Harmful Applications



Some applications can harm your device. It is recommended to verify apps in order to help prevent harmful software from being installed on your device.

You can use the phonebook to maintain phone numbers of your contacts. This feature enables you to add, dial phone numbers and send SMS and MMS messages.


To access the contacts:

From **Home** screen, select **Contacts** (). The contacts saved in the phonebook are displayed.

Add a New Contact

- To add a new contact, select **Menu > Contacts > Options key > Add Contact**. Enter the contact details and press **Options key > select Save** to save the contact.
- You can also enter a number using dialpad () and select **Add to contacts** () to add a new contact. Select **Save** to save the contact.


Viewing Contact Details


- From **Home** screen, select **Contacts** ().
- Scroll to the required contact and select the contact to view the contact details.

Sending a Message from Contacts

You can send SMS and MMS messages to contacts.

Sending SMS/MMS


- From **Home** screen, select **Contacts** ().
- Scroll to the required contact and select and open that contact.
- Press **Menu** option and select **Message**, opens a **Message** window.

- (Optional). Press **Options** key > select **Attach** (), to attach a multimedia file.
- Type the message and press **Options** key > select **Send**.




If you attach a media file or a contact to your SMS message it is converted to an MMS message automatically.


Dialing a Number from Contacts

- From **Home** screen, select **Contacts** ().
- Scroll to the required contact and select the contact to view the contact details.
- Select the required phone number to dial the contact or press **OK** key to dial the default number.

Editing the Contact Details

- From **Home** screen, select **Contacts** ().
- Scroll to the required contact and select the contact to view the contact details.
- Press **Options key > Edit**.
- Edit the required details and select **Save**.


Importing SIM Card Contacts to Phone

- From **Home** screen, select **Contacts** ().
- Select **Options key > Import/export**.
- Select **Manage SIM card contacts**.

The list of contacts stored in your SIM card is displayed.


4. Select the contact to be moved to the phone. The contact is imported to the phone address book.

Exporting Phone Contacts to SIM Card

1. From **Home** screen, select **Contacts** ().
2. Select **Options key > Import/export**.
3. Select **Export to SIM card**.

The contacts are exported to the SIM card.


Exporting Phone Contacts to Storage

1. From **Home** screen, select **Contacts** ().
2. Select **Options key > Import/export**.
3. Select **Export to storage**.

All the contacts are exported to your computer as a .VCF file.

Sharing Contacts via MMS and Bluetooth


You can send contact information by MMS or Bluetooth.

1. From **Home** screen, select **Contacts** ().
2. Scroll to the required contact and select the contact.
3. Select one of the following options to share the required contact:
 - **Messaging:** Send the contact details as a multimedia message to any mobile phone.
 - **Bluetooth:** Send the contact details to a Bluetooth device paired with your phone.

Select the Bluetooth device to share the contact.


Managing Contact Settings

You can edit and modify ringtone and call receiving settings for individual contacts.


1. From **Home** screen, select **Contacts** ().
2. Scroll to the required contact and select the contact to view the contact details.
3. Select **Options key** and select one of the following:
 - **Set ringtone** to set a specific ringtone for that contact.
 - Enable **All calls to voicemail** to forward all incoming calls from that contact to your voice-mail box.

Managing Phonebook Settings

You can set the sort list to view the contacts and also the first or last name of the contact to be displayed first.

1. From **Home** screen, select **Contacts** ().
2. Select **Options key > Settings**. Set the following options:
 - **Sort list by:** Sort the contact names by first name or last name.
 - **View Contact names:** Set the contact display name to first name or last name.



Searching Contacts

1. From **Home** screen, select **Contacts** ().

2. Select **Options key > Search** and enter the first few letters/numbers of the contact name/phone number to be searched.



All the contacts containing the search text are displayed.

Deleting a Contact


1. From **Home** screen, select **Contacts** ().
2. Scroll to the required contact and select the contact to view the contact details.
3. Select **Options key > Delete** or press **Clear** () **key**. The contact is deleted after the confirmation.

Making a Call


1. From **Home** screen, select **Menu > Phone** ().

The phone screen with last dialed number, Favorites & Frequently called list, Call history () and dial pad () is displayed.




To dial a number use one of the following options:

- **Call history:** Select the call history icon (). Select the contact/number and press the green key to make a call.
- **Frequently called contacts/numbers:** Select the specific contact/number from the frequently called numbers to make a call.

Dialing a Number via Contact



1. From **Home** screen, select **Menu > Contacts** ().
2. Scroll to the contact and select the contact. The contact details are displayed.
3. Select the required phone number to call the contact.

Adding a Contact from Phone Screen



1. From **Home** screen, select **Menu > Phone** ().
2. Select the **Call history** icon ().
3. Scroll to the saved contact and press **OK** to open the number you want to add.
4. Select **Add to contacts** () and press **OK**.
5. Select **Menu key**.
6. Select **Create New Contact**.

7. Enter the contact details, press menu button and select **Save**.

Viewing Call History

1. From **Home** screen, select **Menu > Phone** ().
2. Select the **Call history** icon () to view all recently called, received, and missed calls.


Deleting Call History

1. From **Home** screen, select **Menu > Phone** ().
2. Select the **Call history** icon ().
3. Press the **Options** key.
4. Select **Clear call log** to delete the call history.



Managing Call Settings

You can change the incoming call ringtone, enable vibrate when ringing and enable audible press tone.

To view and modify call settings,

1. From **Home** screen, select **Menu > Phone** ().
2. Press the **Options** key from dialpad screen.
3. Select **Call settings**.

Changing Ringtones and Sound

1. From **Home** screen, select **Menu > Settings** ().
2. Select **Sound & notification** () located under **Device settings**.
3. Select **Volumes** to set the master volume separately for music, ringtones & notifications, and alarms.

You can also use the physical volume control on the phone to raise or lower volume of whatever sound is currently playing.

4. Select **Phone ringtone**.
5. Select the ringtone from the **Phone ringtone** list and select **Ok**.



PTT incoming calls, instant personal alerts, missed call alerts, tones, vibration and volumes will follow the user's device settings.

Default Notification Ringtone

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Select **Sound & notification** (🔊) located under **Device settings**.
3. Set the **default notification ringtone** to **Sonim Wave**.

Keypress Tone

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Select **Sound & notification** (🔊) located under **Device settings**.
3. Select the checkbox next to **Key press tones**.

Other Sounds

• Dial Pad Tones:

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Select **Other sounds** located under **Device**

settings.

3. Select the checkbox next to **Dial pad tones**.

• Screen Locking Sounds:

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Select **Other sounds** located under **Device settings**.
3. Select the checkbox next to **Screen locking sounds**.



• Emergency Alert Tone Settings:

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Select **Other sounds** located under **Device settings**.
3. Go to the **Other Sounds** and select **Emergency Tone**.
4. Tap on the **Emergency Tone** to choose from the drop-down list with the below options:
 - Alert
 - Vibrate
 - Silent



Pulse Notification

1. From **Home** screen, select **Menu > Settings** (⚙️).
2. Select **Sound & notification** (🔊) located under **Device settings**.
3. Select the checkbox next to **Pulse notification light** to enable it.


 
HAC Mode

1. From **Home** screen, select **Menu > Settings** ().
2. Select **Sound & notification** () located under **Device settings**.
3. Select the checkbox next to HAC mode to enable it.

Dual Mic

1. From **Home** screen, select **Menu > Settings** ().
2. Select **Sound & notification** () located under **Device settings**.
3. Select the checkbox next to **Dual-mic** to enable it.

FENS

1. From **Home** screen, select **Menu > Settings** ().
2. Select **Sound & notification** () located under **Device settings**.
3. Select the checkbox next to **FENS** to enable it.

Editing Quick Responses

When you are not able to answer an incoming call, you can send a quick response to the caller.

To view and edit quick responses, in the **Call settings** screen, select **Quick responses**, select the specific response message to edit. Edit the message and select **OK**.

Activating Vibrate Mode

In the **Call settings** screen, enable **Vibrate when ringing**

to receive both ring and vibrate alerts for an incoming call. To turn off the vibration mode, disable the **Vibrate when ringing** option.

Setting TTY Mode

If you enable TTY mode, hearing-impaired individuals can send and receive phone calls as text over the phone.

1. In the **Call settings** screen, select **TTY mode** to view and modify TTY mode settings.
2. Set one of the following options:
 - **TTY Off:** disables TTY mode.
 - **TTY Full:** enables TTY mode for both incoming and outgoing calls. Set this for both hearing and voice assistance.
 - **TTY HCO:** enables TTY mode only for incoming calls. Set this for only hearing assistance.
 - **TTY VCO:** enables TTY mode only for outgoing calls. Set this for only voice assistance.

38

Conference Calling

Conference calling lets you add several people to a mobile phone call. You can connect the other callers at the start of your call, or add people to the call that is already in progress.

 


VoLTE also supports 6-Way conference calling.

3-Way Conference Calling for CDMA

1. The first call is initiated and connected.

2. Press **menu** option key and select **Add call** option.
3. Dial the second call and the first call is placed on the hold.
4. Again press menu option key and select **Add call** option.
5. Dial 3 to activate the conference call.

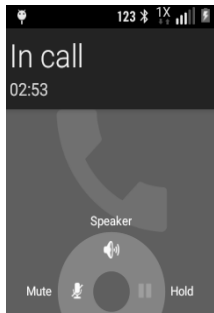

3-Way Conference Calling for VoLTE

 
1. The first call is initiated and accepted at the MT side. Now the call is in connected state.
2. Press **menu** option key and select **Add call** option to add the second call.

Now, the dialling screen with first call is on hold is displayed.
3. The second call is connected and the first call is put on hold.
4. You have an option to swap the call by pressing

Hold.

5. You can merge the calls. Press **menu** option key and select **Merge calls**.

The following screen is displayed when both the calls are merged:

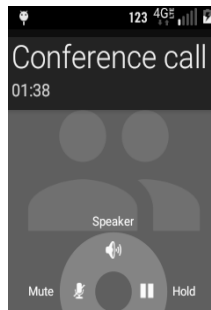


SMS and MMS are convenient and inexpensive means of communication. You can send a text message to other people via SMS service. MMS allows you to send messages by including multimedia content such as pictures, audio files, video files, and so on.


You can use the messaging function on your phone to send an SMS and MMS message to other mobile phones or any other equipment that can receive SMS and MMS.



The MMS feature is available only if you subscribe to it from your network operator.

To access a messages function, from **Home** screen, select **Menu > Messaging** ().

Sending SMS/MMS Messages

1. To create a SMS message, from **Home** screen, select **Menu > Messaging** ().
2. Select **Options key > New message**.
3. Enter the contact name or the phone number in the **To** field.
If you enter an alphabet, all the contact names starting with that alphabet is displayed as a list. Scroll down to select the contact.
4. Enter the message and select **Options key > Send**.

When you add a multimedia attachment, the message is automatically converted to a multimedia message. MMS charges are applied based on the operator.

5. You can add any multimedia attachment up to

the size of ≤ 1 MB. To add an attachment, select **Options key > Attach**. Select the attachment type from the options in the next step.


6. Browse **My files** or specific folder and select the multimedia file to be attached.

Attachment Type	Description
Pictures	Attach a photo from the phone memory or SD card.
Capture picture	Take a new photo using the mobile camera and attach.
Videos	Attach a video from the phone memory or SD card.
Capture video	Take a new video using the mobile camera and attach.
Audio	Attach an audio file from the phone memory or SD card.
Record audio	Record a new audio file using the voice recorder and attach.
VCard	Attach a contact.
VCalendar	Attach a calendar event.
Slideshow	Create new slideshow or edit the existing slides and attach.

Managing Message Settings

You can customize the way you want to view and filter the messages. You can also set the default messaging application.

To view and modify the message settings,


 
1. From **Home** screen, select **Menu > Messaging** ().
2. Select **Options key > Settings**.
3. View and edit the following settings:

Setting	Description
STORAGE	
Delete Old messages	Deletes the old messages as and when the limit is reached.
Text message limit	10000 messages per conversation is the text message limit.
Multimedia message limit	1000 messages per conversation is the multimedia message limit.
TEXT (SMS) MESSAGES	
Delivery reports	Request a delivery report for each message you send.
Manage SIM Card messages	Manage messages stored on your SIM card.
MULTIMEDIA (MMS) Messages	
Delivery reports	Request a delivery report for each message you send.
Read Reports	Request a read report for each message you send.



Auto-retrieve	Automatically retrieve the messages.
Roaming auto-retrieve	Automatically retrieve the messages while roaming.
Creation mode	<p>Sets the MMS message creation mode to one of the following:</p> <ul style="list-style-type: none"> • Restricted - the phone will only create and send messages with content belonging to the Core MM Content Domain. • Warning - the phone guides you to create and submit only messages with content belonging to the Core MM Content Domain. This guidance is implemented through warning dialog. • Free - you can add any content to the message.
NOTIFICATIONS	
Notification	Enable notification alert for incoming messages.
Sound	Enable a ring tone for incoming messages.
Vibrate	Enable vibrate alert for incoming messages.
Pop-up Alert	Enable to view received message as a pop-up.

Deleting Messages


To delete a single message thread:

1. From **Home** screen, select **Messaging** ().
2. Select **Options key > Delete selected thread** or select a thread and press **Clear** key ().
3. The message thread will be deleted after confirmation.

To delete the selected conversation:

1. From **Home** screen, select **Messaging** () > select a **Message Thread** > press **OK**.
2. Select a conversation > select **Options key > Delete** or press **Clear** key ().
3. The message conversation will be deleted after confirmation.

To delete all the message threads:

1. From **Home** screen, select **Messaging** ().
2. Select **Options key > Select > Select Multiple threads > Option key > Delete All threads**. All the message threads are deleted after confirmation.

Emergency Alerts

You receive active alerts and emergency alerts from the service provider.

You can view and modify the language and dictionary setting using the **Phone Settings**.

Enter and Edit Text

You can use the phone keypad to enter the text quickly and easily. Type faster and more accurately on your device with Keypad's word recognition and next-word predictions.

The key features are:

- Personalized suggestions, corrections, and completions.
- Emoji entry point and layouts.

Phone Dictionaries

To manage phone dictionaries:

1. From **Home** screen, select **Menu > Settings** (⌘).
2. Select **Language & Input** located under **Personal settings**.

Personal Dictionary

 
You can add your own words to your personal dictionary so that your device remembers them. To add a word or phrase, including an optional shortcut:

1. Select **Language & Input** located under **Personal settings**.
2. Select **FlexT9 Text Input** located under **Keyboard & input methods**.
3. Select **Personal dictionary > Options key > Add**.
4. Add a required word and respective shortcut which is optional.


Launching PTT+ Application

Your Sonim phone comes with pre-loaded **PTT+** application.

1. Select the **PTT** button on the side of the XP5 phone or select the **PTT** icon on the panel of the **Home** screen to launch the **PTT+** application.

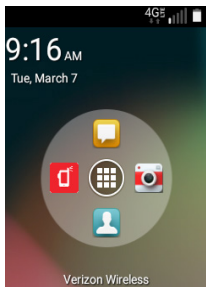


 2. On the confirmation screen, select **OK** to activate the **PTT+** application.

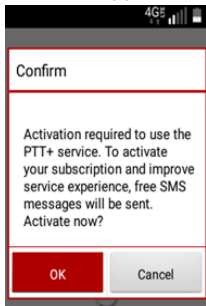

Activation process is initiated and the application will sync with the PTT server for the required information.

 3. Familiarize yourself with the in-application tutorial to use the **PTT+** service.

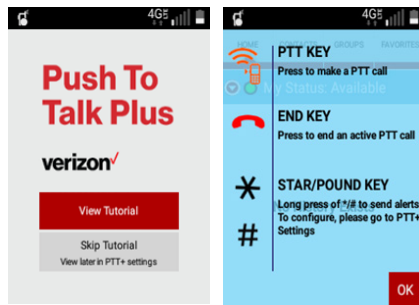

PTT+ activation over Wi-Fi is **NOT** supported. User needs to turn **OFF** Wi-Fi during activation. Once the activation is successful, Wi-Fi can be turned **ON** and PTT+ can be used over Wi-Fi connection.

 
PTT Overview

From the handset's Home screen/Application screen, select the PTT icon and launch the application.


The application launches and displays the following tabs:




Home: Displays your PTT conversation history including calls and Instant Personal Alert.

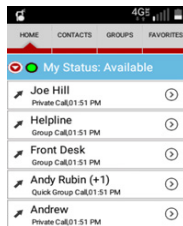


 
Contacts: Displays your PTT contacts and allows you to start a PTT call and send an Instant Personal Alert.

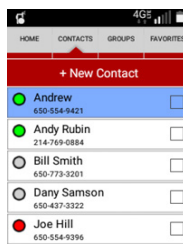

 Groups: Displays your PTT Groups and allows you to create/edit a group or initiate a Group call.

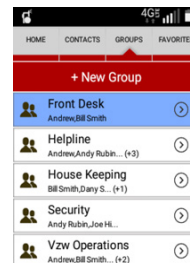

  
Favorites: Displays your favorite contacts and groups. You can easily start a PTT call or send an Instant Personal Alert to your favorites from this tab.

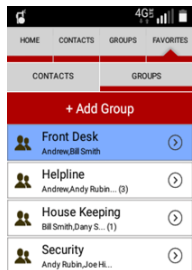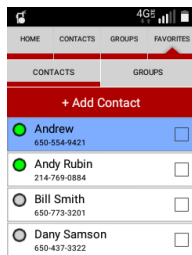


PTT Presence Status

- Once PTT+ is activated or logged in on your phone, your **PTT Presence** status is displayed as **Available** (🟢).

 Your presence is displayed on the notification bar.

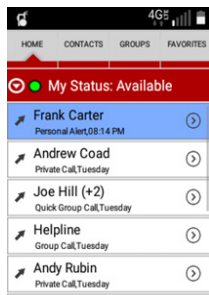


 - You can change your presence status to **Do Not Disturb** (🔴) to block the PTT calls for a certain period of time.

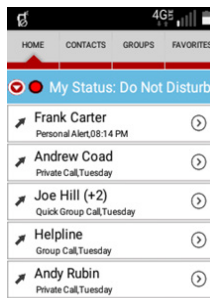



- To change your presence status, select **My Status**. You are prompted to choose your status from the following options:

 
- Available
- Do Not Disturb

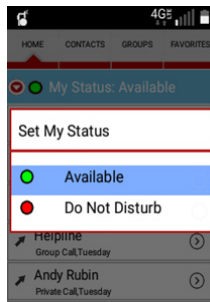

 - You can initiate all types of PTT calls and receive alerts even when your presence status is set to **DND**.
- Your presence status can also be changed by invoking menu option in **Home** tab by selecting **My Presence** option from the list and following the same steps.

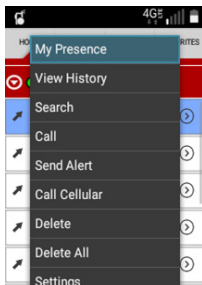

 - Your presence is displayed as **Offline** () when PTT+ is logged out or not in service.

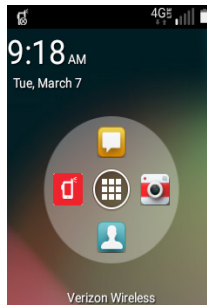


Adding PTT Contacts

The PTT contacts directory is different from the phone's native contacts directory. There are three ways to add PTT contacts:

- **Add from Native Phonebook:** Select **Native Phone Book** from **+ New Contact**. It opens phone's native contact list, and the user can select the contact from contact list and can modify the selected contact or save the same contact as it is.
- **Add by Manual Input:** Select **Manual Input** from **+ New Contact**. It opens a screen to add the contacts. User can create contact manually by typing phone number, name, set favorite and save.
- Contacts can be pushed to the phone by the corporate administrator. The contacts pushed by the corporate administrator (Corporate Contacts) cannot be modified or deleted from the handset.


On selecting **Add New Contact**, you are prompted to add contact in two ways:

 - Native Phone Book
- Manual Input

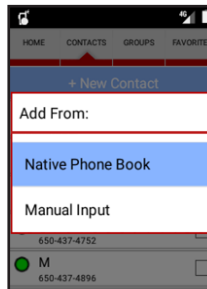


Adding Contacts from Native Phonebook

 
1. On selecting **Native phone Book**, the native phonebook contacts screen is displayed.
2. You can select the a particular contact from the Native contact list.

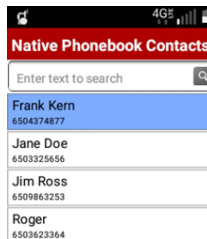


 
- You can edit the name of the contact if required and It can also be set as favorite before saving the contact.
- To modify the contact imported from the native book manually, edit the contact's name and phone number, then select **Save**.

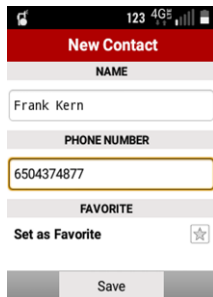

 - The contact can also be added as favorite before saving the contact.

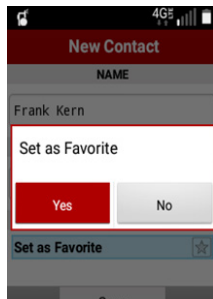


  - Once the contact is saved, it is added to the **PTT** contact list.

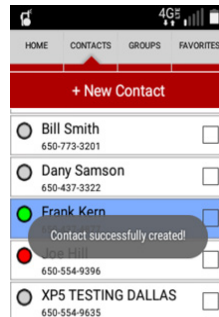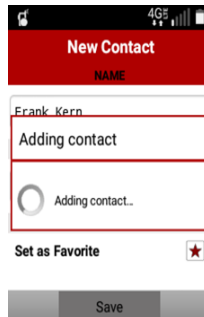


Adding PTT Contacts Manually

 
- On selecting **Manual Input**, you can create the contact manually by entering the phone number (MDN) and the **Name**.

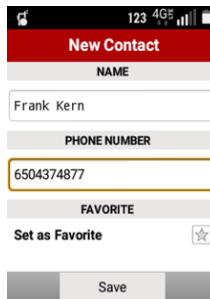

 2. The contact can also be added as favorite before saving the contact.

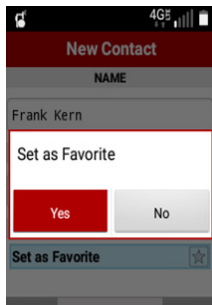

 3. Once saved, the contact is successfully added to the PTT contact list.

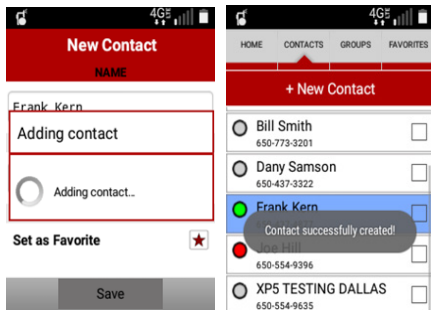


Adding PTT Contacts by Administrator

- The third way is to request the corporate administrator to add the required PTT contacts into your contact list.
- The contacts pushed by the corporate administrator (Corporate contacts) **cannot** be modified or deleted from the phone by user. **Contact Management** is controlled by corporate administrator.

Hide Offline Contacts:

 You can hide contacts that are **Offline** in your contact. Select **Hide Offline Contacts** option from the menu.

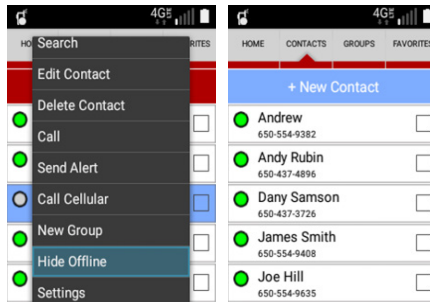

The offline contact is hidden.

 
Adding PTT Groups

Groups can be added by creating manually or can be pushed to the phone by the corporate administrator. The groups pushed by the corporate administrator (Corporate groups) cannot be modified or deleted from the handset.

1. To add a new group from the phone, navigate to the **Groups** tab and select **+ New Group** to add a new group. OR


Select **New Group** option by invoking the menu.

2. In the **New Group Details** screen, enter the group name.

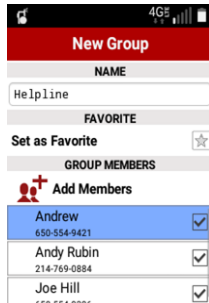


You can assign a group as a favorite by selecting **Set as favorite**.

 3. To add the group member, select **Add Members** option, you are navigated to **Select Group Members** screen. Select the contact to be added as a group member.

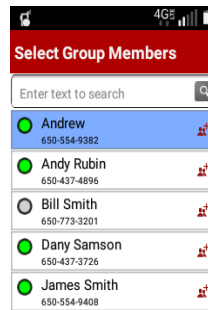

 4. Return to the **New Group Details** screen by pressing the **Back** option.
5. Invoke menu option and select **Save** option to save the group.

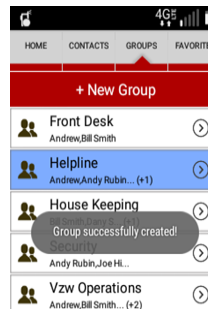


You can add any desired contact or group from your contact list or group list as your favorite contact or group.


Adding Favorite Contact

To add Favorite Contacts from the Favorites tab

 
1. Go to the favorites contacts tab and Select **+Add Contact** option or Invoke menu and select **New Favorite** option.

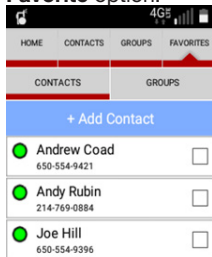

 
2. **Select Favorite Contacts** screen is displayed. Select the contact to be added as a favorite from the list. The contact is added as a favorite.

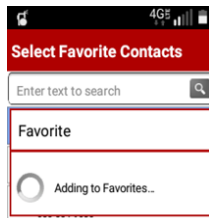

 3. Return to the Favorites tab by pressing the **Back** key. The new favorite contact is displayed in the Favorite contact list.

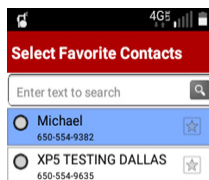


Favorite successfully saved!

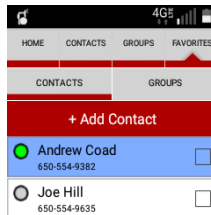 


Adding Favorite Group

1. Go to the favorites group tab and select **+Add Group** option **OR**


 
Invoke menu and select **New Favorite** option.

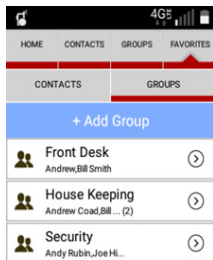

 2. **Select Favorite Groups** screen is displayed. Select the group to be added as favorites from the list. The group will be added as favorites.

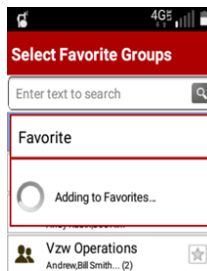


  3. Return to the favorites tab by pressing the **Back** key. The new favorite group is displayed in the favorite group list.

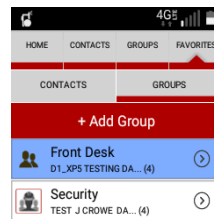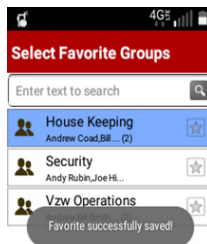

Initiating PTT Private Call

 1. Go to the **Contacts** tab and select the online contact from the list.

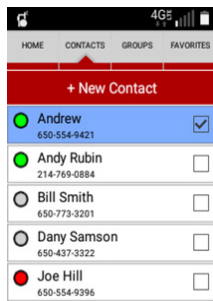

2. Press and hold the **PTT** hard key on the phone **OR** select **Call** option from the menu to initiate the PTT call.

The PTT private call to the selected contact will be initiated.

3. Start speaking after you hear the chirp tone. The mic icon on the screen now turns **Red** indicating that you are speaking. When you finish speaking, release the **PTT** button.



 
4. Release the PTT key to receive a media from the terminator side. The mic icon on the screen now turns into **Grey** indicating that the other person is speaking.




Unless you release the floor, the other person cannot start speaking.



5. When no one is speaking in the call, the mic icon will turn **Grey** with the indication **No one is speaking**.

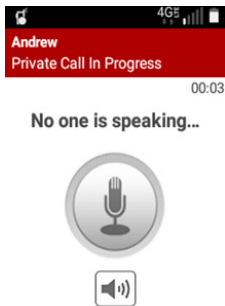


 6. Press the **End call** key (Red Key) to end the call. The call gets ended and **Call ended** message is displayed.

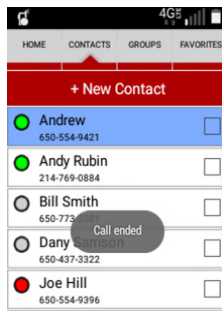

Initiating PTT Group Call

 1. Go to the **Groups** tab and select the group from the list you intend to make a call.

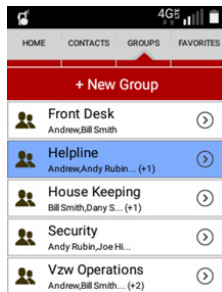

2. Press and hold the PTT hard key on the phone
OR

Highlight the **Group** and press **Center** key to invoke menu option. Select **Call** from the menu.

OR

Select **Call** option from menu list to initiate the call.

PTT group call will be initiated with all the available members of that group.

 
3. Start speaking after you hear the chirp tone. The mic icon on the screen now turns **Red** indicating that you are speaking.



4. To let the other members in the call speak, release the PTT key. The mic icon on the screen now turns **Grey** indicating that the other person is speaking.




5. When no one is speaking in the call, the mic icon will turn **Grey** with indication **No one is speaking**.

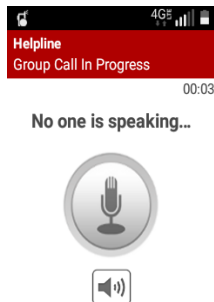


Initiating PTT Quick Group Call

PTT quick group call gives you the option to initiate an ad-hoc call to members from the contact list. The best part is that you can initiate group calls to different set of users each time.

 1. Go to the **Contacts** tab and select the contacts from the list to whom you intend to initiate a call.

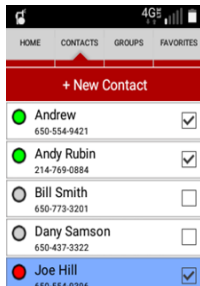

 2. Press and hold the PTT hard key on the phone **OR** Select **Call** option from menu list to initiate the call.

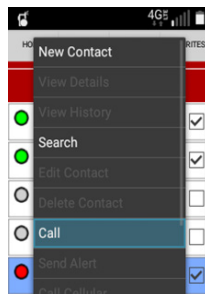

PTT Quick group call will be initiated with all the available members of that group.

3. Start speaking after you hear the chirp tone. The mic icon on the screen now turns **Red** indicating that you are speaking. 58



 
4. To let the other members in the call speak, release the PTT key. The mic icon on the screen now turns **Grey** indicating that the other person is speaking.



5. When no one is speaking in the call, the mic icon will turn grey with indication **No one is speaking**.



6. To end the Quick group call, select **End key** or select **End Call** option from menu list.

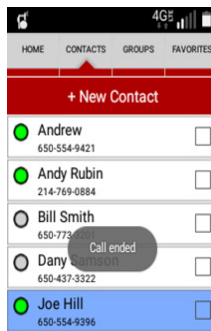


Instant Personal Alert

Instant Personal Alert (IPA) can be sent to any online contact from the contact list.


To send an Alert:

 1. Go to the **Contacts** tab and select the contact name to which you intend to send the alert.
2. Select **Send Alert** from the menu list.

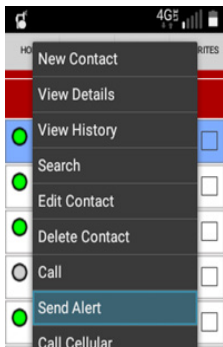


Alert will be sent to the selected contact.

 3. The personal alert can also be sent using * or # keys.
 - On PTT+ Home screen, select **Options** key.
 - Select **Settings > Actions > Configure Alert** options to choose either * or # to send the personal alerts.

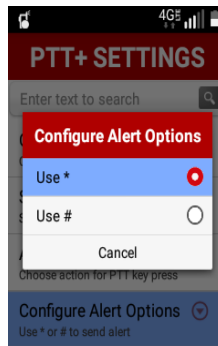

 4. The personal alert is sent to the selected contact by pressing * or #.

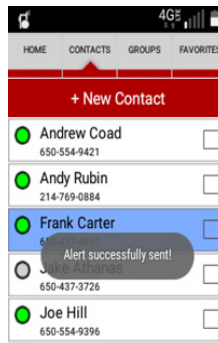



- Personal Alerts cannot be sent to multiple contacts at a time or to groups.
- Alerts can also be sent from the conversation history and the favorite contact list tab in the same way.

Receiving Personal Alert

- When a personal alert is received, the user is notified with the sender's details such as **Name**, **Date** and **Time**.
- Select the **Call** button or press PTT hard key to initiate PTT call to the sender.
- On the receiving end, the IPA notification alert will be displayed as shown below.



650-437-4877

Instant Personal Alert

Frank Carter sent you an Instant Personal Alert.

Dec 14, 2016

08:17 PM

Call

Cancel

Missed Call Alert

- If you receive an PTT call while you are on a regular phone call or another PTT call, **Missed Call Alert** is received.
- Select the **Call** button or press PTT hard key to call back the sender.



650-437-4877

Missed Call Alert

You received a missed private call from Frank Carter

Dec 14, 2016

 
08:17 PM

Call


Cancel

Editing PTT Contact




1. Select the **Contact** from the list to be edited.

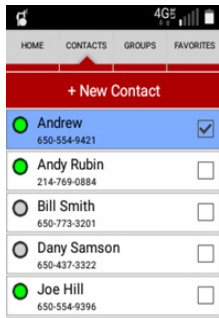

 2. From the menu option, select **Edit Contact**.

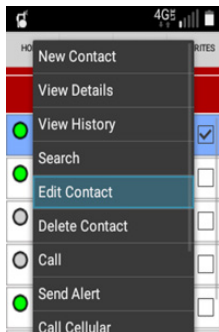

   
3. The **Edit Contact** details screen is displayed. Edit the contact name and favorite setting if required and press **Save**.

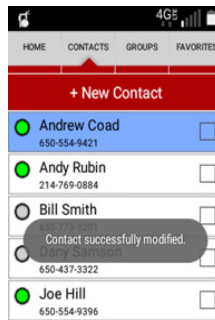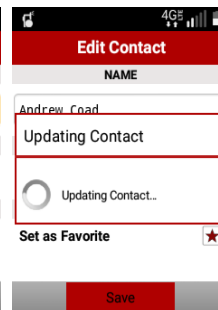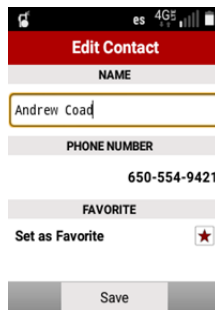


The contact modifications are updated.

Deleting PTT Contact


 
1. Select a **Contact** from the list.

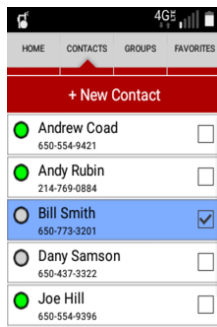

 
2. Select **Delete Contact** from the menu list.

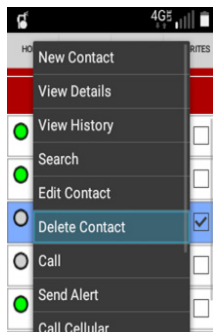

  3. A confirmation message is displayed. Select **Yes** to delete the selected contact.

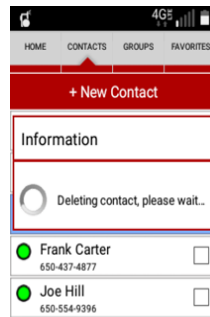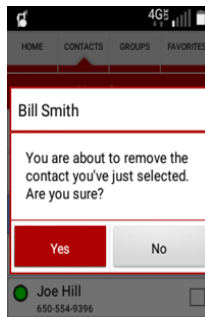


 The selected contact is deleted from the contact list.

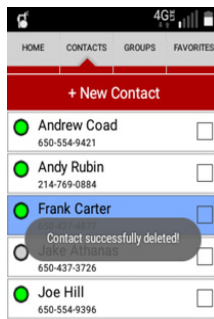


Editing PTT Group

 
1. Select a group from the list and select **Edit Group** from the menu list.

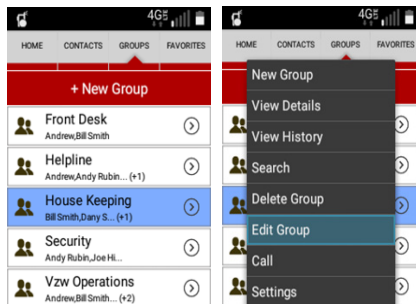

 2. The **Edit Group** screen is displayed.

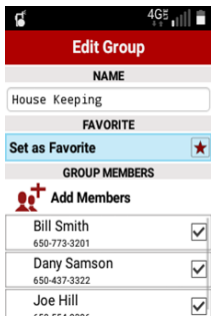

 
Modify the **G p name**, **Group Members** (Add/ Remove the Group Member) and **Favorites** settings.

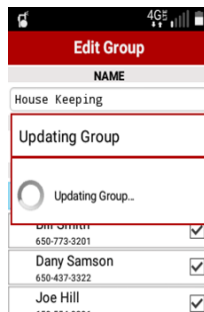


The group details are modified.

Deleting PTT Group

 
1. Select the required PTT group from the group list. Select **Delete Group** option from the menu list.

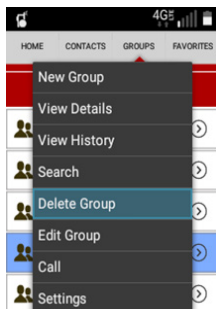

 
2. A confirmation message is displayed. Select **Yes** to delete the group.

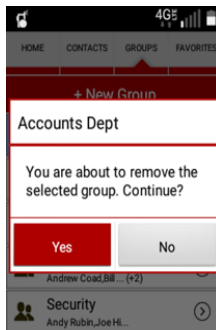

 3. A pop-up message is displayed confirming that the selected group is getting deleted.

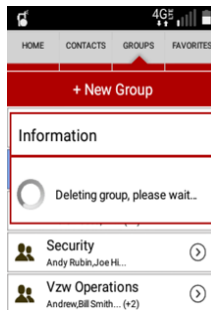


 4. The selected group is deleted and a message is displayed **Group successfully deleted.**

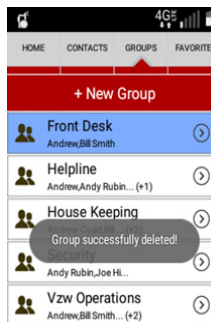

Supervisor Privilege

 - In a PTT group, if you are provisioned as a supervisory user, you have the privilege to barge into an ongoing call and take the floor even if the other participant is speaking.
- If you are a supervisor of a particular group, then a supervisory privilege is indicated by an icon beside the group name in the group list screen.

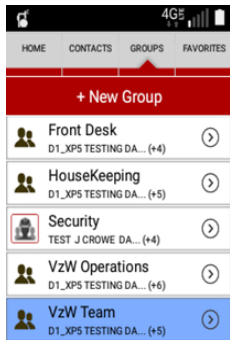

- The supervisor icon is also displayed in the group call screen.

 



IPA and Missed Call Pending Notification

- Only the last (most recent) **Instant Personal Alert (IPA)** notification pop-up is displayed per originator but all received IPAs are included in the conversation history.

In other words, if you have received multiple IPAs from the same originator, as each IPA is received, only the newest IPA notification pop-up from that originator is displayed on your phone.


- You can initiate PTT call and GSM call by acting upon the received IPA and missed call alerts.

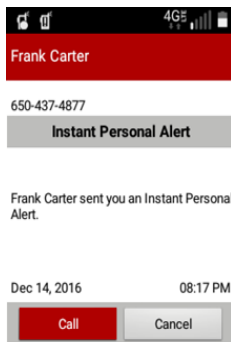

- A pending notification () would be displayed on the notification bar until all the received IPAs and missed call alerts are attended by the user.

Manual Dial for PTT Call

 - You can manually dial a MDN from the phone native dialer screen and initiate PTT call by pressing the PTT key.

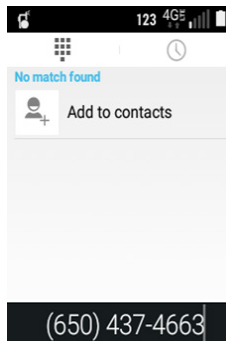

PTT Settings

 
You can customize the application through the Settings tab. The following are the most commonly used settings options.

Select **Menu > Settings** to access the settings.

Alerts and Sounds:


- **Vibrate & Audible Alert:**
 - **Vibrate Alert:** If you disable this option from the PTT settings, phone will not vibrate for an incoming alert (IPA or MCA).
 - **Audible Alert:** If you disable this option from the PTT settings, phone will not play the alert tone for an incoming alert (IPA or MCA).
 - By default, both of these options are enabled.
- **Alert Repeat & Alert Frequency:**
 - Alert Repeat will give you an option to set your alert tone to play once, repeatedly or continuously
 - If it is set to:
 - **Once** - The alert tone is played only once when the alert is received.
 - **Repeat** - The alert tone is played every 20 seconds for the next 10 minutes.
 - **Continuous** - The alert tone is played at a periodic interval (set by you) continuously until you acknowledge the alert
 - You will have an option **Alert frequency** under PTT settings to shorten the duration of alert reminders.

- You can choose between one of the 4 timers i.e. 5 sec, 10 sec, 15 sec or 20 sec (default).

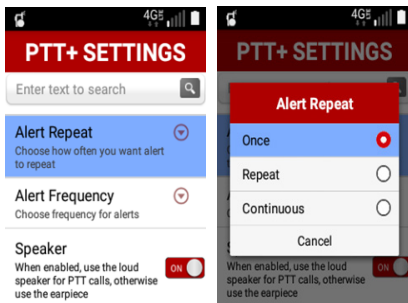

- Alert frequency is applicable only if the **Alert Repeat** is set to **Repeat** or **Continuous**.

 For eg: On setting the alert frequency as 10 seconds, the consecutive alert tones will be played with a time difference of 10 seconds.

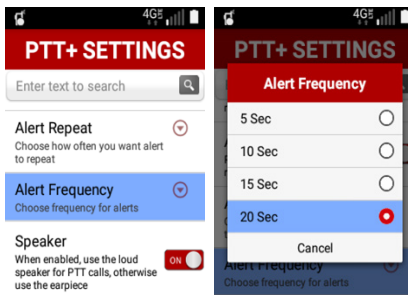


- **Speaker:**
 - Speaker option is enabled by default, the PTT media is received through the phone loudspeaker when this option is enabled.
 - Speaker option can be disabled if you want to receive the PTT media through the earpiece.
- **Vibrate Incoming Call:**
 - The option **Vibrate Incoming Call** under PTT settings to set the phone in vibrate mode while receiving an incoming PTT call.
 - When enabled, the handset will vibrate once for 2 seconds when PTT call is received.
 - By default this feature is disabled.
- **PTT Tones:**
 - PTT tone setting gives you an option to choose **PTT Alert Tones** and **PTT In-call Tones**.
 - The selected tone will be played for an **Incoming Call Alert**, **IPA**, **MCA** and all **In-call tones**.

Notification Control:


- **Instant Personal Alert:**
 - This setting gives you the option to enable or disable the IPA notification alert being displayed on your phone.
 - On disabling this setting, the notification alert message will not be displayed when you receive an IPA.
 - By default this setting is enabled.
- **Missed Call Alert:**
 - This setting gives you the option to enable or disable the MCA notification alert being displayed on your phone.
 - On disabling this setting, the notification alert message will not be displayed if you miss an incoming PTT call.
 - By default this setting is enabled
- **Call Reconnect Tone:**
 - When the user goes out of network **or** comes back into network while in an ongoing PTT call, a **Call Reconnect Tone** is played to indicate the network reconnection.
 - You have an option to enable or disable this tone from the PTT settings.
 - This option will be enabled by default.

 - **Volume:**
 - You will have an option to set the PTT media volume using this setting.
 - By default it will be set to level 4.

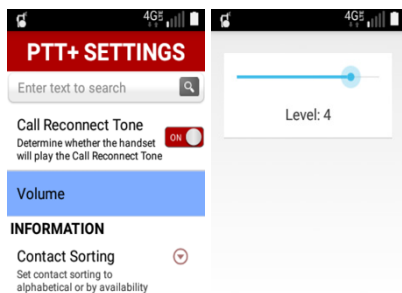


Information:

 - **Contact sorting:**
 - PTT contacts can be sorted alphabetically or based on their availability.
 - By default, PTT contacts are sorted alphabetically.

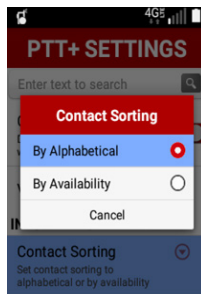

 - **Display Name:**
 - This option specify your PTT display name.
 - This can be changed by the corporate administrator.
- **My PTT Number:**
 - Specifies your PTT MDN.
 - This is the MDN that will be provisioned in the server to get you the PTT subscription.

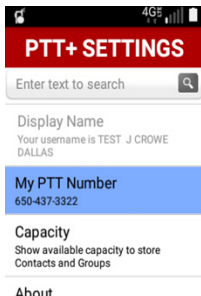

- **Capacity:**

- Displays available capacity to store Contacts and Groups.

- **About:**

 
- Displays information about PTT+ applications.

- **Show Tutorial:**


- Displays the **Tutorial** screen which explains the application basics.

Actions:


- **One-Touch PTT:**

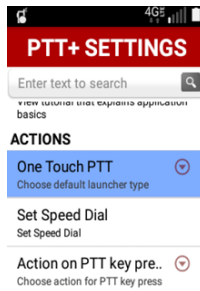


- One Touch PTT key will allow you to set the default tab when the PTT key is pressed outside of PTT+ application.
- This will reduce the number of key strokes required to access key contacts/groups.
- One Touch options can be set from PTT setting and functionality of each option are mentioned below:
 - **Home** - PTT+ application is launched with the **Home** tab when the PTT key is pressed and when user is not in any of the PTT+ application screen.

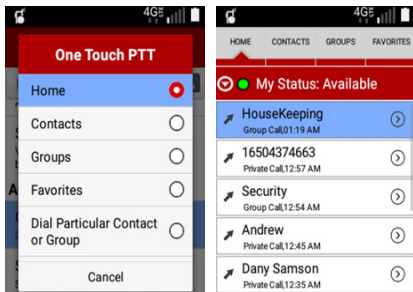 

 
- **Contacts:** PTT+ application is launched with the **Contacts** tab when the PTT key is pressed, when the user is not in any of the PTT+ application screen.

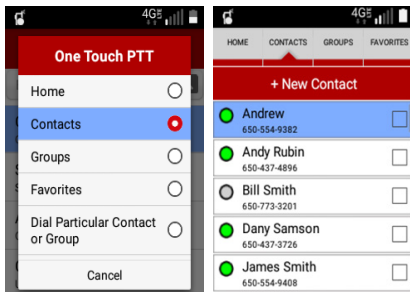

 
- **Group:** PTT+ application is launched with the **Groups** tab when the PTT key is pressed, when the user is not in any of the PTT+ application screen.

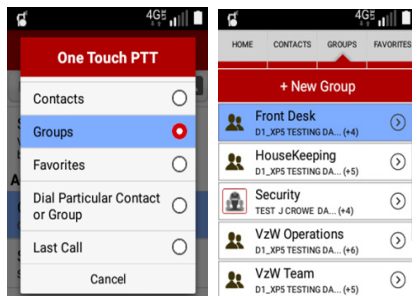

 
- **Favorite** - PTT+ application is launched with the **Favorite** tab when the PTT key is pressed, when the user is not in any of the PTT+ application screen.

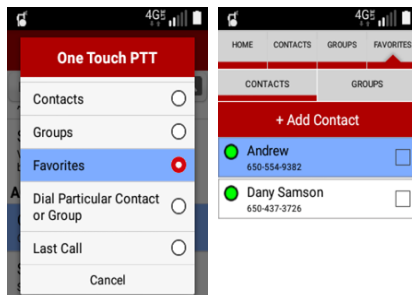


 
- **Dial a particular contact or group** – PTT call to the assigned **Contact** or **Group** is initiated directly when the PTT key is pressed, when the user is not in any of the PTT+ application screen.

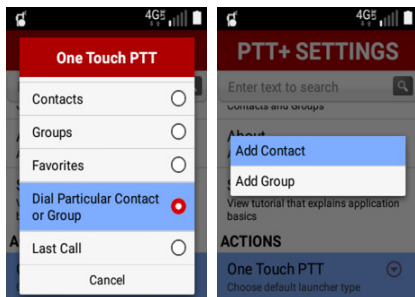

 - **Last Call** - PTT call to the recent entry available in the conversation history screen will be initiated when the PTT key is pressed, when the user is not in any of the PTT+ application screen.

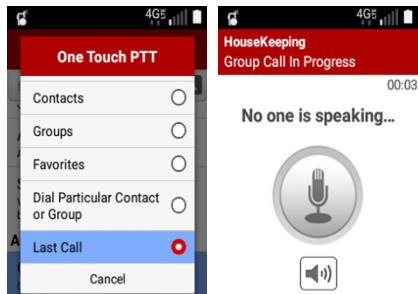


  - **Speed Dial:**
 - With the PTT speed dial option, you can assign a contact or a group for each key in the native dialer app.
 - After assigning the contact or group to the digit, by selecting that digit in the native dialer app and pressing the PTT key, call is initiated to that contact or group.
 - Speed dial can be set from the PTT settings screen.

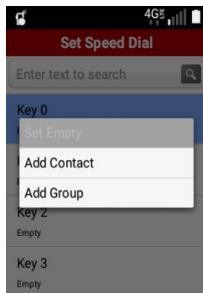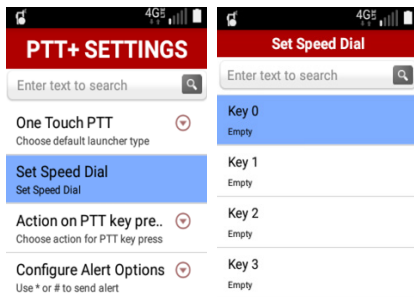

• Action on PTT Key press:

 - **Bypass the Lock Screen:** If this option is selected, pressing the PTT key will bypass the lock and will allow PTT functionality. On enabling this feature, the user will be able to achieve dial a particular contact/group and last call options via One-Touch PTT while the device is locked.
- **Wake Up the Screen:** If this option is selected, pressing the PTT key will wake up the screen with lock screen.

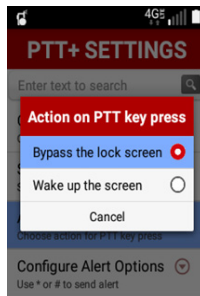


• Configure Alert Options:

- Use * or # key to send the personal alerts.
- Alert sending key can be configured from settings.

• Wi-Fi:

- When this option is enabled, PTT+ application will work over Wi-Fi.

 - **Use Bluetooth for PTT Calls:**
 - When this option is enabled, PTT audio during the call including the floor tones are received through the Bluetooth accessory connected to the handset.
 - By default this option is enabled.
- **Receive call in background:**
 - If you enable this option, an incoming PTT call is accepted in the background, while you are on any screen other than PTT+ application screen.
 - You can continue to speak normally by pressing the PTT key and also receive the PTT media from the other user while the PTT call screen still remains the background.
 - To bring the PTT call screen to the foreground, you need to select the PTT icon from the main menu.
- **Enable Extra Volume:**
 - Enables to set extra volume to have a more loudness.
- **Hide Greyed Out Menu Options:**
 - When this option is enabled, all the greyed out menu options are hidden.
 - This setting is just for a more user friendly access of the application. By default the option will be disabled.

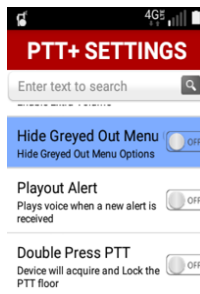

- **Play out Alert:**
 - When this option is enabled, there is a voice play out once after the alert tone indicating that an alert is received.
 - This option is not affected by the **Alert Repeat** setting.
 - By default this option is disabled.
- **Double Press PTT:**
 - This setting is provided to ease the PTT hard key press for longer conversations.
 - When the user double presses the PTT key in a call, the floor gets locked and the user can continue to speak even after releasing the finger from the key.
 - On the next press of the PTT key, the floor gets released and the other user can start speaking.
 - By default, this option is disabled.



- **Auto Start:**

- Auto start is enabled by default.
- Every time the phone powers on, PTT will auto login in the background (unless it is manually logged out by you).
- If you do not want PTT to auto login after phone restart, disable this option.

- **Restore Default Settings:**

 
- This setting can be used to reset all the PTT setting options to its default values.
- You will be prompted to confirm on a pop-up message before restoring the settings.

- **Logout:**

- This setting can be used to manually logout from PTT+ application.
- You will be prompted to confirm on a pop-up message before logout.


PTT call from Native Phonebook

- PTT calls and alerts can also be initiated from the native phonebook.
- Selecting any of the PTT contacts in the phonebook shall bring the view details screen.
- You can initiate the call or send alert by selecting the appropriate option here.

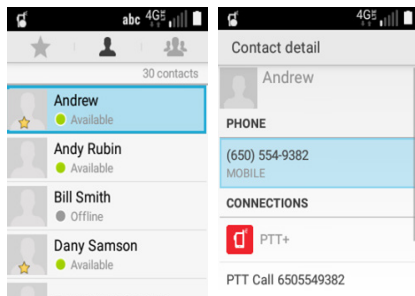


PTT Private Call from Native Call History

 - PTT private calls can also be initiated from the native call history.
- Highlight the intended PTT contact history and press the PTT key to initiate a call.

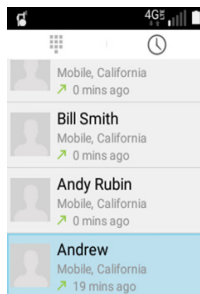


Manual Logout

 
1. In the PTT Settings screen select **Logout** option.

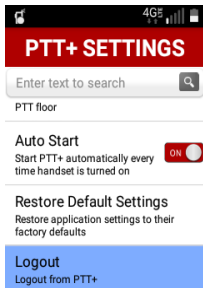

 2. Select **Yes** on the confirmation pop-up screen.

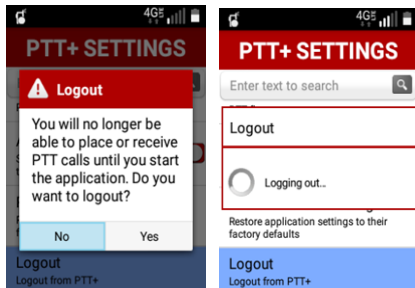

 
You are manually logged out from PTT and your presence status is set to **Offline**.

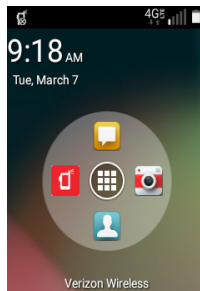

- Offline status will be updated in other user's contact list.
- You will not be able to receive PTT call or IPA or perform any other PTT operations until you login back to PTT+ application.


Re-logging to PTT+ Application

 1. Press the PTT key on the phone **OR** select the PTT icon on the main menu and a confirmation pop-up screen is displayed.
2. Select **Yes** on the login confirmation pop-up.

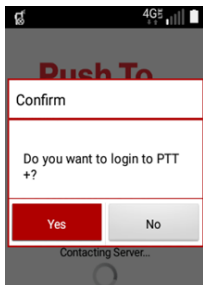



 
You will be logged into PTT+ application.

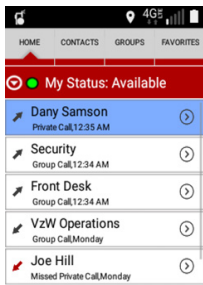3. Your self-presence will be changed to **Available** and you will appear online to others.

 
 


PTT Calls can be initiated and received successfully on logging into application.

Sonim XP5 device does not support Playstore. The **App Updates** is a standalone application which is capable to update itself and other applications like PTT.


1. From the **Home** screen, select **Menu** () key > **OK** to view all the applications.
2. From **Applications** () menu, select **App Updates** ().
3. Select **Check for Updates** to check for the updates, if available, it downloads and install the updates.


The system starts checking for the updates and download the updates.

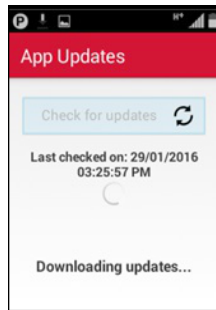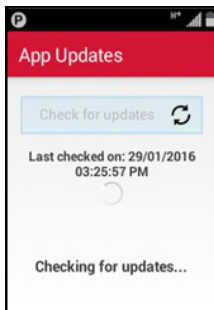


Settings

To modify a network,

 
1. From **App Updates** homescreen, select the **Options** () key.
2. Select **Settings** from the **Options** menu and press **OK**.

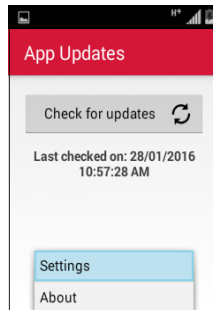

 3. The following settings are displayed:
 - **Check for updates on device start up:** If this option is selected, **Check for updates** will happen on device power **ON**.
 - **Check for updates over Mobile Data:** If this option is selected, **Check for updates** will use mobile data if Wi-Fi is unavailable.

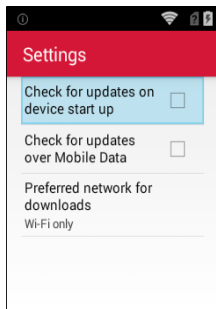


 - **Preferred network for downloads:** If this option is selected, two options are displayed:
 - **Wi-Fi and Mobile Data:** When this option is selected, if Wi-Fi is not available, download will process using mobile data.
 - **Wi-Fi only:** When this option is selected, only Wi-Fi is used for the download process.

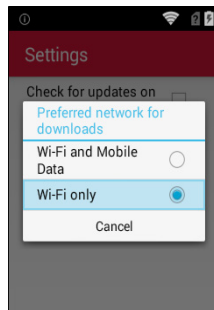


When mobile data is not available, a message will pop-up to check the preferred network type.

 81

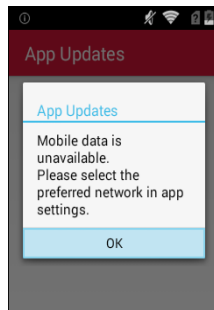

When Must Update By field received from server expired,

 1. A confirmation dialog is displayed. Upon the confirmation, download and installation process starts.

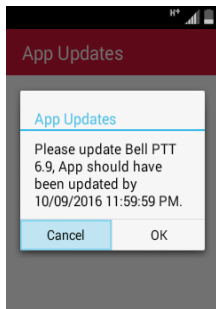

2. When you do not acknowledge and press home key, the next CIC or manual checking for the updates bring the dialog to the foreground.
3. When a **Silent** mode is configured from the server, no dialog is displayed and the installation runs in the background.

Sonim Setup Wizard

This is an application that can be used to provision the phone in conjunction with a web based utility at www.sonimcloud.com.

Introduction

Sonim's device provisioning solution consists of a Web based utility and SonimSetupWizard application to provision a set of devices added under a specific corporate account.

Using the web based utility, you can:

- Setup provisioning resources such as Wi-Fi, VPN, Applications, Sounds, Admin packages, Bookmarks and Contacts.
- Create a provisioning profile for a specific device group with required resources
- Generate a QR code for a specific profile and provision the devices.

Provisioning the Device Using QR Code

You can provision a device using the Provisioning QR code generated for a specific provisioning profile.

 
1. From Home screen, select **Menu > Applications** () > **Sonim Setup Wizard** ().

SonimSetupWizard application comes pre-installed in your device.


2. You can either scan the QR code directly from the Website or from a printout.

If you want to print the QR code, the print size of the QR code image should at least be 10X10 cm.

3. Tap on **Scan** to scan the QR code.

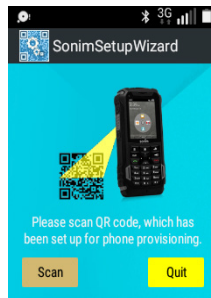

 4. The device will be provisioned using the provisioning information available in the QR code.

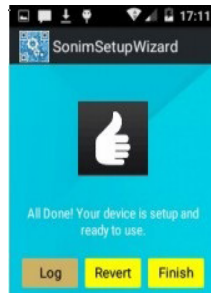

Accessing Sonim Web Provisioning


To access Sonim Web provisioning, you must have valid login credentials to access Sonim cloud (<http://www.sonimcloud.com>).

In case you do not have an account, create a user account in Sonim Cloud and get it authorized by Sonim.

For more information, refer to the Provisioning user guide on website www.sonimcloud.com.

Camera


The Sonim XP5 has a back camera with 5MP fixed focus for taking pictures. The pictures are saved in the **Gallery** (). You can access the **Gallery** from the **Menu** screen.

- Select **Camera mode** () , to set one of the following modes:
 - **Normal** - (): To shoot a picture in normal mode, select **OK** button to capture the picture. Use Left and Right navigation keys for Zoom in and Zoom out.
 - **Video** - (): Press **OK** key to **Start/Stop** a video recording. You cannot pause the recording in the middle.
- Select **Options key** to view or change camera settings such as **HDR, Exposure, Timer, Picture size, Face detection, Location tagging, White balance, Anti banding, Shutter sound, Flash firing, Audio recording, Video resolution, and Video quality.**

Calendar™

The Calendar helps you to set appointments, schedule reminders and alerts and repeat them if required. You can also view your saved tasks on a daily or weekly basis.

To access calendar:

1. Select **Calendar** icon () on the **Menu** screen.
2. To change the calendar view, choose **Month** or **Agenda** from **Options** menu.
3. Select **Options key** to view the list of the following available options:




- **New event:** New event can be added on selecting this option.
- **Today:** Access current date events.
- **Agenda:** Display list of activities for that particular day.
- **Search:** You can search for a particular event.
- **Settings:** Displays the General settings of the calendar.

From any of the calendar views,

- **Read or edit event details:** Select the event to view the details.
- **Manage events and calendar:** Select icons across the menu to search or create events, return to today, or adjust settings.

Alarm

You can set an alarm for a particular time.

1. Select **Clock** icon () located in **Menu** screen > **Tools** ().
2. Select **Alarm activation** icon () on the top of the screen.
 - To set a recurring alarm, select **Options key** > **Edit** > **Repeat**. Select the days for repeating the alarm and select **Done**.
 - Select any of the ringtone from the Alarm sound present, and select **OK**.
3. Select **Save** from option to save the changes made.

Clock



You can view the time of major cities in different time zones using this function. You also have the option to use Daylight Saving Time (DST).

- The local time in the home city is displayed in the upper half of the screen.
- Select **World clock** icon () located on the top of the screen. To view the list of cities and the current time, select **Options key > Cities**.

The world cities are listed in alphabetical order.

Calculator

The default calculator in this phone is designed to perform simple mathematical calculations. Press **Options** to perform advanced calculations.



To access the calculator, select **Tools** () > **Calculator** () located in **Menu** screen.


- To enter the numbers, select the numeric keys.
- To use mathematical operators, select the respective operation key on the keypad.
- Select = for the final results.

Sound Recorder

You can record voice memos using the sound recorder.

To access the sound recorder, select **Tools** () > **Sound recorder** () located in **Menu** screen.

- To record an audio file, select **Record** ().
- To stop the recording, select **Stop** ().

- To save the voice memo, select **Options key > Save**.
- To exit without saving, select **Options key > Discard**.
- To play the recorded file instantly select **Play** ().

Music Player

You can play music files and voice memos stored in your phone using the music application.

To play music files, select **Music** () located in **Menu** screen > **Music folder** ().

- Select **Artists** to view the music files sorted based on the artists.
- Select **Albums** to view the music files sorted based on the albums.
- Select **Songs** to view the complete list of songs stored in your phone.
- Select the required song/memo to play.
- Select **Playlists** to access the default playlists in the music folder.
- Select **Recently Added playlist** to view the music files that are recently added to the music folder..
- Select **My Recordings** playlist to access all your voice memo files.

FM Radio

You can listen to the radio through FM radio. A wired Headset should be connected to enabling FM radio.

To listen to the radio, select **FM Radio** () located in **Menu** screen > **Music folder** () .

Insert **wired Head Set > Options > Radio ON**

- Select **Auto scan** to scan all the available frequency.
- Select **Add to presets** to add the selected channel to the favorite.
- Select **Settings** to change the **FM** settings.
- Select **Sleep** to automatically off the radio after the set time.
- Select **Radio off** to stop the radio playing.
- Select **Loud speaker** to enable FM play through the speaker.
- Select **Edit preset** to edit the preset channels.
- Select **Start recording** allow the user to record current playing FM and save the file.

If user removes the wired headset during FM play, FM will be stopped.

File Explorer

You can view/edit/delete/share the files stored in the phone through **File Explorer** () .

To view the files ,select **File Explorer** () located in **Menu** screen > **Tools** () .

By default, **Internal Storage** and **SD card** options are available under **Storage**.

Select **Internal storage** and the list of default folders are displayed:

- User can create new folder using **New** option.
- User can copy/move the contents of folder using **Copy/Move** options.
- User can delete the existing folder using **Delete** option.
- User can share the folder contents via Bluetooth and message using **Share** option. 87
- User can rename the existing folder name using **Rename** option.
- User can view the properties of folder using **Properties** option.
- User can select **Exit** option for exiting from current folder.

If SD card is inserted, all the files in the SD card can be view/edit/delete/share from file explorer.

License

This wireless device, (the “Device”) contains software owned by Sonim Technologies, Inc. (“Sonim”) and its third party suppliers and licensors (collectively, the “Software”). As user of this Device, Sonim grants you a non-exclusive, non-transferable, non-assignable license to use the software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device.

You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this license for a term of the useful life of this Device. You can terminate this license by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this license, it will terminate with immediate effect or, if you are a U.S. government entity, in accordance with the **Contract Disputes Act of 1978**. Sonim and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights title and interest in and to the software. Sonim and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms. The laws of the State of Delaware shall govern the validity, construction and performance of this license, unless you are a U.S. government entity, in which case

the laws of the United States shall govern.

Comprehensive 3-Year Warranty

- Sonim provides this Comprehensive 3-Year warranty for your mobile phone (hereinafter referred to as “Product”).
- To activate the 3-year comprehensive warranty, register your phone within 30 days at www.sonimtech.com/register or use the warranty registration application.
- Should your Product need service, please contact your local Sonim Customer Service Center. The online support and country specific contact information can be found at: <http://www.sonimtech.com/index.php/support3/online-support> or e-mail to: support@sonimtech.com.

Warranty Registration Application

- You can register your phone using the Warranty Registration Application on your device.
- This application initiates automatically after first boot up and prompts to register the handset now or later.
- All the mandatory fields have to be filled, some fields such as IMEI and model number are auto populated.
- State and Zip code fields are same as Province and Postal code.
- Once all the mandatory details are submitted, an e-mail confirmation will be sent.
- If not registered, the application will remind the user to register every two days. After ten reminders the

user has to register online.

Our Warranty

Subject to the conditions of this Comprehensive 3-Year Warranty Sonim warrants this product to be free from major defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of Three (3) years.

What We Will Do

If during the guarantee period, this product fails to operate under normal use and service, due to defects in design, material or workmanship, Sonim's authorized distributors or service partners, in the country/region where you purchased the product, will repair or replace at the sole discretion of Sonim, with the same or better model in the same or better condition.

Sonim and its service partners reserve the right to charge a handling fee if a returned product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads or other information may be lost when your Sonim Product is repaired or replaced. Sonim does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss.

You should always make backup copies of all the information stored on your Sonim Product such as downloads, pictures, video's, music, calendar and contacts before handing in your Sonim Product for repair or replacement.

You should always remove SIM cards and MicroSD cards before handing in your Sonim Product for repair or replacement. Depending on local law and legislations we

will, in order to protect your data and privacy, destroy any received SIM cards and MicroSD cards.

Phone Care

Each Sonim Phone has a designated IP class for dust and water protection, according to the IEC Ingress Protection (IP) Standard 60529. This means that the phone is dust protected and can be submerged into 6.5 feet/2 m deep water for up to 30 minutes. Immersion in deeper water can damage it and must be avoided.

Sonim phones are built for heavy duty use. Its design protects against disassembly or mechanical damage when subjected to forces equal to free fall from the height of 6.5 feet/2 meters. Subjecting the phone to stronger impact and forces can damage it and must be avoided.

Conditions

1. The warranty is valid whether or not the product has been registered.
2. The warranty is valid only if the original proof of purchase issued to the original purchaser by an authorized service provider, specifying the date of purchase and serial number for this Product, is presented with the Product to be repaired or replaced. Sonim reserves the right to refuse warranty service if the device is found to be out of warranty under the conditions as set forth herein.
3. If Sonim repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent

- reconditioned units. Replaced parts or components will become the property of Sonim.
4. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse or abuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sonim device specifications and instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to software or hardware modification or adjustment, acts of God or damage resulting from liquid interacting with the product beyond what is described as acceptable in the user guide for the product. A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out - this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sonim recommends that you use only batteries and chargers approved by Sonim. Minor variations in display brightness and color may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and cannot be adjusted. Up to three defective pixels are deemed acceptable.
 5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by any person other than a Sonim-authorized person. Tampering with any of the seals on the Product will void the warranty.
 6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sonim-branded
 7. The 3-Year warranty does not cover 3rd party accessories or any 3rd party software applications, which are instead covered to the extent provided by the original vendor guarantee for these products.
 8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Accessories

Sonim accessories are warranted as follows:

Sonim Branded

- All Sonim branded accessories, in-box as well as optional, are warranted for a period of one (1) year under Sonim's 1-Year limited warranty.
- For a detailed list of Sonim branded accessories, please go to: <http://www.sonimtech.com/index.php/products/accessories>.

Battery

All device batteries both embedded and removable are warrantied for a period of one (1) year under Sonim's 1-Year limited warranty.

1-Year limited warranty

Sonim provides a limited 1-Year warranty for this accessory (hereinafter referred to as "Product"). Subject to the conditions of this limited 1-Year Warranty Sonim warrants this product to be free from major defects in design, material and workmanship at the time of its original purchase by a consumer, and for an original purchase by a consumer, and for a subsequent period of one (1) year.

Conditions:

1. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse or abuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sonim Product specifications and instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to software or hardware modification or adjustment, acts of God or damage resulting from liquid interacting with the Product beyond what is described as acceptable in the user guide for the Product.
2. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by any person other than a Sonim-authorized person. Tampering with any of the seals on the Product will void the warranty.
3. The warranty does not cover Product failures,

which have been caused by use of other peripheral devices, which are not Sonim certified and intended for use with the Product.

4. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONIM OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Billing and Customer Service

For user manual related queries, following are the contact details:

- **For voice centric products:**
 - **Email:** support@sonimtech.com
 - **Phone Number:** 888-858-9460
- **User manuals for mobile office kit capable application related contact details:**
 - **Email:** support@sonimtech.com
 - **Phone Number:** 800-256-4646
 - **Direct Number:** 800-922-0204

WARNING: Changes or modifications made to this equipment not expressly approved by Sonim Technologies, Inc. for compliance could void the user's authority to operate the equipment.

FCC Statement

- This device complies with part 15 of the FCC rules (**FCC ID: WYPL23V013AA**). Operation is subject to the following two conditions:
 - This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a

circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FOR PORTABLE DEVICE USAGE (<20cm from body/SAR)**Radiation Exposure Statement:**

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user's body or set the device to lower output power if such function is available.

- The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
- High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices. FOR MOBILE DEVICE USAGE (>20cm/low power).

FOR PORTABLE DEVICE USAGE (<20cm from body/SAR needed)

Déclaration d'exposition aux radiations

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrôlé.

3-Way Conference 39

A

Adding a contact from phone screen 36

Add new contact 33

Alarm 85

Alerts and Sounds 68

All applications icon 18

B

Battery

Battery usage 13

Broadcast messages 42

C

Calculator 86

Calendar 85

Call accept/Send key 16

Camera 85

CDMA 39

Changing wallpaper 20

Clock 85

Conference Calling 39

Contacts

D

Deleting a contact 35

Deleting call history 36

Deleting messages 42

Dialing a call 36

From People 36

Display settings

E

Editing contact details 33

Events 85

Exporting contacts to computer 34

Exporting contacts to SIM card 34

F

Frequently called list 36

H

HAC rating 10

I

Improving battery life 14

Importing contacts to phone 33

K

Keypad functions 24

L

Language settings 24

Personal dictionary 24

Speech 24

Spell checker 24

M

MMS 40

Music player 86

N

Navigation keys 23

Notification bar icons 18

P

People 33

Phonelock screen 20

Phone specifications 15

Power optimization 13

Power saving settings 25

Viewing battery life 25

Q

QR code 83

Quick Responses 38

R

Ringtones 36

S

**Safety guidelines for mobile usage
8**

SAR information 10

Searching contacts/people 34

Security settings

Sending SMS 40

**Sending SMS/MMS From People
33**

Setting up your phone 17

Sharing contact details 34

SMS 40

SMS settings 40

Sound Recorder 86

System icons 18

V

Vibrate Mode 38

Viewing Contact Details 33

VoLTE 39

W

Web Provisioning 84

X

XP5 Phone 16